




INSTALLATION INSTRUCTIONS




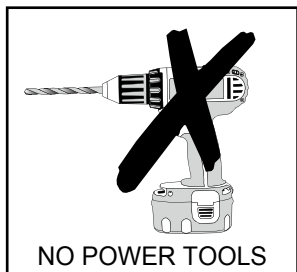


- Do not use power tools to install this product.
- No battery operated screw guns.
- The use of power tools during installation may void the product warranty.
- Do not overtighten.

MADE IN USA


INSTALLATION INSTRUCTIONS

1. Wash the hood with a mild soap and water solution, then dry thoroughly. Open the hood. Trial fit the Hood Protector centrally onto the hood. With a non-permanent marker, note and mark the positions of the four acrylic tag slots in the Hood Protector onto hood where they correspond to the rubber trim. Also note the two holes in the Hood Protector wings and where they correspond to the hood. Remove Hood Protector.
2. Remove the four previously noted rubber trim retaining plugs from the rubber trim using pliers if necessary.
3. Insert screw plugs provided into the four vacant holes.
4. Install the Hood Protector onto the hood ensuring that the Hood Protector tags fit between the hood and the rubber seal all the way along the hood edge. Ensure that the collar of the screw plugs locate into and parallel with the slots in the Hood Protector tags, as shown.

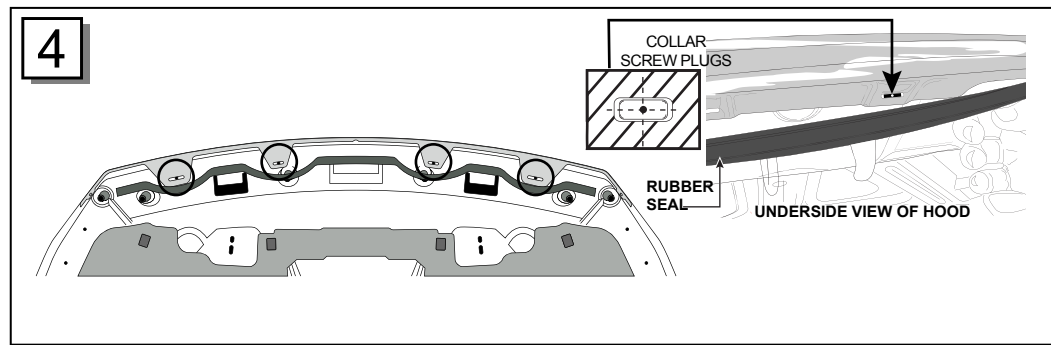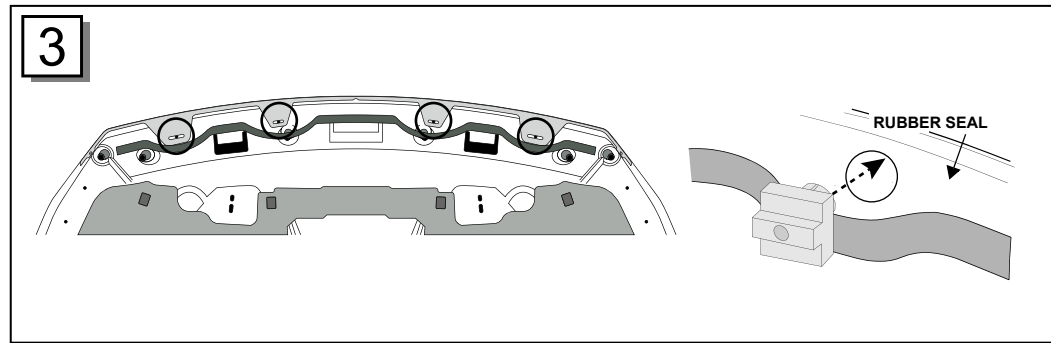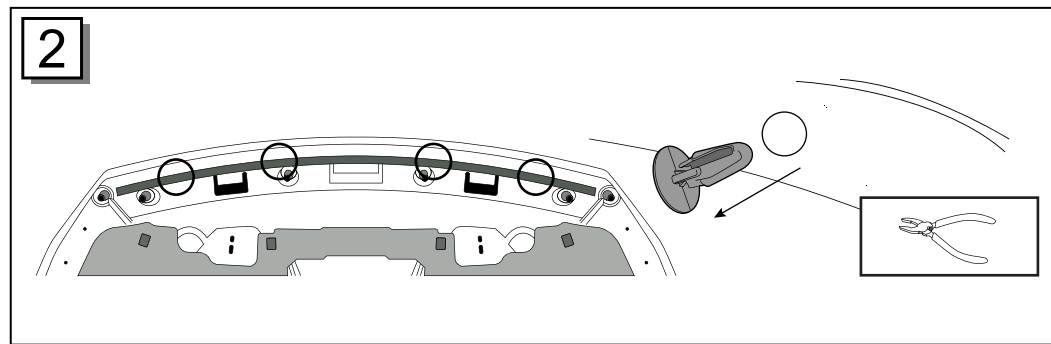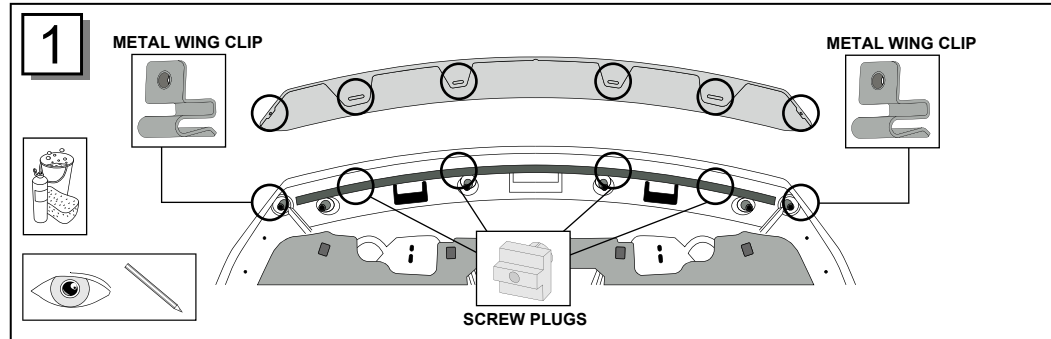



INSTALLATION INSTRUCTIONS

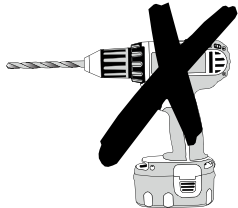

NO POWER TOOLS

- Do not use power tools to install this product.
- No battery operated screw guns.
- The use of power tools during installation may void the product warranty.
- Do not overtighten.

MADE IN USA

INSTALLATION INSTRUCTIONS

5. Insert the large screws and washers through the rubber seal of the four acrylic tag locations.
6. While maintaining thumb pressure against the underside of the Hood Protector, re-position the rubber trim and insert screw into screw plug and tighten screws. Do not fully tighten yet. Ensure the Hood Protector is centralised on hood then fully tighten screws.
Important: Thumb pressure must be maintained on the Hood Protector to prevent the screw plug from rotating. DO NOT OVERTIGHTEN SCREWS.
7. Clean the noted areas with alcohol wipe provided. Wipe off any residue with a dry clean cloth. Adhere the abrasive resistant tape strips over the hood lip. Apply tape so approximately half of each strip is adhered to the topside and half is adhered to the underside of hood.
8. Slide wing clips over hood edge at the two previously noted outer positions. Secure Hood Protector to wing clips with small screws and washers provided.
IMPORTANT: Ensure the clips rest over the abrasive resistant tape and do not come in contact with hood paint work. Failure to do this may result in permanent paint damage. DO NOT OVER TIGHTEN SCREWS.
TO REMOVE: Reverse the above procedure.

TO REMOVE: Reverse the above procedure.

To Clean: Use mild detergent and water solution (Do **NOT** use solvents). Avoid the use of automatic "Brush Style" car washes. When closing the hood, do **NOT** pull on Hood Protector.

