

INSTALLATION INSTRUCTIONS HOOD PRODUCT

INSTALLATION INSTRUCTION

1. Trial fit **Hood Product** centrally on hood. Note rubber trim.
 - Note rubber trim retaining plugs in rubber trim corresponding to 6 slots in **Hood Product** tabs. Remove rubber trim retaining plugs. Retain the rubber trim retaining plugs for future use. Remove **Hood Product**.
2. Reinstall the **Hood Product**, between
 - the rubber trim and the hood.
3. Secure **Hood Product** and rubber trim onto hood using screws and washers provided.
 - The correct fixing sequence is screw, washer, rubber trim, **Hood Product**, hood.

• **Note:** On vehicles with limited hood to grille clearance it may be necessary to adjust hood bump stops.
(Refer to owners manual).


To remove: Reverse above procedure.

To clean: Use mild detergent and water solution.
(Do **NOT** use solvents) Avoid the use of automatic "Brush Style" car washer.


When closing the hood, do not pull on the **Hood Product**.

1

NOTE & REMOVE RUBBER TRIM RETAINING PLUGS IN HOOD

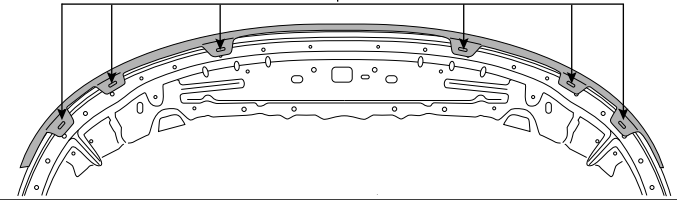

2

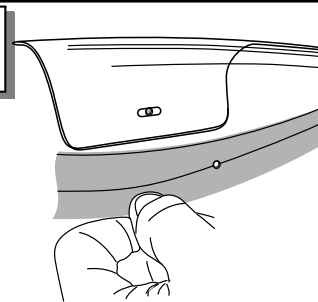

3

