

INSTALLATION INSTRUCTIONS HOOD PRODUCT

INSTALLATION INSTRUCTION

1. Trial fit **Hood Product** centrally on hood. Note rubber trim.
 - Note rubber trim retaining plugs in rubber trim corresponding to 6 slots in **Hood Product** tabs. Remove rubber trim retaining plugs.
 - Remove **Hood Product**.
2. Insert screw plugs provided into each vacated hole in underside of hood.
 - Ensure raised sections on back of screw plugs run parallel to front edge of hood.
3. Reinstall the **Hood Product**, between the rubber trim and the hood. Ensure the raised sections of the screw plugs locate in the slots of the **Hood Product** tabs.
 - Align the holes in the rubber trim with the screw plugs.
4. Reinstall and secure **Hood Product** and rubber trim onto hood using screws and washers provided.
 - The correct fixing sequence is screw, washer, rubber trim, **Hood Product**, screw plug, hood.


• **Note: On vehicles with limited hood to grille clearance it may be necessary to adjust hood bump stops.**
(Refer to owners manual).

To remove: Reverse above procedure.


To clean: Use mild detergent and water solution.
(Do **NOT** use solvents) Avoid the use of automatic "Brush Style" car washer.
When closing the hood, do not pull on the **Hood Product**.

1


NOTE & REMOVE RUBBER TRIM RETAINING PLUGS IN HOOD

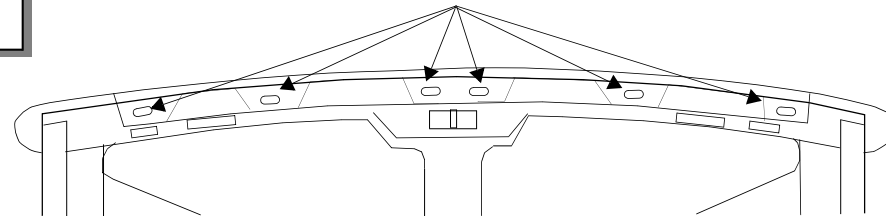

2

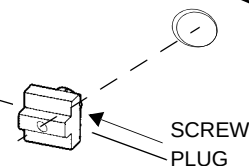

3

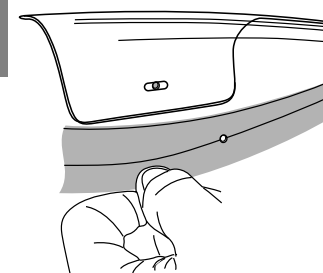

4

