


INSTALLATION INSTRUCTIONS

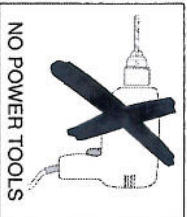




NO POWER TOOLS

- Do not use power tools to install this product.
- No battery operated screw guns.
- The use of power tools during installation may void the product warranty.
- Do not overtighten.


INSTALLATION INSTRUCTIONS

- 1 • Open hood.
 - Remove 6 upper fixing nuts located behind grill as shown.
 - Loosen 6 bottom fixing nuts located behind grill as shown. Do not remove nuts fully. **WARNING : GRILL MAY BECOME DETACHED AND FALL FORWARD.**
- 2 • Position one end of HOOD\PRODUCT between grill and hood.
 - Rotate HOOD\PRODUCT into final position between grill and hood. Ensure HOOD\PRODUCT is centrally located.
- 3 • Tighten.
 - Replace six upper fixing nuts and tighten the six bottom nuts previously loosened.

To Remove: Reverse above procedure.
To Clean: Use mild detergent and water solution. (Do NOT use solvents).
 Avoid the use of automatic "Brush Style" car washes.
 When closing the hood, do NOT pull on HOOD\PRODUCT.

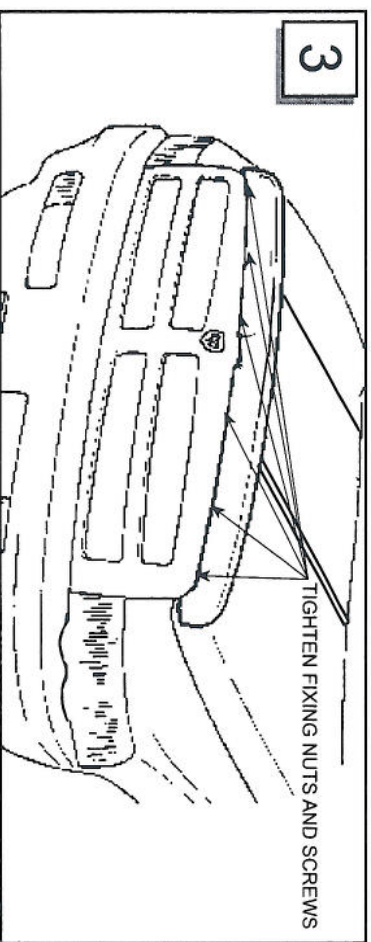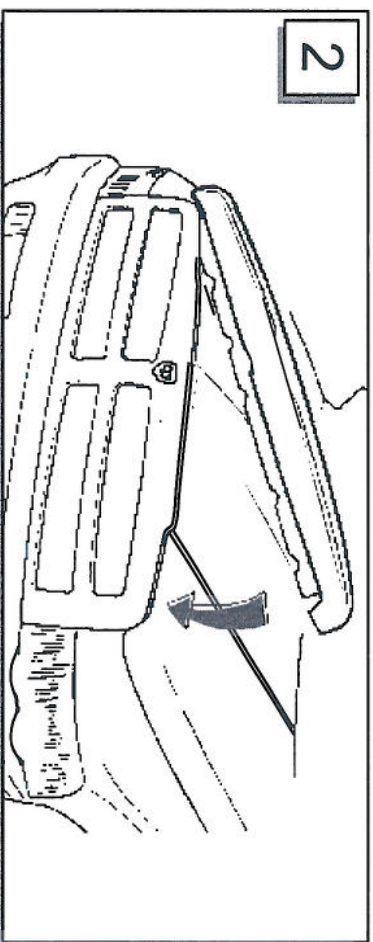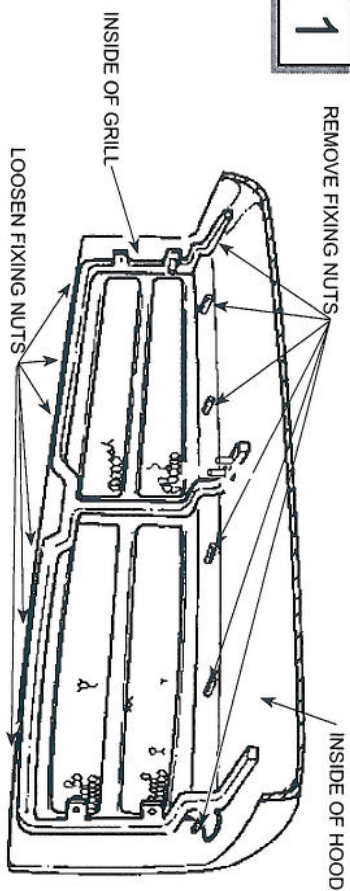

INSTALLATION INSTRUCTIONS

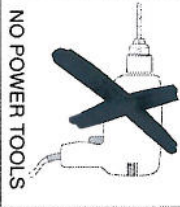

NO POWER TOOLS

- Do not use power tools to install this product.
- No battery operated screw guns.
- The use of power tools during installation may void the product warranty.
- Do not overtighten.

FENDER SECTION

INSTALLATION INSTRUCTIONS

- 1 • Apply dual-lok to rear face of **HOOD\PRODUCT** in positions shown.
Open hood.
 - 2 • Trial fit **HOOD\PRODUCT** on vehicle
 - fender above headlights.
 - Ensure bottom of product aligns with bottom edge of fender above headlight. Front tag on **HOOD\PRODUCT** is fixed between metal body panel and rubber trim using rubber trim retaining plugs.
 - Remove rubber trim retaining plugs
 - co-inciding with holes in **HOOD\PRODUCT**.
- Note areas where dual-lok contacts **PRODUCT**.
- fenders then remove **HOOD\PRODUCT**.
- 3 • Clean installation areas on vehicle
 - 3 • fender with alcohol wipes provided then wipe dry with a clean dry cloth.
 - 4 • Peel liner from dual-lok.
 - 4 • Secure **HOOD\PRODUCT** to vehicle
 - 5 • fenders using rubber trim retaining plugs. Ensure bottom of product aligns with bottom edge of fender above headlight, apply firm pressure on dual-lok sections for maximum adhesion.
- Note: To allow tape to cure do not remove HOOD\PRODUCT for 48 hours.**

To Remove: Gently pull on fender sections to release dual-lok and remove rubber retaining plugs.

To Clean: Use mild detergent and water solution. (Do NOT use solvents). Avoid the use of automatic "Brush Style" car washes.

WARNING: DO NOT INSTALL AT TEMPERATURES BELOW 10°C (50°F). IDEAL INSTALLATION TEMPERATURE IS BETWEEN 20°C - 40°C (70° - 105°F). WILL ADHERE SUCCESSFULLY AT TEMPERATURES BELOW 10°C AFTER INITIAL CURING. FULL TAPE STRENGTH IS ACHIEVED AFTER 72 HRS. IMPORTANT: ALLOW THE TAPE TO CURE FOR 4 HOURS BEFORE DRIVING VEHICLE.

