


# INSTALLATION INSTRUCTIONS

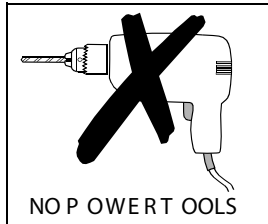

- Do not use power tools to install this product.
- No Battery operated screws guns
- The use of power tools during installation may void the product warranty.
- Do not overtighten.

## INSTALLATION INSTRUCTIONS

1. Position **HOOD PRODUCT** centrally on hood.  
 • Remove the rubber trim.  
**NOTE: Do not discard rubber seal screw plugs, retain in glove box.**  
 • Note the holes in underside of hood corresponding to the slots in **HOOD PRODUCT** tags.  
 • Remove **HOOD PRODUCT**.
2. Locate screw plugs into previously noted holes in hood.
3. Refit **HOOD PRODUCT**.  
 • Re - install rubber trim.  
 • Secure **HOOD PRODUCT** and rubber trim with screws and washers provided.  
**Correct sequence is:**  
 Screw Plugs, **HOOD PRODUCT**, Rubber Trim, Washers and Screws.  
**DO NOT OVERTIGHTEN SCREWS.**

**To Remove:** Reverse above procedure.

**To Clean:** Use mild detergent and water solution. (Do **NOT** use solvents).

Avoid the use of automatic "Brush Style" car washes. When closing the hood, do **NOT** pull on **HOOD PRODUCT**.

