


Note: Before commencing installation, clean and dry the door frame.


WARNING: DO NOT INSTALL WINDOWVISOR AT TEMPERATURES BELOW 10⁰C (50⁰F).
IDEAL INSTALLATION TEMPERATURE IS BETWEEN 20⁰C - 40⁰C (70⁰ - 105⁰F).
WindowVisor WILL ADHERE SUCCESSFULLY AT TEMPERATURES BELOW 10⁰C AFTER INITIAL CURING. FULL TAPE STRENGTH IS ACHIEVED AFTER 72 HRS.
IMPORTANT: ALLOW THE TAPE TO CURE FOR 4 HOURS BEFORE DRIVING VEHICLE.

INSTALLATION
INSTRUCTIONS


SLIMLINETM
WINDOW VISOR

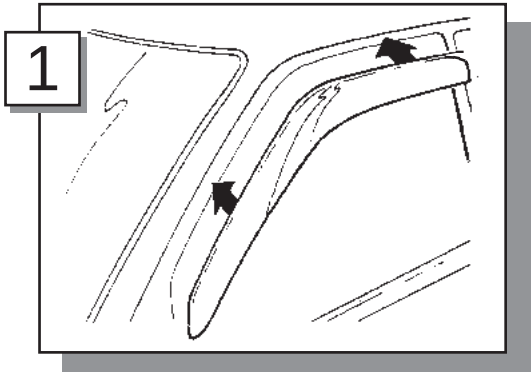


- Trial fit **WINDOWVISOR** to door frame.
- Note area of tape attachment on door frame and mirror base.

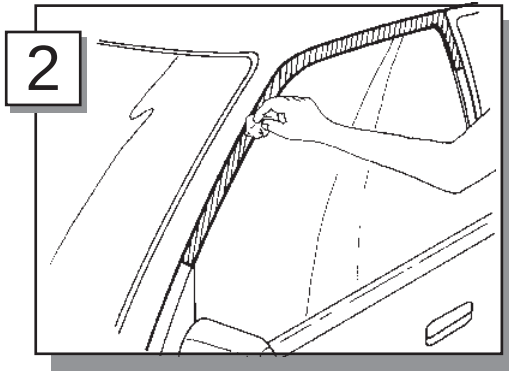


- Clean tape attachment area with alcohol wipe provided.
- Dry with a clean cloth.

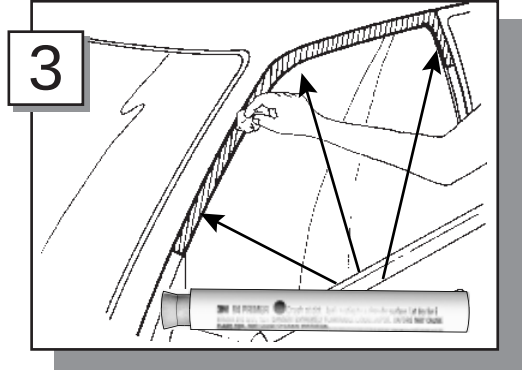


- Apply primer to installation areas. Carefully read the instructions on the primer before use.
Important notes:
1. Allow 5 minutes drying time of the primer.
2. Keep out of contact with skin and eyes.
3. Do NOT inhale or swallow.

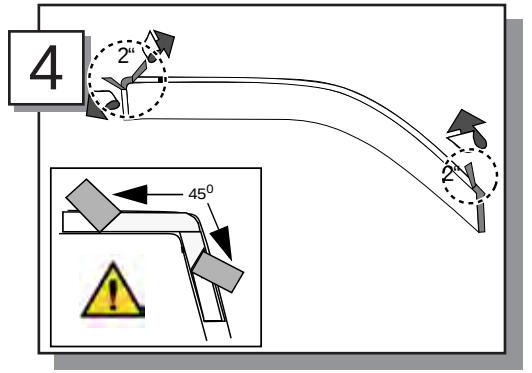

- Peel back approximately 2" of tape liner in areas shown.

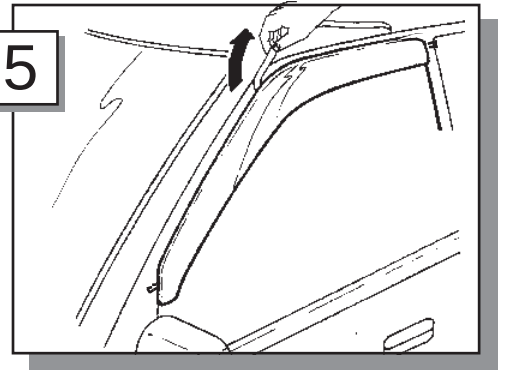

- Align **WINDOWVISOR** with door frame and apply light pressure to exposed tape areas.
- Peel off remaining tape liner.

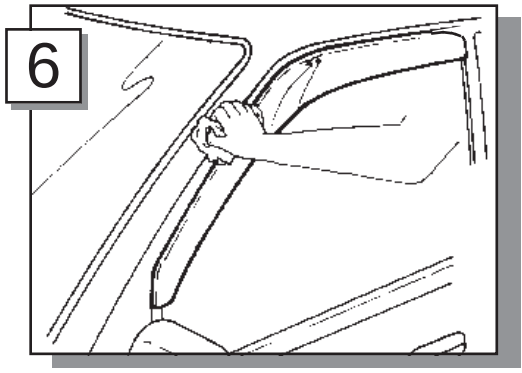

- Rub down firmly several times to ensure maximum adhesion.

MADE IN AUSTRALIA


To Clean: Use mild detergent and water solution. (Do **NOT** use solvents).

Note: Before commencing installation, clean and dry the door frame.


WARNING: DO NOT INSTALL WINDOWVISORS AT TEMPERATURES BELOW 10⁰C (50⁰F).
IDEAL INSTALLATION TEMPERATURE IS BETWEEN 20⁰C - 40⁰C (70⁰ - 105⁰F).
WINDOWVISORS WILL ADHERE SUCCESSFULLY AT TEMPERATURES BELOW 10⁰C AFTER INITIAL CURING. FULL TAPE STRENGTH IS ACHIEVED AFTER 72 HRS.
IMPORTANT: ALLOW THE TAPE TO CURE FOR 4 HOURS BEFORE DRIVING VEHICLE.

INSTALLATION
INSTRUCTIONS


SLIMLINETM
WINDOWVISORS

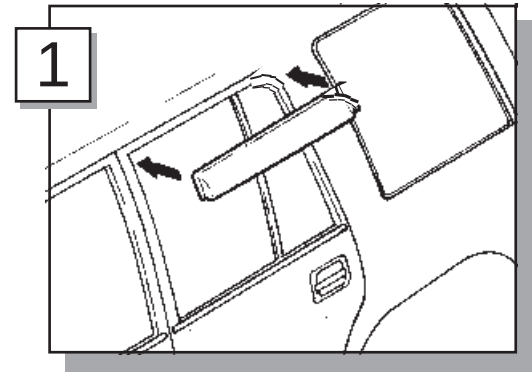


- Clean and dry upper door frame. Trial fit **WINDOWVISOR** onto door frame. Note area of tape attachment.
- DO NOT REMOVE TAPE LINER.

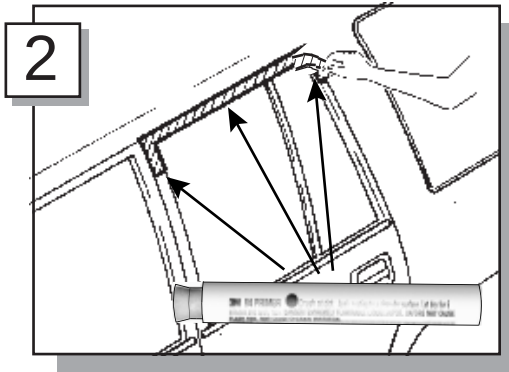


- Clean tape attachment area with alcohol wipe provided.
- Dry with a clean cloth.
- Apply primer to installation areas. Carefully read the instructions on the primer before use.
Important notes:
1. Allow 5 minutes drying time of the primer.
2. Keep out of contact with skin and eyes.
3. Do NOT inhale or swallow.

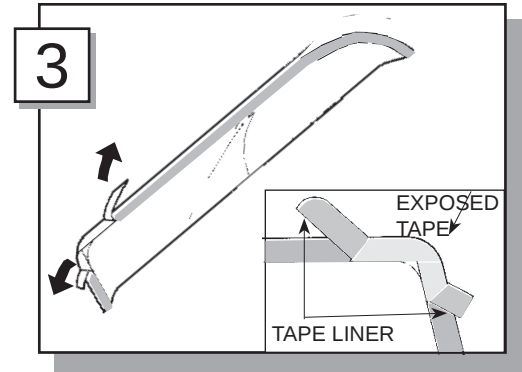


- Peel back approx. 2" of tape liner in area shown. Fold liner 45⁰ to tape.

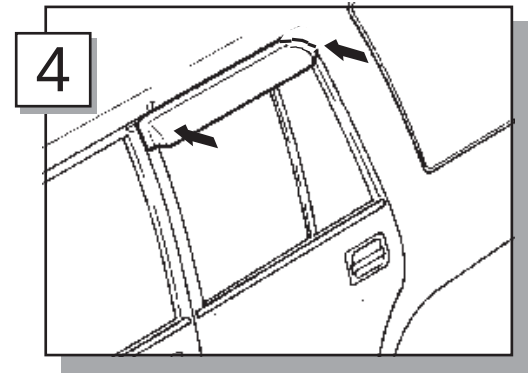

- Align **WINDOWVISOR** with door frame and apply light pressure to exposed tape areas.

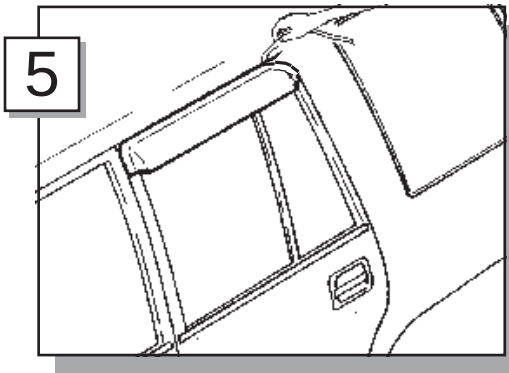

- Ensure **WINDOWVISOR** is correctly aligned on door frame.
- Peel off remaining tape liner

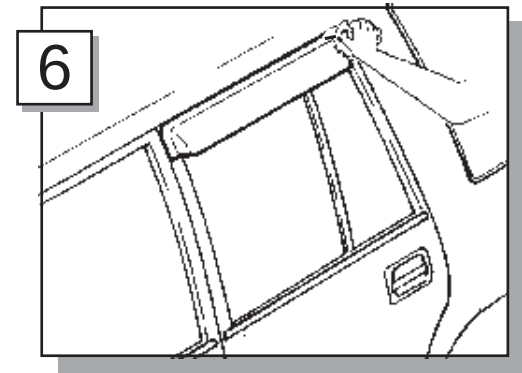

- Rub down firmly several times to ensure maximum adhesion.

MADE IN AUSTRALIA

To Clean: Use mild detergent and water solution. (Do **NOT** use solvents).