

Note: Before commencing installation, clean and dry the door frame.

WARNING: DO NOT INSTALL WINDOWVISOR AT TEMPERATURES BELOW 10°C (50°F).

IDEAL INSTALLATION TEMPERATURE IS BETWEEN 20°C - 40°C (70° - 105°F).

WINDOWVISOR WILL ADHERE SUCCESSFULLY AT TEMPERATURES BELOW 10°C AFTER INITIAL CURING. FULL TAPE STRENGTH IS ACHIEVED AFTER 72 HRS.

IMPORTANT: ALLOW THE TAPE TO CURE FOR 4 HOURS BEFORE DRIVING VEHICLE.

INSTALLATION INSTRUCTIONS

SLIMLINETM WINDOW VISOR


IMPORTANT NOTE:

This instruction makes reference to three different installation methods.


The first has a double-sided tape section along the front edge of the **WINDOWVISOR**. This adheres to the mirror base.

The second has a foam tape section along the front edge of the **WINDOWVISOR**. This butts up to the mirror base.


And finally, the third has neither double-sided or foam tape along the front edge of the **WINDOWVISOR**. This is secured between the mirror base and the door frame.

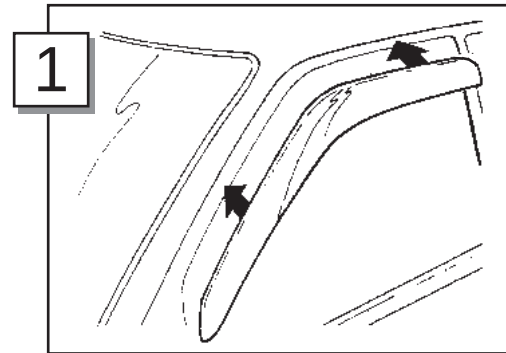


- Trial fit **WINDOWVISOR** to door frame.
- Note the areas of door frame that correspond to the double-sided tape sections on **WINDOWVISOR**.
- Remove **WINDOWVISOR**.

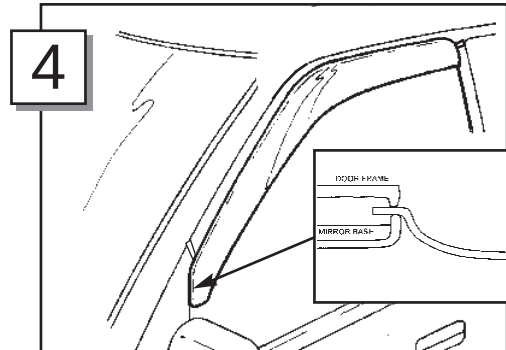


- Align **WINDOWVISOR** with door frame.
- NOTE:** • If your **WINDOWVISOR** has double sided tape, goto step 5.
- If your **WINDOWVISOR** has foam tape, the front edge should butt up to the mirror base. The foam tape should protrude over the edge. Adjust if necessary. The foam tape forms a seal between the mirror base and the **WINDOWVISOR**.
- If your **WINDOWVISOR** has neither double-sided or foam tape, complete the following:
- Prior to adhering **WINDOWVISOR** to door frame, insert the front end of **WINDOWVISOR** between the mirror base and door frame.

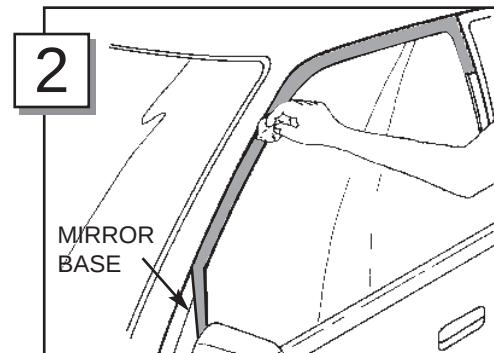


- Clean these tape attachment areas with alcohol wipe provided.
- NOTE:** If your **WINDOWVISOR** has **double-sided** tape along the front edge, clean the corresponding area of mirror base.

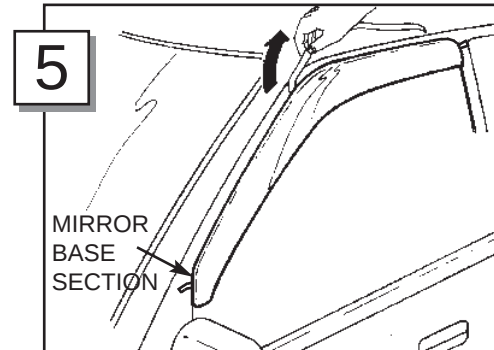

- Apply light pressure to exposed tape areas.
- Peel off remaining tape liner.
- NOTE:** If your **WINDOWVISOR** has **double-sided** tape along the front edge, peel this tape also.
- DO NOT** peel off foam tape.

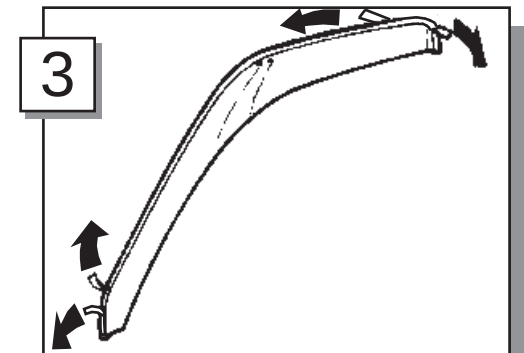

- Peel back approximately 2" of tape liner in areas shown.
- NOTE:** If your **WINDOWVISOR** has **double-sided** tape along the front edge, peel this tape also. **DO NOT** peel off foam tape.

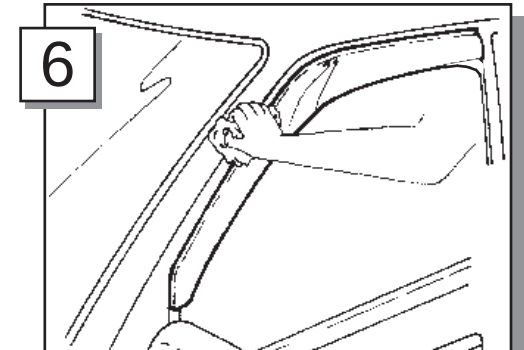

- Rub down firmly several times to ensure maximum adhesion.