

IMPORTANT: BEFORE FITTING PRODUCT **READ INSTRUCTION FULLY.**
FULL TAPE STRENGTH IS ACHIEVED AFTER **72HRS.**
ALLOW TAPE TO CURE FOR **4HRS** BEFORE DRIVING VEHICLE.




INSTALLATION INSTRUCTIONS


SLIMLINE™ WINDOW VISOR




MADE IN AUSTRALIA

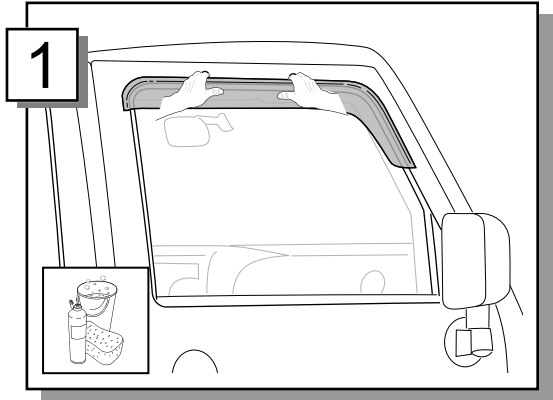


- Clean and dry upper door frame.
 - Trial fit Slimline Window Visor onto door frame.
 - Note tape attachment areas.
- DO NOT REMOVE TAPE LINER.**

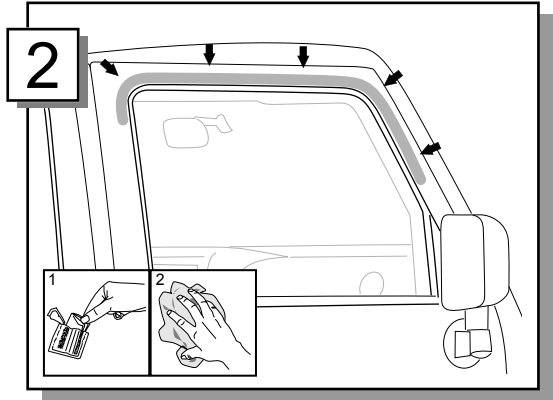

- Clean tape attachment areas thoroughly on door frame with alcohol wipe provided.
- Wipe dry with a clean cloth.

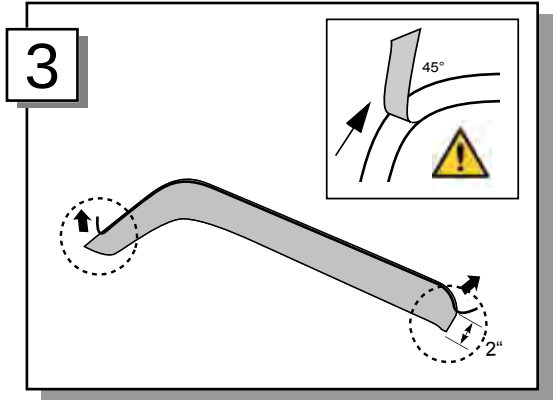

- Peel back approx. 2" (50mm) of tape liner from EACH of the tape sections and fold at 45° to outside of Slimline Window Visor.
- DO NOT TOUCH EXPOSED SURFACE OF TAPE.**

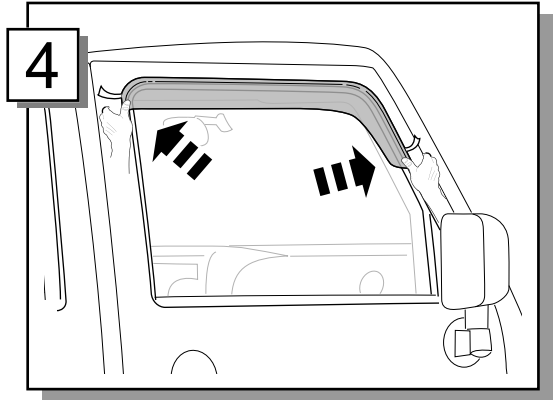

- Position the Slimline Window Visor on the door frame.
- Double check positioning of Slimline Window Visor as per step 1, then apply light pressure to exposed tape areas.

IMPORTANT: BEFORE FITTING PRODUCT **READ INSTRUCTION FULLY.**
FULL TAPE STRENGTH IS ACHIEVED AFTER **72HRS.**
ALLOW TAPE TO CURE FOR **4HRS** BEFORE DRIVING VEHICLE.




INSTALLATION INSTRUCTIONS


SLIMLINE™ WINDOW VISOR




MADE IN AUSTRALIA

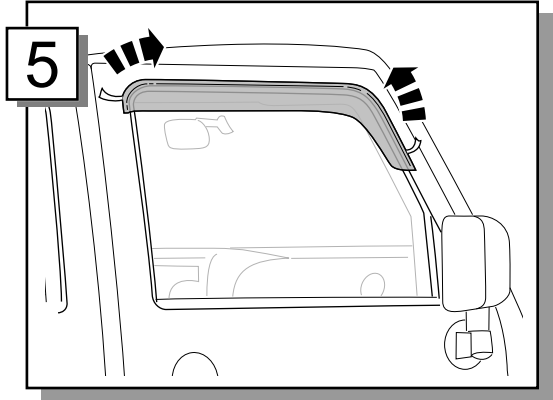


- Peel remaining tape liner by pulling on exposed ends of liner, and apply firm pressure around attachment areas.

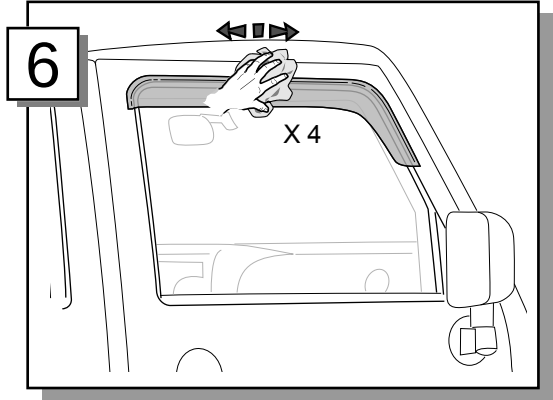

- Using a clean, soft cloth rub down firmly around attachment areas **4** times to ensure maximum adhesion.

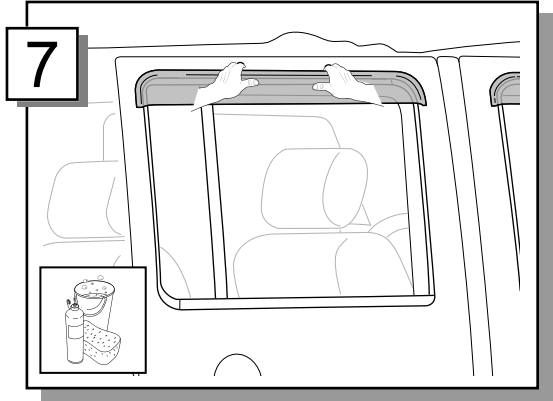

- Clean and dry upper door frame.
 - Trial fit Slimline Window Visor onto door frame.
 - Note tape attachment areas.
- DO NOT REMOVE TAPE LINER.**

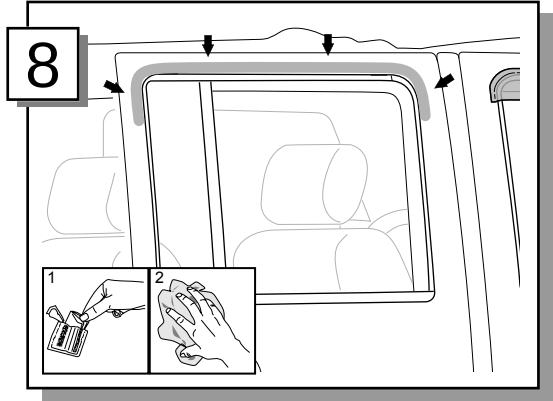

- Clean tape attachment areas thoroughly on door frame with alcohol wipe provided.
- Wipe dry with a clean cloth.

IMPORTANT: BEFORE FITTING PRODUCT **READ INSTRUCTION FULLY.**
FULL TAPE STRENGTH IS ACHIEVED AFTER **72HRS.**
ALLOW TAPE TO CURE FOR **4HRS** BEFORE DRIVING VEHICLE.




INSTALLATION INSTRUCTIONS


SLIMLINE™ WINDOW VISOR




MADE IN AUSTRALIA

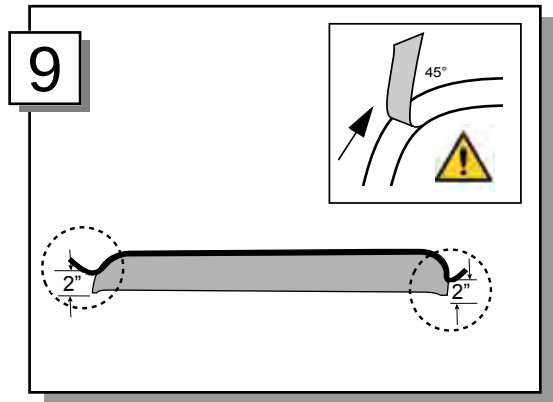


- Peel back approx. 2" (50mm) of tape liner from EACH of the tape sections and fold at 45° to outside of Slimline Window Visor.
- DO NOT TOUCH EXPOSED SURFACE OF TAPE.**

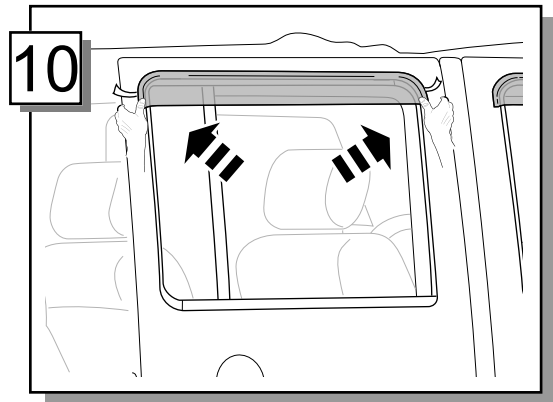

- Position the Slimline Window Visor on the door frame.
- Double check positioning of Slimline Window Visor as per Step 7, then apply light pressure to exposed tape areas.

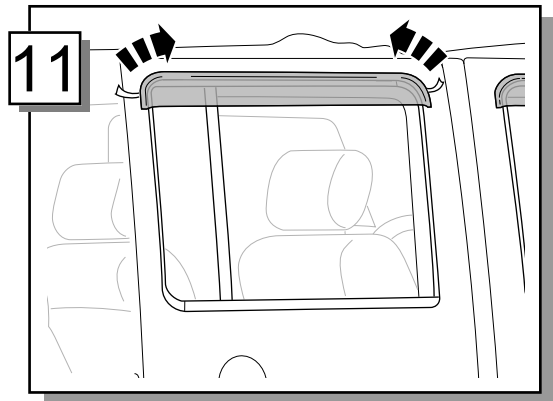

- Peel remaining tape liner by pulling on exposed ends of liner, and apply firm pressure around attachment areas.

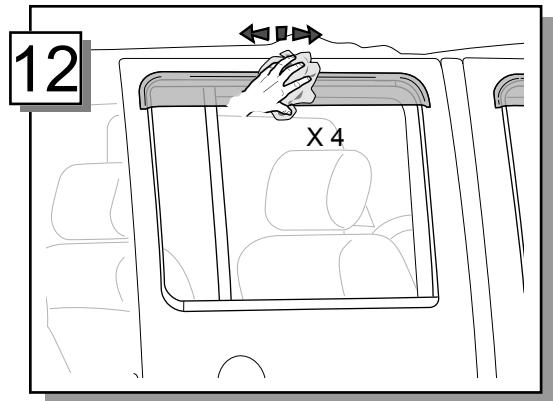

- Using a clean, soft cloth rub down firmly around attachment areas **4** times to ensure maximum adhesion.