


REAR FENDER FLARE INSTALLATION INSTRUCTIONS


FF 253a
1/2

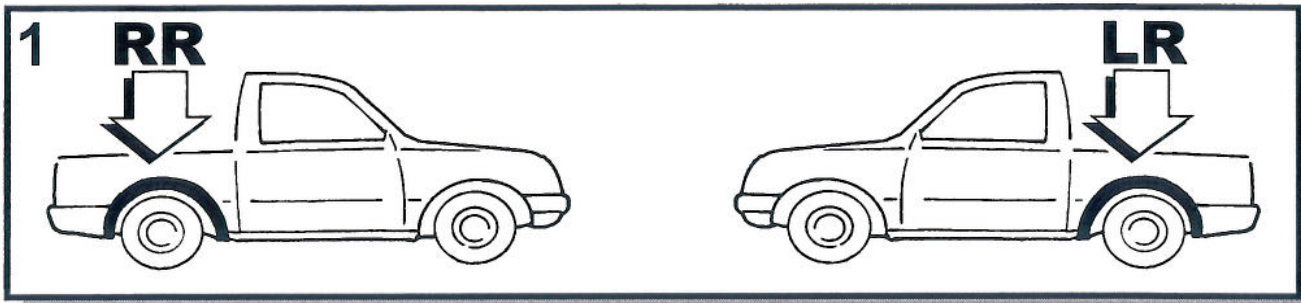


Ensure that both Left and Right hand Fender Flares suit the profile of the vehicle. Note the areas where the Fender Flares come in contact with the vehicle. NOTE: Before fitting Fender Flares remove any moldings, strips or existing flares from the wheel arch. If there is a body side moulding, mark where the moulding is to be cut. Alternatively, the Fender Flare can be cut to go around the moulding. Be sure to allow enough room for the extrusion.

PAINTING INSTRUCTION - If Fender Flares are being painted, do not install edge extrusion until painting is complete


Prior to painting, clean all surfaces to be painted using clean water and a mild detergent, do not use lacquer thinner or any solvent based products. Wipe completely dry. Best results will be achieved by wiping the areas to be painted with a tack rag just prior to painting. Most automotive paints can be applied directly to the Fender Flare, however, some may require a primer (check paint manufacturer specifications). Good adhesion will be achieved without sanding, however, if a smoother surface finish is desired, sanding can be performed. Select a paint (and primer if necessary) that is suitable for rigid plastics. If using a paint system which requires baking, do not expose the product to temperatures above 70° C (158° F). Do not fit the extrusion or any of the hardware to the Fender Flares until the paint is completely dry.

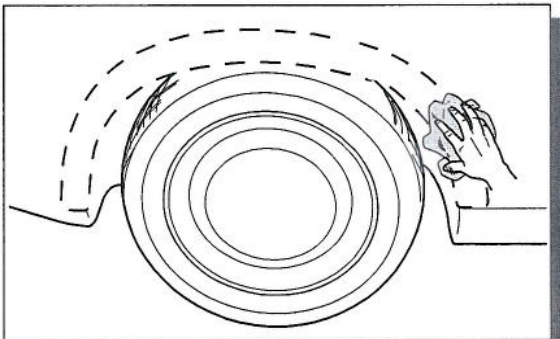


2. Wash the areas of contact on the vehicle and wipe dry both the vehicle and the Fender Flare with a clean cloth. Ensure inside of Fender Flare where extrusion is attached is clean.

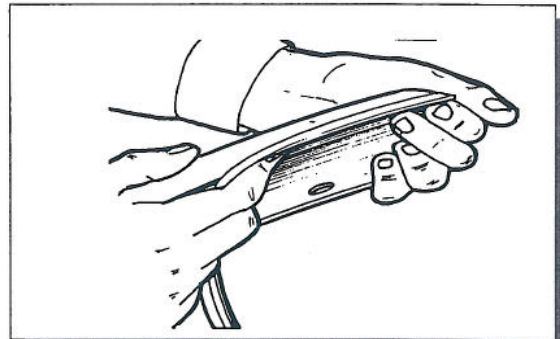

3. Remove approximately 50mm (2") of the protective liner from the extrusion. Fit the extrusion to the Fender Flare along the edge that comes in contact with the vehicles body panel.

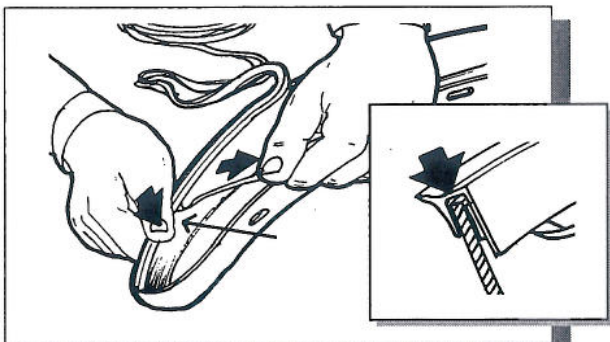


4. Pulling at right angles from the extrusion remove the liner from the extrusion in small portions and apply thumb pressure to ensure that it adheres to the Fender Flare.

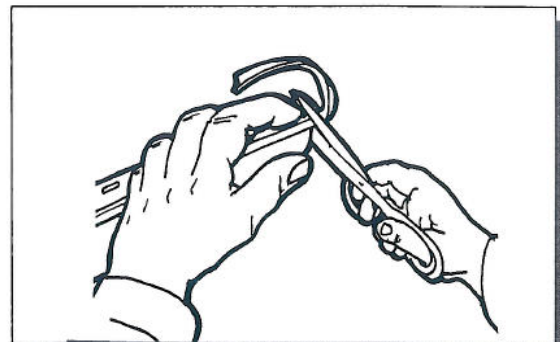


5. Trim excess extrusion and discard.


REAR FENDER FLARE INSTALLATION INSTRUCTIONS

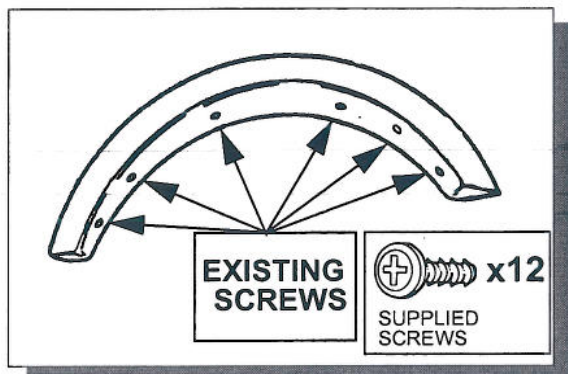


6. Correct hardware positions (Right Rear Flare shown).
NOTE: Use only supplied screws if there are not any screws existing in the wheel well.

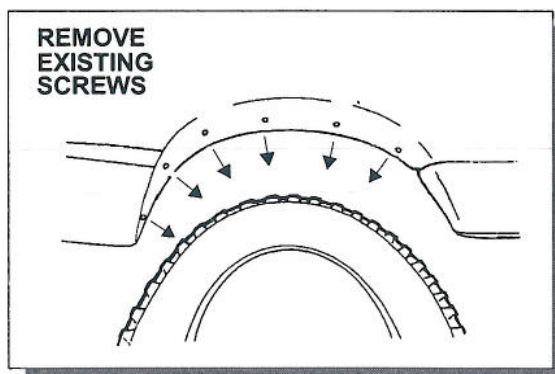

7. Trial fit Fender Flare. Note the six existing screws in vehicle that correspond to the holes in Fender Flare. Remove Fender Flare and remove the six existing screws.

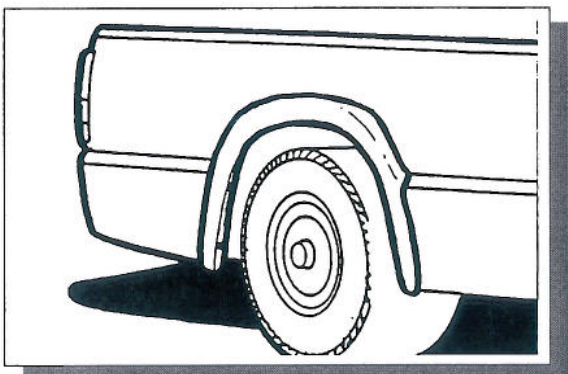

8. Place the Fender Flare against the vehicle. Locate the Fender Flare into the position of best fit.

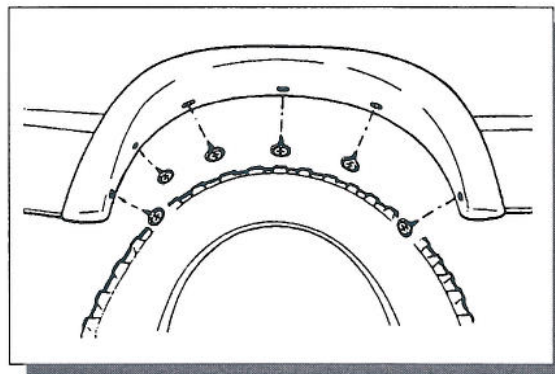

9. Install the existing screws into the six positions shown.

NOTE: FENDER FLARES HAVE BEEN DESIGNED AND TESTED FOR EXTREME OFF-ROAD CONDITIONS. TWO METHODS OF ATTACHMENT ARE PROVIDED. THE PREFERRED METHOD IS TO USE THE NO DRILL HARDWARE. THE ALTERNATIVE METHOD IS TO USE THE SCREWS PROVIDED FOR DRILL ATTACHMENT THROUGH THE SLOTS PROVIDED OR AS NOTED BY SMALL INDENTATIONS ON THE RETURN EDGE.



Clean Fender Flare using mild detergents only.
Do not use abrasive cleaners