



EDELBROCK INTERCOOLER KITS

For 1992-1995 & 1996-2000 Honda Civic,
and 1994-2001 Acura Integra
Catalog #15009, 15036, 15037
INSTALLATION INSTRUCTIONS

PLEASE study these instructions carefully before beginning this installation. Most installations can be accomplished with common tools and procedures. However, you should be familiar with and comfortable working on your vehicle. If you do not feel comfortable performing this installation, it is recommended to have the installation completed by a qualified mechanic. If you have any questions, please call our **Technical Hotline at: 1-800-416-8628**, 7:00 am - 5:00 pm, Pacific Standard Time, Monday through Friday or e-mail us at Edelbrock@Edelbrock.com.

IMPORTANT NOTE: Proper installation is the responsibility of the installer. Improper installation will void your warranty and may result in poor performance and engine or vehicle damage.


DESCRIPTION: These high-efficiency intercoolers feature a bar and plate core with cast aluminum end tanks. Intercooler #15009 is designed for 1996-2000 Honda Civics, while #15036 is for 1992-1995 Honda Civics, and #15037 is designed for 1994-2001 Acura Integras. Modification of the stock bumper cover is required, aftermarket bumper covers may or may not need modification. Intercooler #15009 features a 22" long, 6" wide, 2.5" thick core, while #15036 & 15037 feature a 22" long, 5.5" wide, and 2.5" thick core. Hose connections for all intercoolers are 2.5" diameter.

KIT CONTENTS:

- | | |
|--|--|
| ☐ 1 Intercooler | ☐ 1 M6 x 1.0 Nut (15036 & 15037 ONLY) |
| ☐ 2 Intercooler Mounting Grommets | ☐ 1 1/4" Washer (15036 & 15037 ONLY) |
| ☐ 1 M6 x 1.0 x 16mm Bolt (15036 & 15037 ONLY) | |

INSTALLATION PROCEDURE



1. Installation of the intercooler requires removal of the front bumper cover. Follow your factory service manual for removal and reinstallation of the bumper cover.
2. For 1996-2000 Civic, remove the bolt holding the horn onto the center radiator support and move the horn to the side. On 1992-1995 Civic and 1994-2001 Integra, the horn may need to be moved from its stock location. If necessary, drill and mount the horn using hardware of your choosing.
4. On 1994-2001 Acura Integras, there is an A/C line in front of the power steering cooler line. This will need to be modified in order for the intercooler to fit properly. Remove the bolts holding the power steering cooler line to the radiator support. Carefully flex the power steering line out of the way, and carefully bend the A/C line by pushing it towards the radiator. It should sit between the power steering cooler line and the radiator when the power steering cooler line is flexed back to its original position (**See Fig. 1**). Reinstall power steering cooler line mounting bolts.

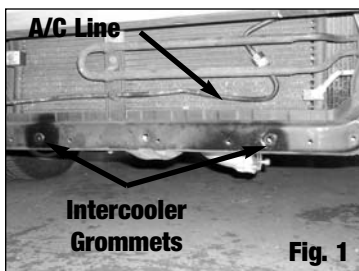

NOTE: When modifying tubing, always **CAREFULLY** and **SLOWLY** bend the line to avoid damaging or kinking the tubing.

3. Install the intercooler grommets into the holes in the lower radiator support as shown (**See Fig. 1**). Using a small amount of silicone-

based spray lubricant on the grommets will ease installation. Mount the intercooler by pressing the pins on the lower edge of intercooler into the installed grommets (**See Fig. 2**). For 1996-2000 Civics, use the factory horn bolt removed earlier to attach the inter-cooler brace and horn to the center radiator support (**See Fig. 3**). For 1992-1995 Civic, and 1994-2001 Integra, attach the intercooler brace to the center radiator support using the supplied 6mm x 1.0 bolt and nut, and 1/4" washer.

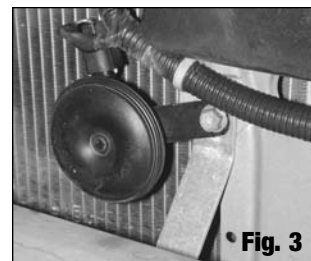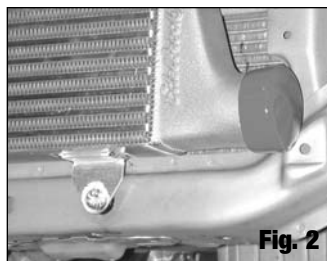

4. On the inside of the factory front bumper cover, material from the back side of the grill will need to be trimmed to clear the intercooler. Temporarily place bumper cover on the vehicle and check for clearance. Using a cutoff wheel, trim areas that contact the intercooler. This may vary if an aftermarket bumper cover has been installed.

NOTE (94-01 Integra Models): Factory turn signal lights will fit. However, the brackets for turn signal lights in the bumper may need to be modified. Temporarily place bumper cover on the vehicle again and check for clearance. Continue to trim as necessary.

Edelbrock Corporation • 2700 California St. • Torrance, CA 90503
Tech-Line: 1-800-416-8628 • E-Mail: Edelbrock@Edelbrock.com