


INSTALLATION SHEET GMC/Chevy Stepside '88-'98



TUFF TONNO III™ & Saber TONNO

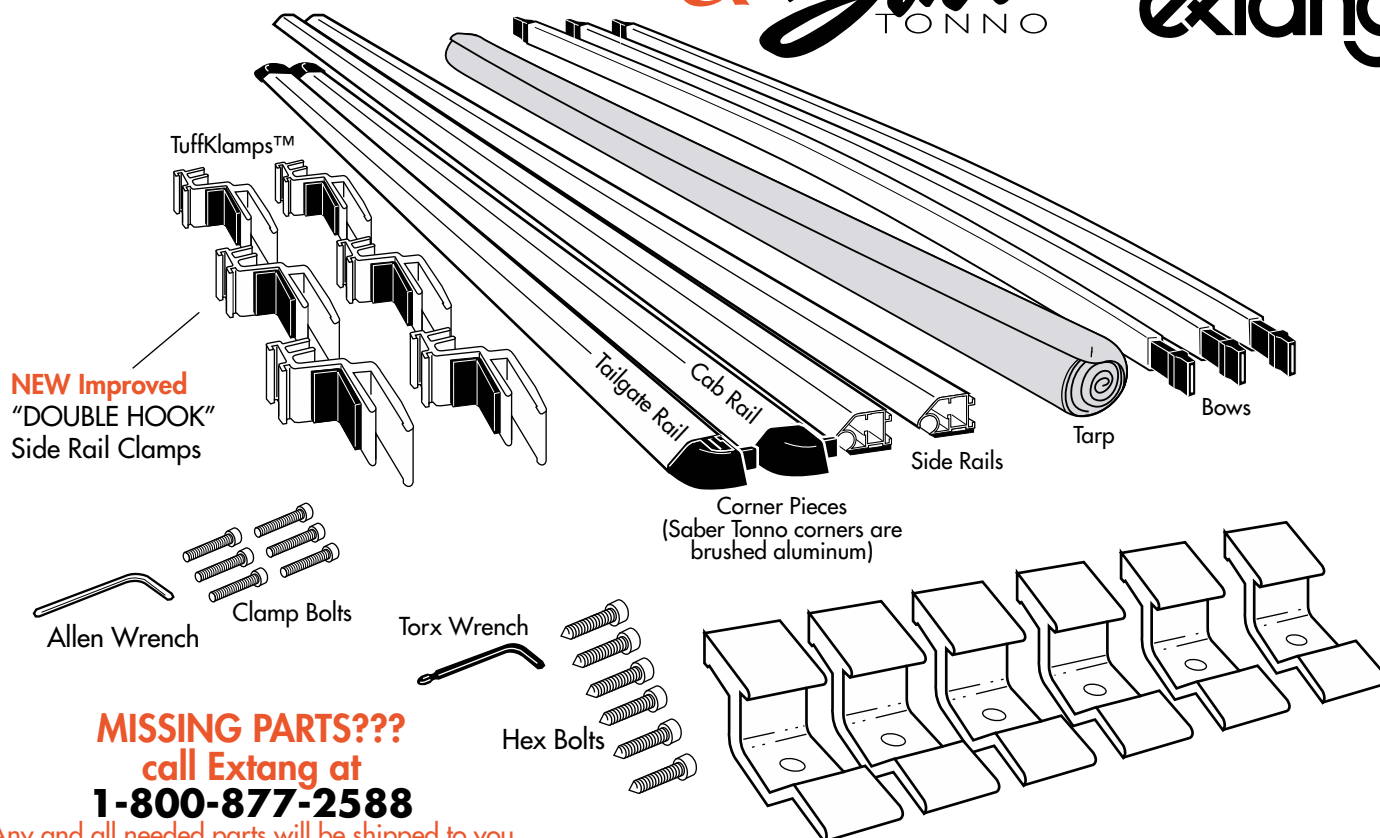

MISSING PARTS???
call Extang at
1-800-877-2588

Any and all needed parts will be shipped to you directly. (DO NOT return whole kit to store)


PARTS INCLUDED IN YOUR KIT. You may want to lay them out in this manner for accessibility.

1




Wash truck bed.

2

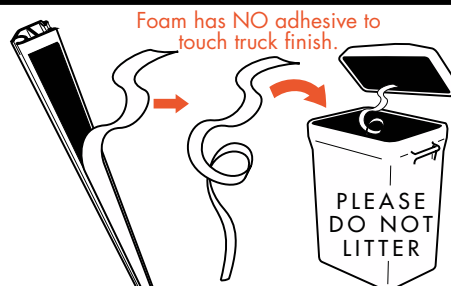


Remove paper tape from all rails. Discard properly.


3

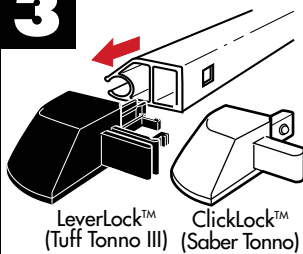

Depress the mechanism, release, and remove one corner from cab rail.

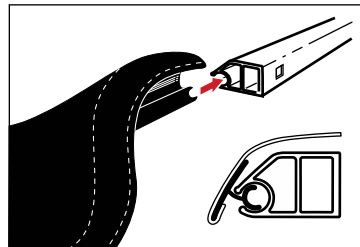


Feed tarp dowel into cab rail. (NOTE: For easiest feeding action, place tarp on a flat smooth surface, and keep dowel straight while feeding into cab rail. Caution, pavement may scuff tarp.)

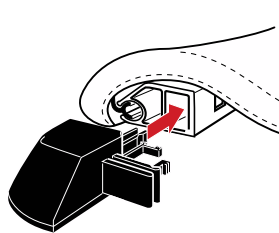

Reinsert corner piece into cab rail until it "clicks" and locks into place.

4

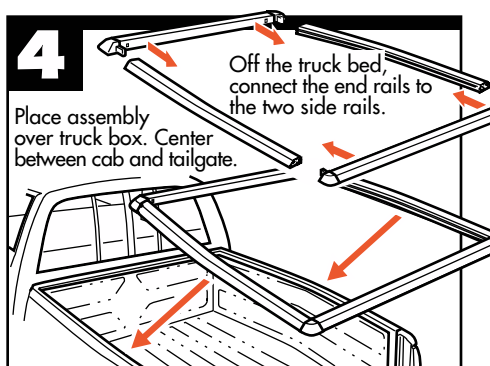

Place assembly over truck box. Center between cab and tailgate.


Off the truck bed, connect the end rails to the two side rails.

extang
Stands for Quality


Extang Corporation
1901 E. Ellsworth Rd.
Ann Arbor, MI 48108
734 677-0444, Fax: 734 677-8409

Visit us at:
www.extang.com
Item No. 0003-0402RH Printed in U.S.A.


5

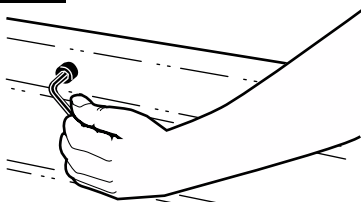

Use the included torx wrench to remove three (3) bolts on each side of truckbed wall.

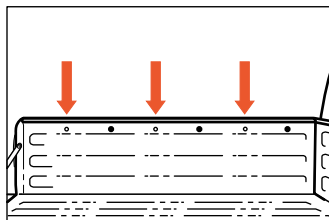


Remove every other bolt, starting with the back bolt, as shown above.

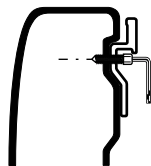


IMPORTANT
Attach wall plates with bolts provided in kit.

6

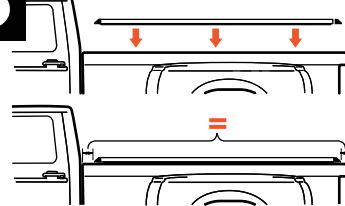


Place the rail assembly over the side of the truck box. Center rails evenly between cab and tailgate. (NOTE: Some applications have hard rubber risers (square rubber pad.) A riser must go toward tailgate. Some applications will have a riser at both ends, (most have no riser).



7

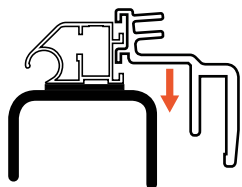


After wall plates are in place, insert side rail clamp all the way into rail.

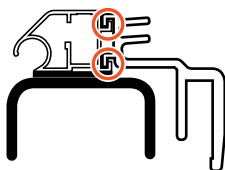

Position clamps over wall plates.

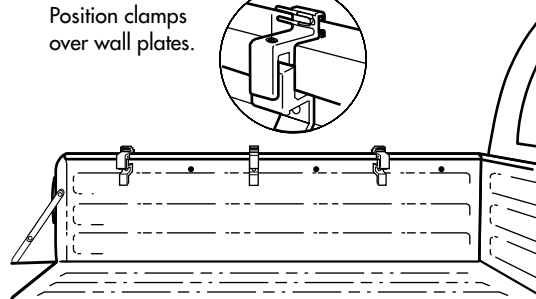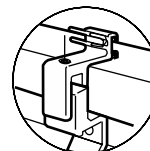

7

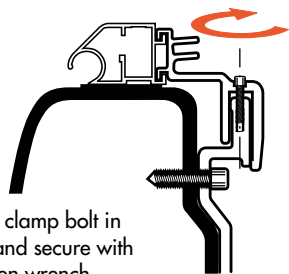


Insert clamp bolt in place and secure with allen wrench.

Do Not Overtighten



8

Insert bow onto top or bottom peg.
(Top peg for performance, Bottom for good looks.)

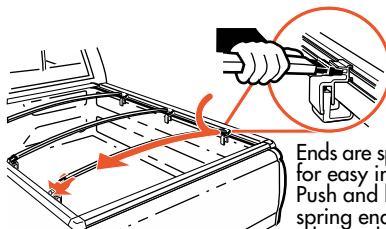

Ends are spring loaded for easy installation. Push and hold on spring end and let the other end slide on with the spring action.

Upper Peg




SPECIAL FEATURE:
Two pegs offer two height adjustments.

Note:
Bow End does not fit between pegs.




Do Not Place Between the Pegs


9

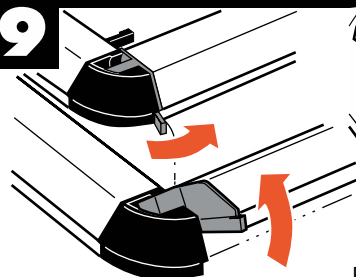


A. Release lever on both corners of tailgate rail and tilt up rail.

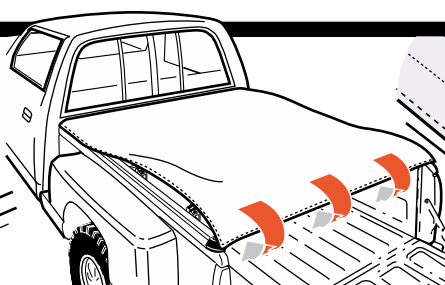

B. Attach tarp at front by pressing down on edge of tarp with the palms of your hands (about only 12 inches on each side). Then hook tarp to the tails rail's groove and click down to tighten tarp. See close-up.

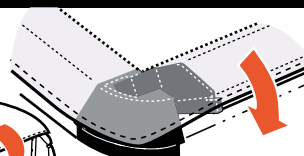


Close-up of downward rotation of rear rail. You will feel the "snap" effect and see it tighten snugly.

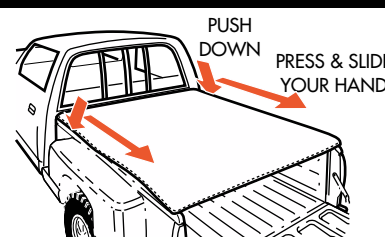


C. Finish attaching tarp along each side by pushing down and sliding your hand towards each corner. You can feel the "grip" action.


For Tuff Tonno III:
For Saber Tonno:

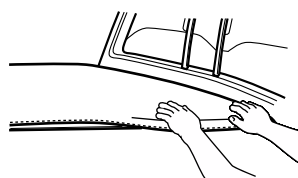


A. Attach tarp from front corner (12 inches) Repeat for each side.
Note: Pull tarp out while pressing down in center of the side strip to flex hook open for easy attachment.

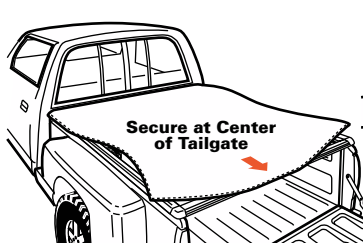

B. Secure tarp at the middle of tailgate rail.

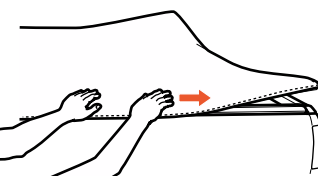

C. Finish attaching tarp along each side by pushing down and sliding your hand front to rear, and on tailgate rail, by pressing out from the center.

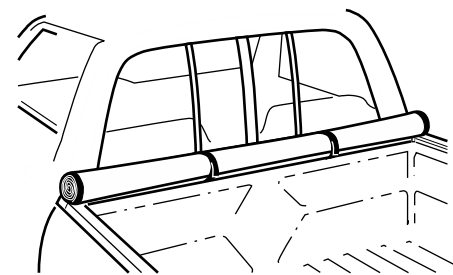

EASY USE OF TRUCK BED

Tarp may be rolled up and secured with Velcro® for bulk hauling