


INSTALLATION SHEET

EXTANGRT

TONNO



Rail Clamp Assemblies (x 4)

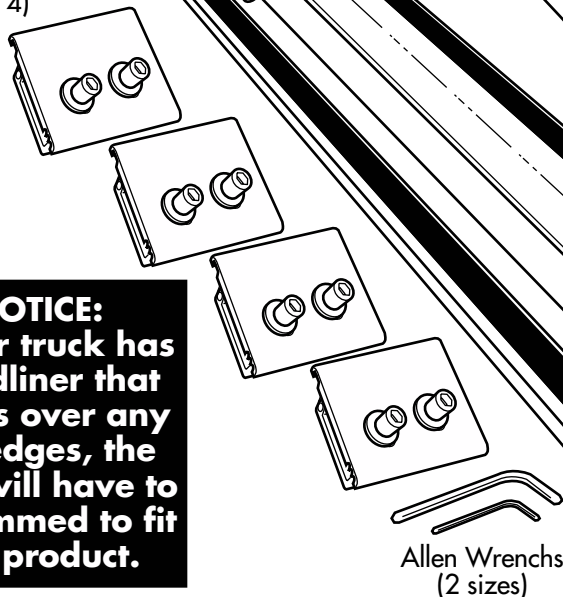

NOTICE:
If your truck has a bedliner that wraps over any top edges, the liner will have to be trimmed to fit this product.

Tarp Assembly with Head Rail, Tail Rail and support Bows attached.

Allen Wrenches (2 sizes)

Left and Right Side Rail Assemblies

MISSING PARTS???
call Extang at
1-800-877-2588
Any and all needed parts will be shipped to you directly.
(DO NOT return whole kit to store)


PARTS INCLUDED IN YOUR KIT. You may want to lay them out in this manner for accessibility.



Wash truck bed.




Remove paper tape from all rails. Discard properly.

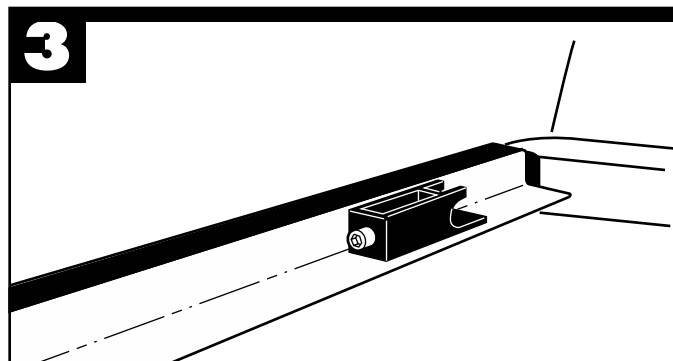

Position Side Rails on side walls of truck bed. Spring blocks go toward the cab. Locking catch goes on left side toward the tailgate as shown.

Slide both rails all the way forward so that the bumpers contact the front wall of the truck bed.

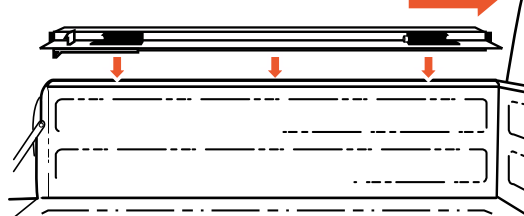


extang
Stands for Quality

Extang Corporation
1901 E. Ellsworth Rd.
Ann Arbor, MI 48108
734 677-0444, Fax: 734 677-8409



Visit us at:
www.extang.com

Item No. 0042-0103RH Printed in U.S.A.


4

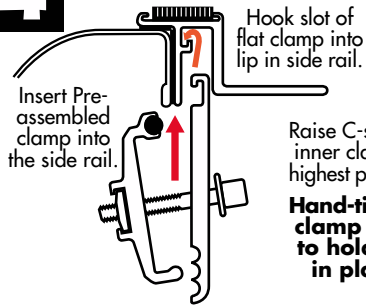

Hook slot of flat clamp into lip in side rail.
Raise C-shaped inner clamp to highest position.
Hand-tighten clamp bolts to hold rail in place.

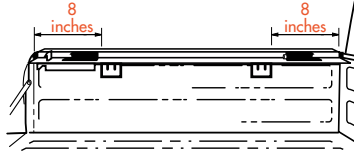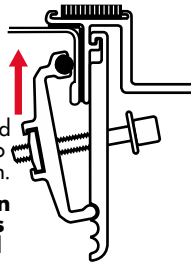


Position rail front-to-rear so that rubber end plugs are evenly against front and tailgate in closed position.

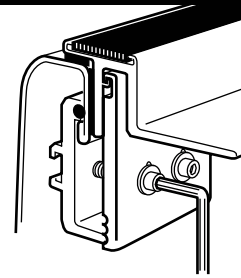


Tighten bolts with large Allen wrench.
(Note: On some vehicles, the down-standing box flange has a sloping surface; with these vehicles it may be necessary to move inner clamp up and down and to shim rail so that rail is flat.)


5

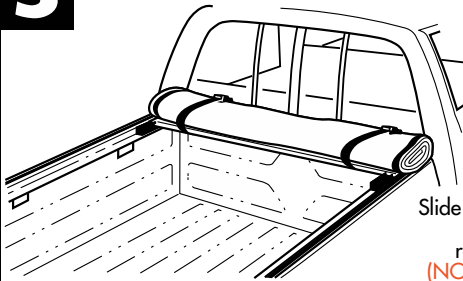

Slide the retaining plates out so that they engage the wide flange of the sided plates and secure the retaining screws using the small Allen Wrench.
(NOTE: Plate does not firmly contact the side rail.)

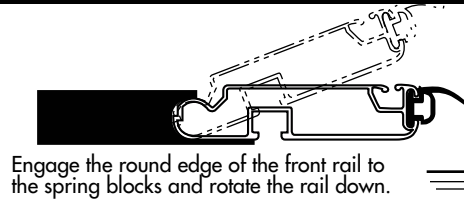


Engage the round edge of the front rail to the spring blocks and rotate the rail down.

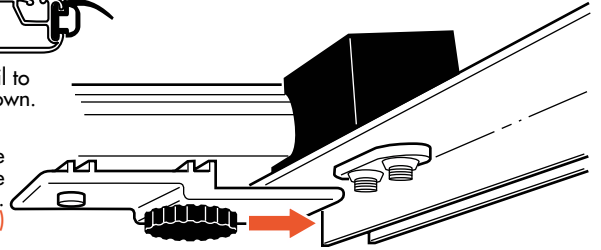


6

Unroll your tarp from the head rail to the tailgate. The tonno bows are deployed as the tarp is unrolled.

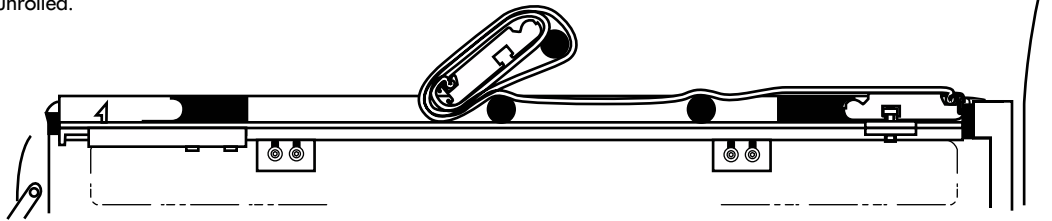


7


Engage the tailgate block and rotate it down to the spring catch.

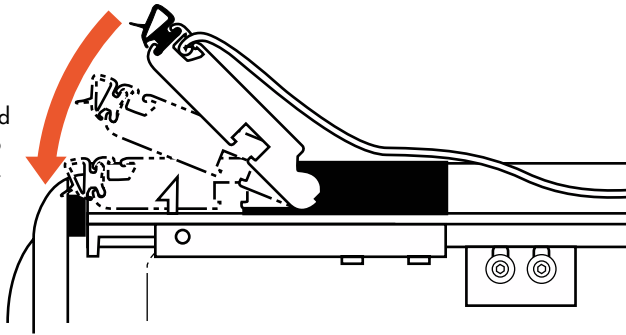

8


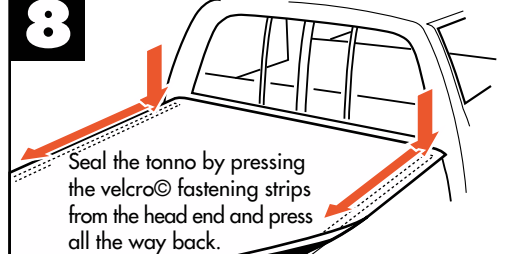


Before using any commercial car wash, push down both sides of the Velcro® strips. This will reduce the possibility of water entering the truck bed.

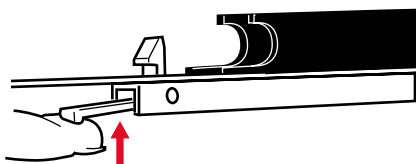

Push up on spring tab to release tonno catch and roll the tonno forward.

To adjust the tension of the tarp, rotate the screw on the spring block using the large Allen Wrench.

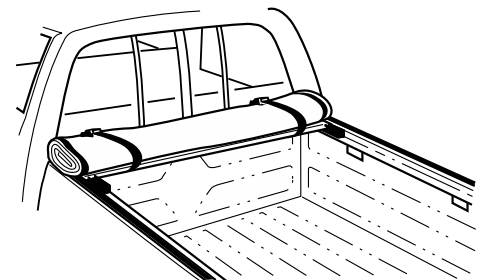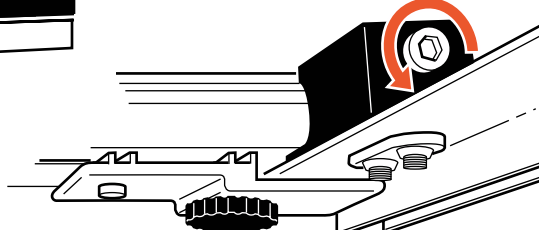

EASY USE OF TRUCK BED

Tarp may be rolled up and secured with buckle straps for bulk hauling