

Installation Instructions

Eibach Springs, Inc. • 264 Mariah Circle • Corona, California 92879-1751 • USA • Tech Support 800-222-8811 Ext 114



Pro Truck- # 38155.540

CHEVROLET – Avalanche, 2WD/4WD exc. Autoride, 2007-2011

CHEVROLET – Suburban, ½ ton, 2WD/4WD exc. Autoride, 2007-2011

GMC – Yukon XL, exc. Autoride, 2007-2011

Kit Contents	Description	Part Number	Qty
	Front Spring	38107.101	2
	Rear Spring	38130.102	2
	Front Bump Stop	BS770015	2
	Information Kit	EPAK	1
	Instructions	38155.540INST	1

Please Note: This kit was designed for vehicles with stock wheels and tires. Installation of low profile tires and larger wheels may affect the ride quality. Performance dampers are recommended.

NOTES: Read All Instructions Before Beginning Installation


- Installation of a *Pro Kit* Spring set should only be performed by a qualified mechanic experienced in the installation and removal of suspension springs.
- Use of a hoist is highly recommended and will substantially reduce installation time.
- **Never work on or under a vehicle unless it is properly supported by safety stands and wheels are blocked.**
- *Pro Kit* Springs are marked with an **001** and an **002** (located at the end of the part number) designating front and rear springs.
- *Pro Kit* Springs should be installed with the **Eibach** Logo right side up. All original stock spring isolators, dampers and tubing should be retained from the stock springs and used when installing the *Pro Kit* Springs.
- **After** installation, it is always important to inspect and adjust the following if necessary:
 - Wheel alignment such as camber, caster & toe.
 - Tire and/or wheel fender clearance.
 - Brake line clearance and attachments.
 - Brake anti-locking and anti-skid system sensors.
- **Tire Rotation:** In order to increase the life of your tires, it is recommended to rotate your tires every 3,000 miles.

ALIGNMENT: After installation, it will be necessary to perform a full vehicle alignment using factory specifications.

Bump Stop Trimming Instructions

Typical Bump-Stop
(Bump-Stop from your vehicle may have different shape)

Front Bump Stop
Replace OE bump stop with
Eibach p/n BS770015

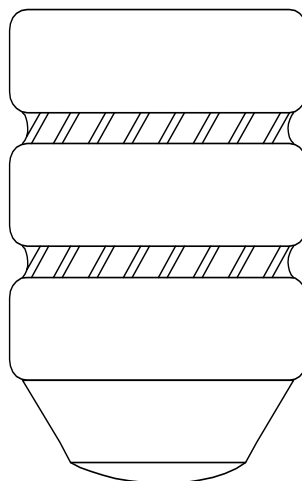

Rear Bump Stop
Trim bumpstop on bottom
end leaving 65mm remaining.