

Installation Instructions

Eibach Springs, Inc. • 264 Mariah Circle • Corona, California 92879-1751 • USA • Tech Support 800-222-8811 Ext 114



PRO-KIT- #3826.540

Chevrolet Trailblazer, GMC Envoy, 2002-2008

Chevrolet Trailblazer EXT, GMC Envoy XL, 2003-2006

Kit Contents	Description	Part Number	Qty
	Front Spring	3826.001	2
	Rear Spring	3826.002	2
	Information Kit	EPAK	1
	Instructions	3826.540INST	1

NOTES: Read All Instructions Before Beginning Installation

- Installation of a **PRO-KIT** Spring set should only be performed by a qualified mechanic experienced in the installation and removal of suspension springs.
- Use of a hoist is highly recommended and will substantially reduce installation time.
- **Never work on or under a vehicle unless it is properly supported by safety stands and wheels are blocked.**
- **PRO-KIT** Springs are marked with 01 and 02 (located at the end of the part number) designating front and rear spring respectively.
- **PRO-KIT** Springs should be installed with the Eibach Logo right side up. All original stock spring isolators, dampers and tubing should be retained from the stock springs and used when installing the **PRO-KIT** Springs.
- **After** installation, it is always important to inspect and adjust the following if necessary:
 - Wheel alignment such as camber, caster & toe
 - Tire and/or wheel fender clearance
 - Brake line clearance and attachments
 - Brake anti-locking and anti-skid system sensors
- **Tire Rotation:** In order to increase the life of your tires, it is recommended to rotate your tires every 3,000 miles.

ALIGNMENT:


After installation, it will be necessary to perform a full vehicle alignment. Eibach offers the following alignment kit for this vehicle.

Bump Stop Instructions

Typical Bump-Stop
(Bump-Stop from your vehicle may have different shape)

FRONT

No Trimming required for front

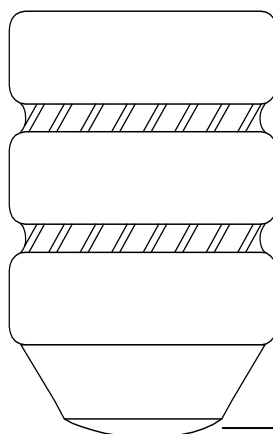

REAR

Trim 32MM from Bottom of Rear Bumpstop
Note: Bump Stop trim is not required on the Trailblazer EXT or Envoy XL