

Installation Instructions

Eibach Springs, Inc. • 264 Mariah Circle • Corona, California 92879-1751 • USA • Tech Support 800-222-8811 Ext 114



SPORTLINE # 4.8182

Scion, XA & XB – 2004 - 2005

Kit Contents	Description	Part Number	Qty
	Front Spring	4.8182F	2
	Rear Spring	4.8182R	2
	Front Bump Stop	BS770015	2
	Information Kit	EPAK	1
	Instructions	4.8182INST	1

NOTES: Read All Instructions Before Beginning Installation

- Installation of a **SPORTLINE** Spring set should only be performed by a qualified mechanic experienced in the installation and removal of suspension springs.
- Use of a hoist is highly recommended and will substantially reduce installation time.
- Never work on or under a vehicle unless it is properly supported by safety stands and wheels are blocked.
- **SPORTLINE** Springs are marked with **F** and **R** (located at the end of the part number) designating front and rear spring respectively.
- **SPORTLINE** Springs should be installed with the **Eibach** Logo right side up. All original stock spring isolators, dampers and tubing should be retained from the stock springs and used when installing the **SPORTLINE** Springs.
- After installation, it is always important to inspect and adjust the following if necessary:
 - Wheel alignment such as camber, caster & toe.
 - Tire and/or wheel fender clearance.
 - Brake line clearance and attachments.
 - Brake anti-locking and anti-skid system sensors.
- **Tire Rotation:** In order to increase the life of your tires, it is recommended to rotate your tires every 3,000 miles.

ALIGNMENT:

After installation, it will be necessary to perform a full vehicle alignment.


Bump Stop Instructions

Typical Bump-Stop

(Bump-Stop from your vehicle may have different shape)

FRONT

Replace the O.E. Front Bump Stop
With the Eibach Bump Stop
Part Number BS 770015.

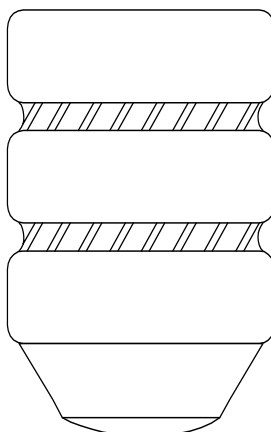

REAR

No Modification Necessary.