

Installation Instructions

Eibach Springs, Inc. • 264 Mariah Circle • Corona, California 92879-1751 • USA • Tech Support 800-222-8811 Ext 114



PRO-KIT # 4075.540

Honda, Element, 2007

Kit Contents	Description	Part Number	Qty
	Front Spring, Left	4063.001	1
	Front Spring, Right	4063.011	1
	Rear Spring	4063.002	2
	Information Kit	EPAK	1
	Instructions	4075.540INST	1

NOTES: Read All Instructions Before Beginning Installation

- Installation of a **PRO-KIT** Spring set should only be performed by a qualified mechanic experienced in the installation and removal of suspension springs.
- Use of a hoist is highly recommended and will substantially reduce installation time.
- **Never work on or under a vehicle unless it is properly supported by safety stands and wheels are blocked.**
- **PRO-KIT** Springs are marked with 001 and 002 (located at the end of the part number) designating front and rear spring respectively.
- **PRO-KIT** Springs should be installed with the Eibach Logo right side up. All original stock spring isolators, dampers and tubing should be retained from the stock springs and used when installing the **PRO-KIT** Springs.
- **After** installation, it is always important to inspect and adjust the following if necessary:
 - Wheel alignment such as camber, caster & toe
 - Tire and/or wheel fender clearance
 - Brake line clearance and attachments
 - Brake anti-locking and anti-skid system sensors
- **Tire Rotation:** In order to increase the life of your tires, it is recommended to rotate your tires every 3,000 miles.


Alignment Kits:

After installation, it will be necessary to perform a full vehicle alignment. Eibach offers the following alignment kits for this vehicle:

Part #	Front or Rear	Camber Adjustment
5.81280K	Front	+/- 1 3/4 Degrees.
5.67430K	Rear	- 2.0 / + 6.0 Degrees.

Bump Stop Trimming Instructions

Typical Bump-Stop
(Bump-Stop from your vehicle may have different shape)

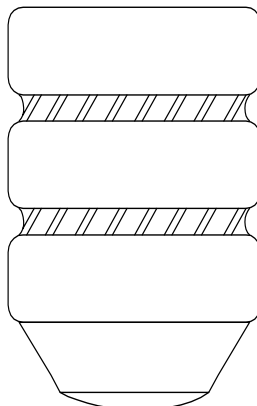

Front Bump Stop Trim
Top: 20mm

Rear Bump Stop Trim
Bottom: 20mm