

Installation Instructions

Eibach Springs, Inc. • 264 Mariah Circle • Corona, California 92879-1751 • USA • Tech Support 800-222-8811 Ext 114



PRO-KIT- #4085.140

Honda, CR-Z

Kit Contents	Description	Part Number	Qty
	Front Spring	4085.001	2
	Rear Spring	4085.002	2
	Crush Sleeve	SLV60660	2
	Information Kit	EPAK	1
	Instructions	4085.140INST	1


NOTES: Read All Instructions Before Beginning Installation

- Installation of a **PRO-KIT** Spring set should only be performed by a qualified mechanic experienced in the installation and removal of suspension springs.
- Use of a hoist is highly recommended and will substantially reduce installation time.
- **Never work on or under a vehicle unless it is properly supported by safety stands and wheels are blocked.**
- **PRO-KIT** Springs are marked with an **001** and an **002** (located at the end of the part number) designating front and rear springs.
- **PRO-KIT** Springs should be installed with the **Eibach** Logo right side up. All original stock spring isolators, dampers and tubing should be retained from the stock springs and used when installing the **PRO-KIT** Springs.
- **After** installation, it is always important to inspect and adjust the following if necessary:
 - Wheel alignment such as camber, caster & toe.
 - Tire and/or wheel fender clearance.
 - Brake line clearance and attachments.
 - Brake anti-locking and anti-skid system sensors.
- **Tire Rotation:** In order to increase the life of your tires, it is recommended to rotate your tires every 3,000 miles.
- **For MacPherson Strut type front suspension,** it is important to mark the orientation of the upper perch with respect to the lower perch before disassembly. This orientation must remain the same with the installation of the Pro Kit springs. Noise may result if this procedure is not performed correctly.

Note: During installation of the Eibach rear springs it is extremely important that all bushing related pivot points be re-torqued with the full weight of the vehicle on the suspension, this is done to prevent "bushing pre-load". This is easiest with the vehicle on a drive on type of hoist. If this is not done, bushing damage and un-even lowering may result.

Bump Stop Trimming Instructions

Typical Bump-Stop
(Bump-Stop from your vehicle may have different shape)

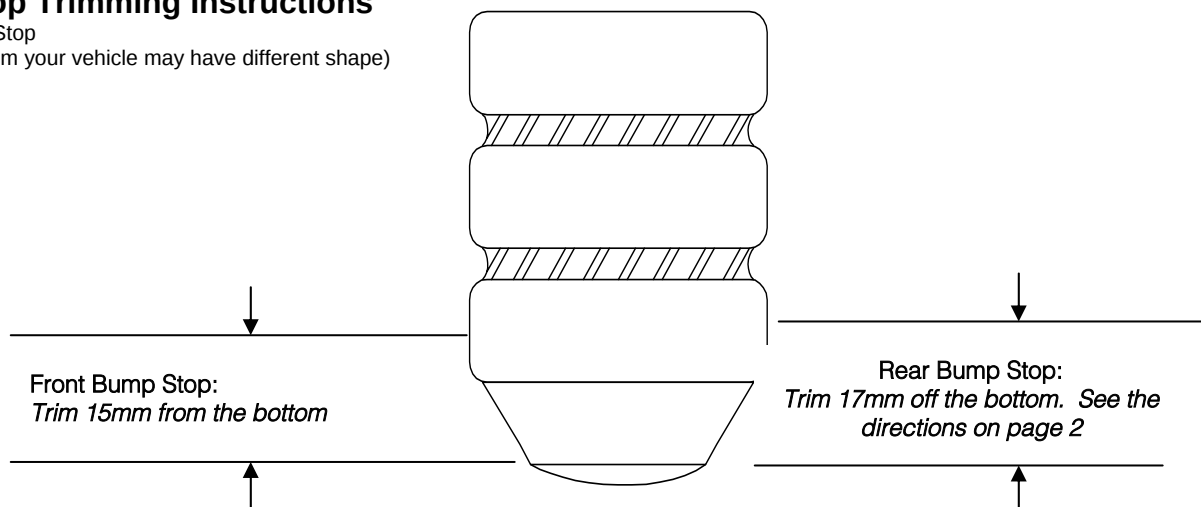

Rear bump stop removal

1. Remove the stock rear shocks from the vehicle.
2. Drill out the pinch point on the crush sleeve being careful not to damage the rod. See photo 1.



Photo1

3. Carefully remove the crush sleeve being careful not to damage the rod or the threads.
4. Remove the washer.
5. Remove the plastic boot.
6. Using a mallet or hammer gently tap upward on the bump stop retainer. See photo 2.



Photo 2

8. Remove the bump stop and trim according to the bump stop trimming directions shown on page 1.

9. Install newly trimmed bump stop onto OE shock along with bump stop retainer, dust boot, washer, and rubber bushing.
10. Install new crush sleeve part # SLV-60660 that is provide in the kit. Photo 3 shows the shock reassembled with the new sleeve.



Photo 3

11. Re install the rear shock.