



M-9603-FST COLD AIR INTAKE TUBE INSTALLATION INSTRUCTIONS

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD RACING PERFORMANCE PARTS.

Please visit www.fordracingparts.com for the most current instruction information

**!!! PLEASE READ ALL OF THE FOLLOWING INSTRUCTIONS CAREFULLY PRIOR TO INSTALLATION.
AT ANY TIME YOU DO NOT UNDERSTAND THE INSTRUCTIONS, PLEASE CALL THE FORD RACING
TECHLINE AT 1-800-367-3788 !!!**

KIT INCLUDES:

<u>Description:</u>	<u>Qty:</u>
Air Tube	1
Template	1
Push Pin	2



Factory Ford shop manuals are available from Helm Publications, 1-800-782-4356

M-9603-FST COLD AIR INTAKE TUBE INSTALLATION INSTRUCTIONS


NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD RACING PERFORMANCE PARTS.

Headlamp Assembly:

Removal:

NOTE: Removal steps in this procedure may contain installation details.

STEP 1: Remove LH (drivers side) headlamp, RH shown. Remove two screws, slide headlamp forward and disconnect wiring harness from headlamp.

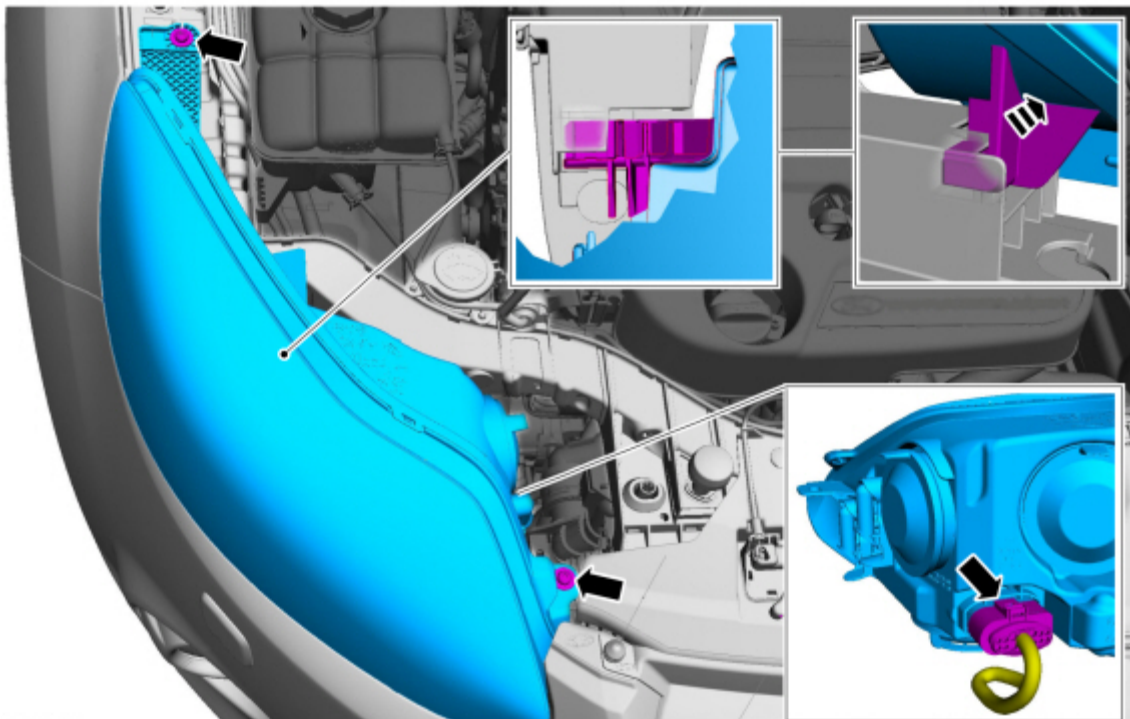

Installation:

NOTICE: Take extra care when installing the headlamp assembly as the fixings are easily damaged.

To install, reverse the removal procedure.

M-9603-FST COLD AIR INTAKE TUBE INSTALLATION INSTRUCTIONS

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD RACING PERFORMANCE PARTS.


Front Bumper Cover:

Removal:


NOTE: Removal steps in this procedure may contain installation details.

NOTE: The base model front bumper cover is shown; the ST model front bumper cover is similar.

STEP 1: **NOTE:** If equipped. Remove 3 bolts from lower splash pan. (Torque: 3 Nm)

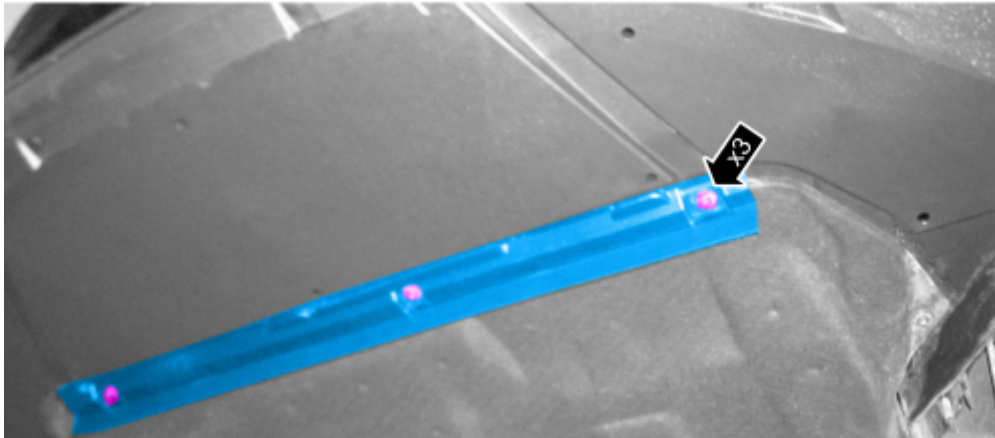

STEP 2: Remove 13 push pins from the lower front bumper splash pan

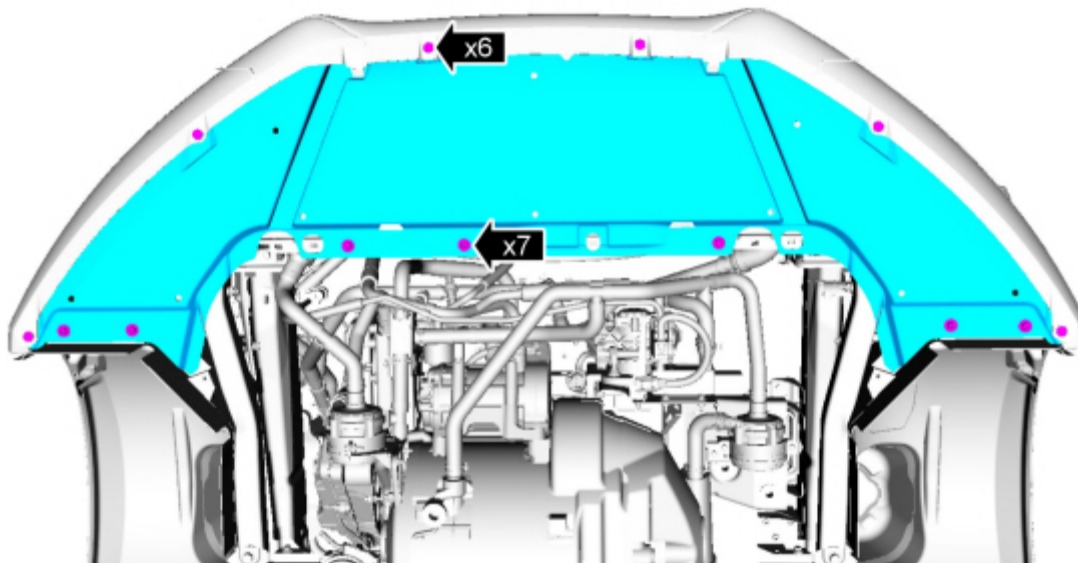


Factory Ford shop manuals are available from Helm Publications, 1-800-782-4356



M-9603-FST COLD AIR INTAKE TUBE INSTALLATION INSTRUCTIONS

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD RACING PERFORMANCE PARTS.

STEP 3: **NOTE:** *If equipped.* Disconnect wiring harness to fog lamps.

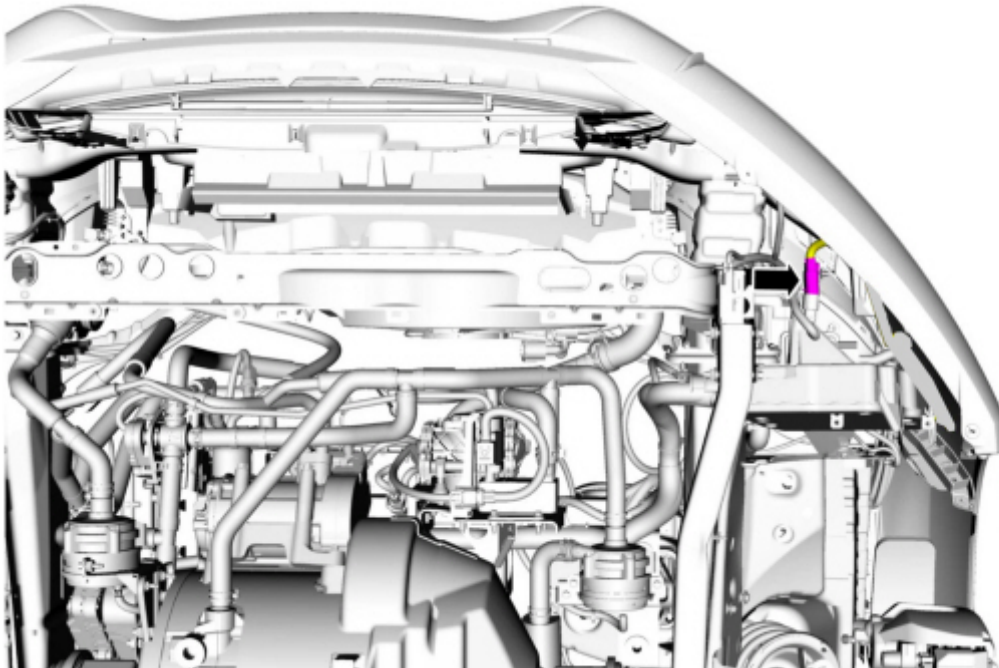


STEP 4: Pry up on hood release cable assembly to remove.

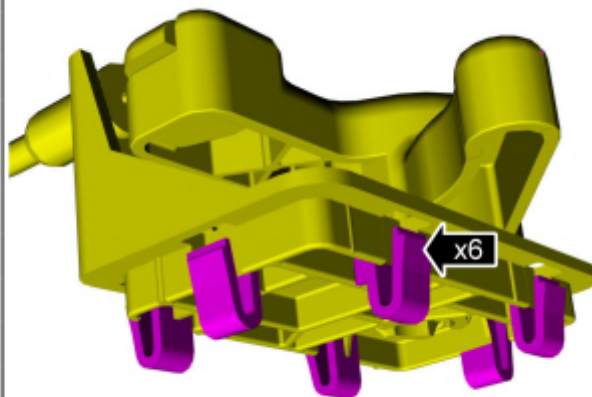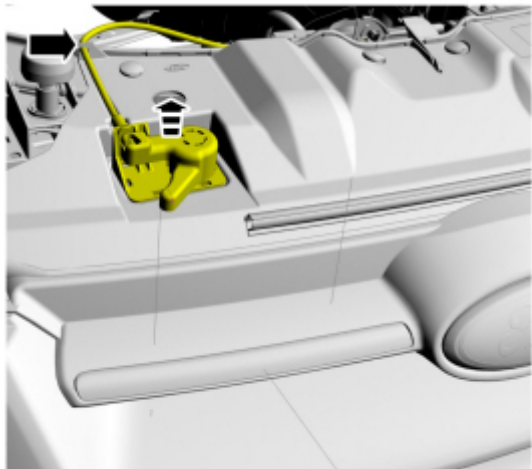


M-9603-FST COLD AIR INTAKE TUBE INSTALLATION INSTRUCTIONS

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD RACING PERFORMANCE PARTS.

STEP 5: Remove 4 push pins and 2 torque screws from lower front bumper cover. (*Torque: 4 Nm*)

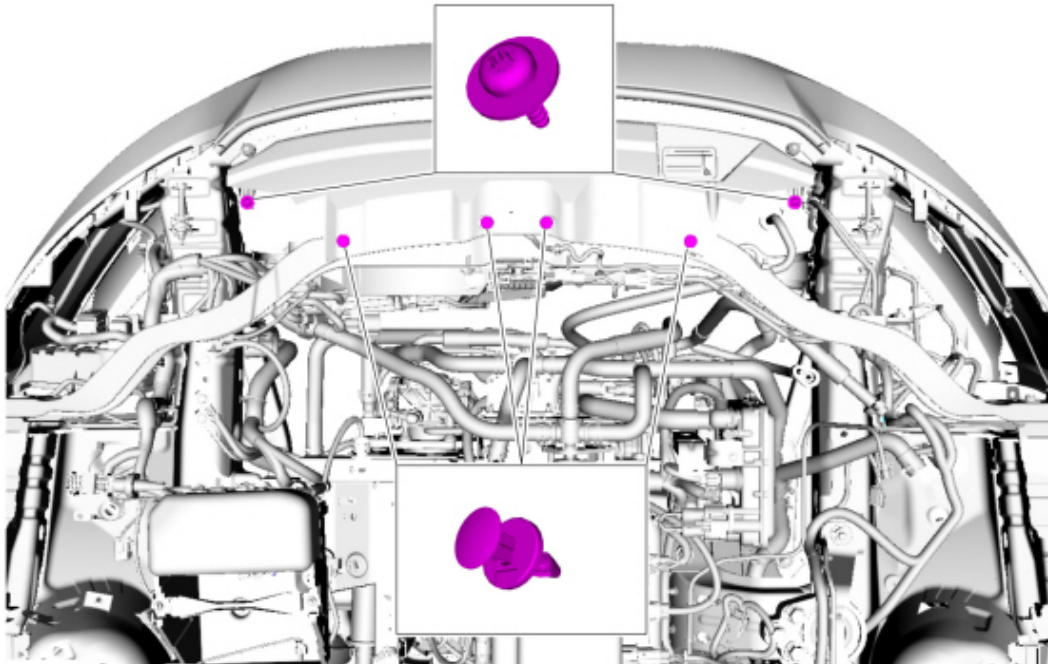

STEP 6: Remove front bumper cover by pulling corners gently out of fenders and by lifting plastic tabs.

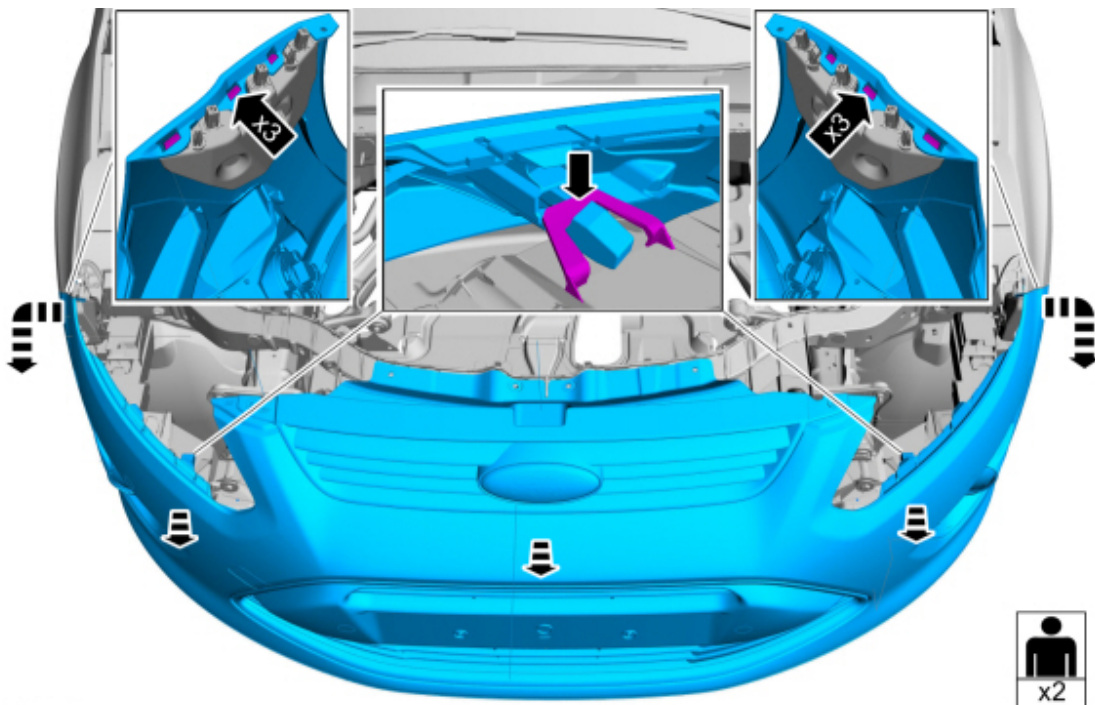

Factory Ford shop manuals are available from Helm Publications, 1-800-782-4356

M-9603-FST COLD AIR INTAKE TUBE INSTALLATION INSTRUCTIONS

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD RACING PERFORMANCE PARTS.

STEP 7: Take the supplied template found on the last page of these instructions and attach to shroud. Align template to edge of shroud (see figure below). Mark area to be cut out.

WARNING! Verify template is to scale from dimensions on template. Template may have to be reduced or enlarged.



STEP 8: Cut hole in shroud by first drilling a pilot hole. Then, with a proper cutting tool, cut along mark from template.

NOTE: Clean up cut hole with file for proper fit.




M-9603-FST COLD AIR INTAKE TUBE INSTALLATION INSTRUCTIONS

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD RACING PERFORMANCE PARTS.

STEP 9: Remove 2 push pins from the factory air inlet tube and discard tube/push pins.

NOTE: Use 2 new supplied push pins.

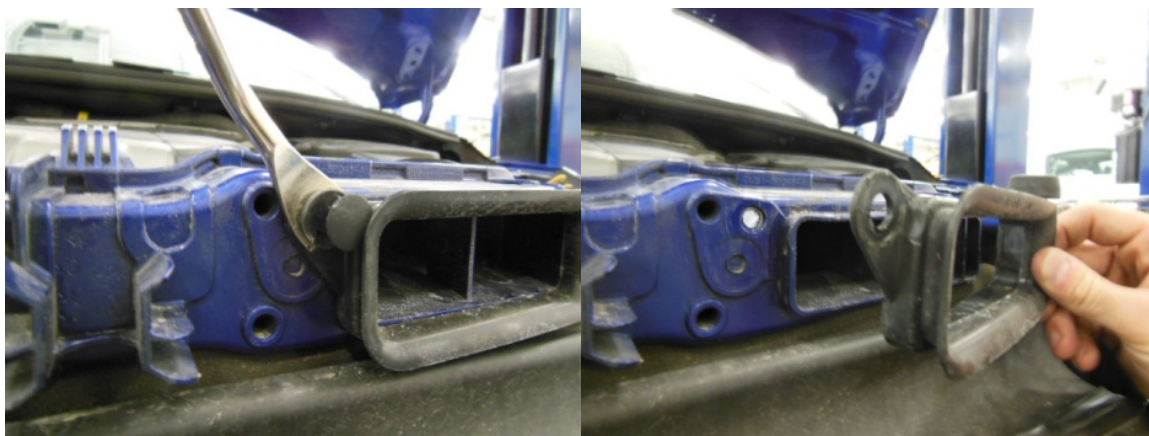


STEP 10: Assemble new air inlet tube by snapping together both pieces. Install onto vehicle and re-install 2 push pins.



Installation:

To install, reverse the removal procedure.

CUT TEMPLATE

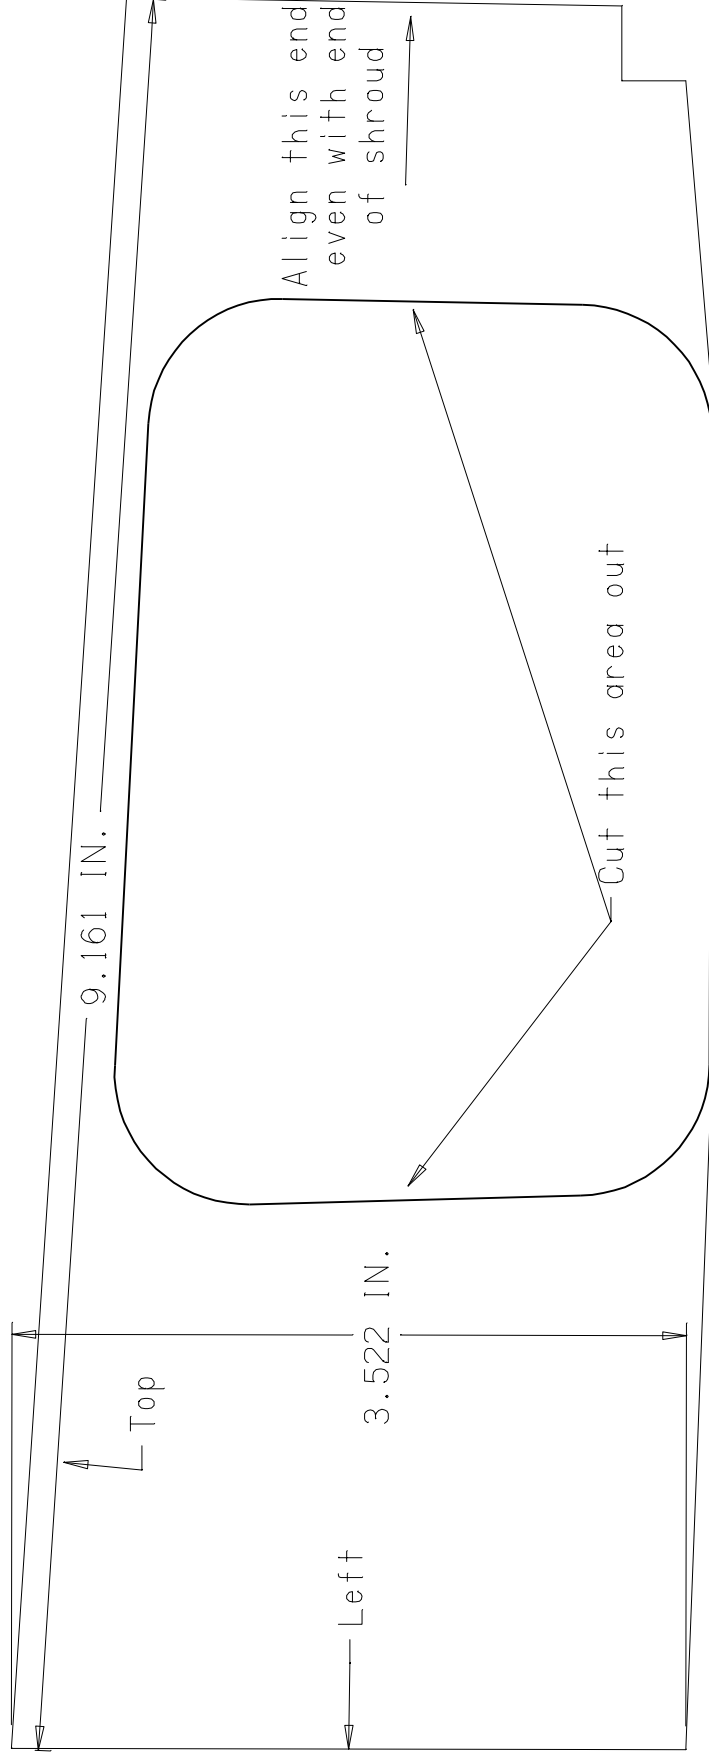

WARNING! Verify template is to scale from dimensions on template. Template may have to be reduced or enlarged.