



# SPYDER

WWW.SPYDERAUTO.COM

## INSTALLATION GUIDE:

ALT-YD-JGC05-LED-(ALL COLORS)

### Tools Required

T-20 Torx Driver



**\*Please Note\***

If you are unfamiliar with the installation processes, professional installation is highly recommended.



1) Open the tailgate.



2) Remove the [2x] T-20 Torx screws securing the tail light.




3) Unseat the OEM tail light.



4) Disconnect the wiring harness.



5) Remove reverse bulb socket from the OEM tail light. Remove the reverse bulb from its socket. Never touch exposed bulbs with bare hands.

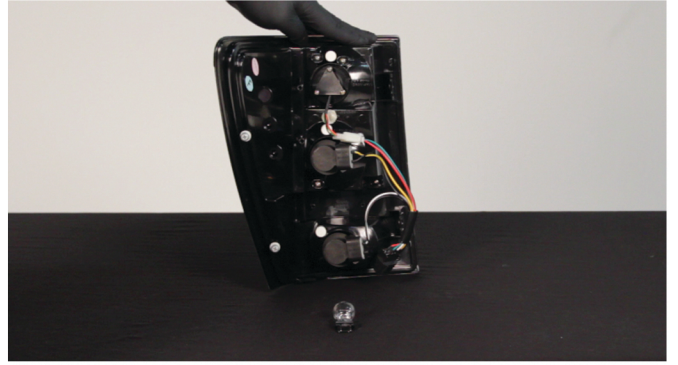

6) Transfer the reverse lamp bulb to the white and black wire reverse socket of your Spyder tail light, then reinstall the socket. Now your Spyder tail light is ready to install.



7) Connect the Spyder tail light to the OEM wiring harness.



8) Seat the Spyder tail light.



9) Reinstall the two T-20 Torx screws.



10) Close the tailgate and enjoy your new Spyder tail lights!



For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.

[http://youtu.be/k\\_\\_j\\_sn0-Tk](http://youtu.be/k__j_sn0-Tk)

## Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is a guide only, designed to save you time during the installation process. We take no responsibility and cannot be held liable for improper installation. If you do not know how to install your product or are not comfortable doing it yourself, please seek professional installation.