


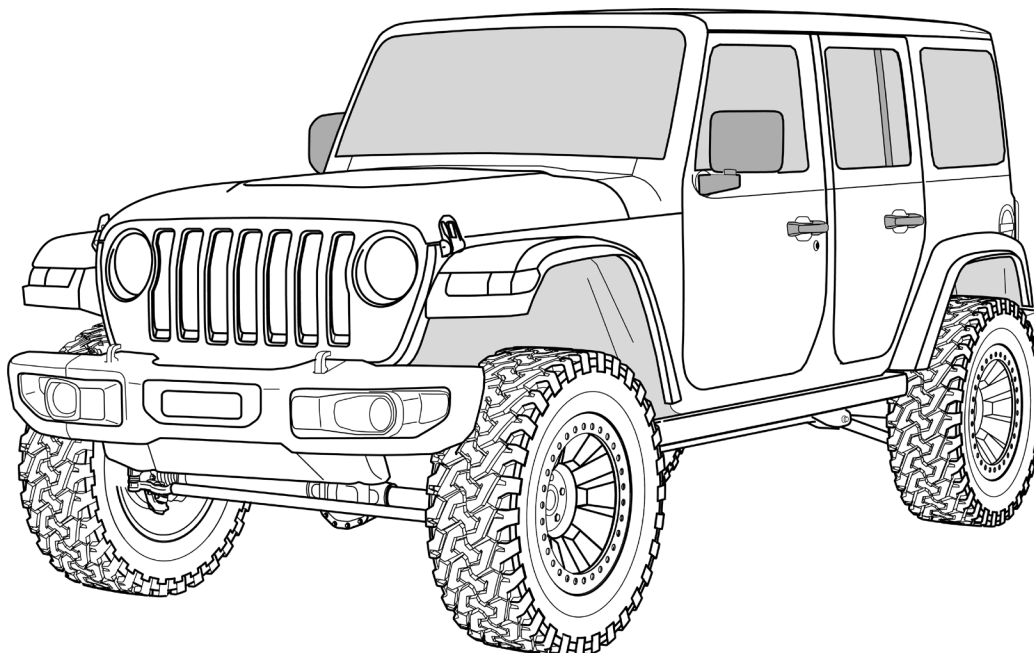

Jeep JL 3.5" Spring Lift

www.TERAFLEX.com



Important Notes:

Prior to beginning this install, or any installation, read the instructions thoroughly to familiarize yourself with the required steps. Evaluate if you are experienced and capable to personally perform these modifications. A factory service manual should be used in conjunction with these installation instructions.

This product will change the highway handling characteristics of your vehicle, exercise caution. After altering the suspension it is always advisable to have an alignment done by a competent 4 wheel drive shop or by an alignment shop that is experienced with lifted 4 wheel drive vehicles.

Refer to the parts list to ensure that all necessary components and hardware has been included. If any parts are missing please contact your local TeraFlex dealer for assistance.

NOTE: Some form of caster correction is required for the base spring lift kit

If a 37" tire is being installed on a Sport or Sahara additional up travel limit may be required using Bumpstop Spacer Kit #1959300.




Tools Needed:



- | | |
|--|---------------------------|
| - Metric Sockets and Open End Wrenches | - Factory Service Manual |
| - Torque Wrench | - General Mechanics Tools |
| - Drill and 1/2" Drill Bit | |



Maintenance Note:

After the first 300 miles and every 3,000 miles after that, re-torque all the suspension components and bolts.


Spring Box Components

		Description	Item #	Alpine CT3		Sport ST3		Base Spring Lift	
				4DR	2DR	4DR	2DR	4DR	2DR
	1	Front	02-21-401-250-1	2	-	2	-	2	-
			02-21-201-250-1	-	2	-	2	-	2
	2	Rear Left	02-22-411-250-1	1	-	1	-	1	-
			02-22-211-250-1	-	1	-	1	-	1
	3	Rear Right	02-22-421-250-1	1	-	1	-	1	-
			02-22-221-250-1	-	1	-	1	-	1
	4	Front Bumpstops	12-01-109-200	2	2	2	2	2	2
	5	Rear Bumpstops	12-01-209-200	2	2	2	2	2	2
	6	Rear Bumpstop Bracket	12-02-209-002	2	2	2	2	2	2
	7	Rear Bumpstop Mounting Strap	12-02-209-001	2	2	2	2	2	2
	8	Front Bumpstop Spacers	12-02-109-050	4	4	4	4	4	4
	9	Rear Bumpstop Spacers	12-02-209-050	4	4	4	4	4	4
	10	Brake Line Anchor Kit	1101255	1	1	1	1	1	1
	11	Front Swaybar link 10.75"	744500	2	2	2	2	2	2
	12	Rear Swaybar Link 11.50	21-01-001-115	2	2	2	2	2	2
	13	M10 x 1.5 Fuji Nut	23-07-03-001	6	6	6	6	6	6
	14	M10 x 1.5 x 100mm Flat Socket Cap Screw	45-04-003-001	2	2	2	2	2	2
	15	M10 x 1.5 x 50mm Socket Cap Screw	45-03-003-001	4	4	4	4	4	4
	16	M10 x 1.5 x 25mm Button Socket Cap Screw	45-05-003-003	4	4	4	4	4	4
	17	M10 Lock Washer	45-12-002-001	4	4	4	4	4	4
	18	Nut Wrench Tool	600271	1	1	1	1	1	1
	19	M12 x 1.75 x 55mm Button Socket Cap Screw	45-05-003-001	2	2	2	2	2	2
	20	M12 x 1.75mm Black Fuji Nut	23-07-02-002	2	2	2	2	2	2

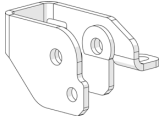
Spring Box Components		Description	Item #	Alpine CT3		Sport ST3		Base Spring Lift	
				4DR	2DR	4DR	2DR	4DR	2DR
		21 Front Track Bar Bracket	15-04-109-006	1	1	1	1	1	1
		22 M12 x 1.75 Flanged Serrated Nut	45-12-003-001	1	1	1	1	1	1
		23 M14 x 2.0 x 80mm Hex Flange Bolt	45-02-003-011	1	1	1	1	1	1
		24 M12 x 1.75 x 25mm Hex Flange Bolt	45-02-003-013	2	2	2	2	2	2
		25 M12 X 1.75 Flange Top Lock Nut	45-08-003-001	1	1	1	1	1	1
		26 M14 x 2.0 Flange Top Lock Nut	45-08-003-003	1	1	1	1	1	1

	Description	Item #	Alpine CT3		Sport ST3		Base Spring Lift	
			4DR	2DR	4DR	2DR	4DR	2DR
	Jounce Bumpers Kit	1959200	1	1	1	1	-	-
	Alpine Control Arm Kit	1416510	1	1	-	-	-	-
	Front Arm Drop Bracket Kit	1938125	-	-	1	1	-	-
	Rear Track Bar Kit	1953600	1	1	1	1	1	1

Note: If installing Alpine Control Arm Kit Refer to Instruction #999321 before continuing.


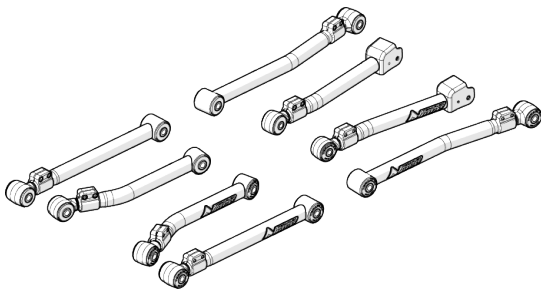


Note: If installing Front Drop Bracket Kit Refer to Instruction #999309 before continuing.

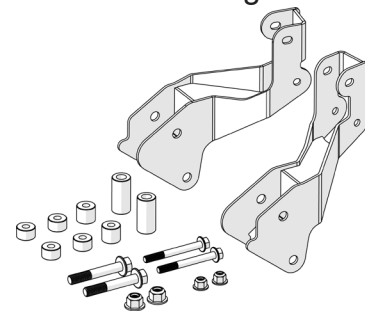


LEAVE CONTROL ARM BOLTS LOOSE UNTIL THE END OF THE LIFT INSTALLATION


FRONT INSTALLATION LIFT AND SUPPORT AT FRAME


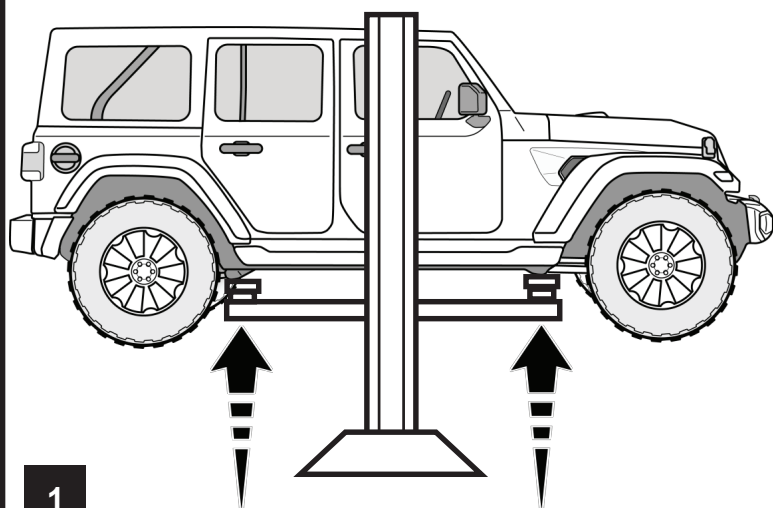
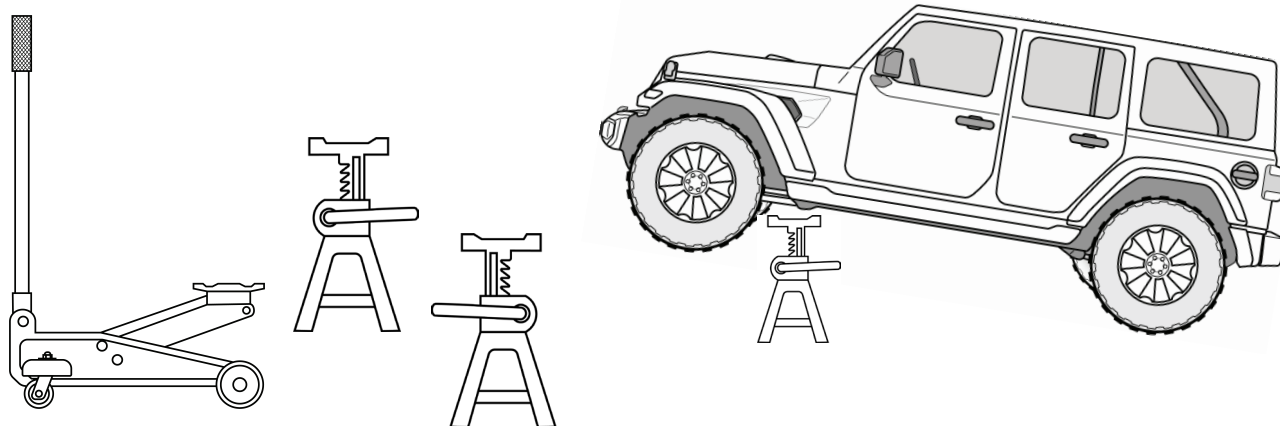


REMOVE FRONT TIRES

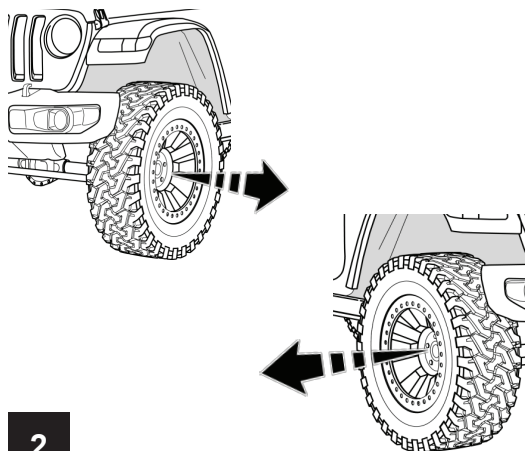


SUPPORT FRONT AXLE

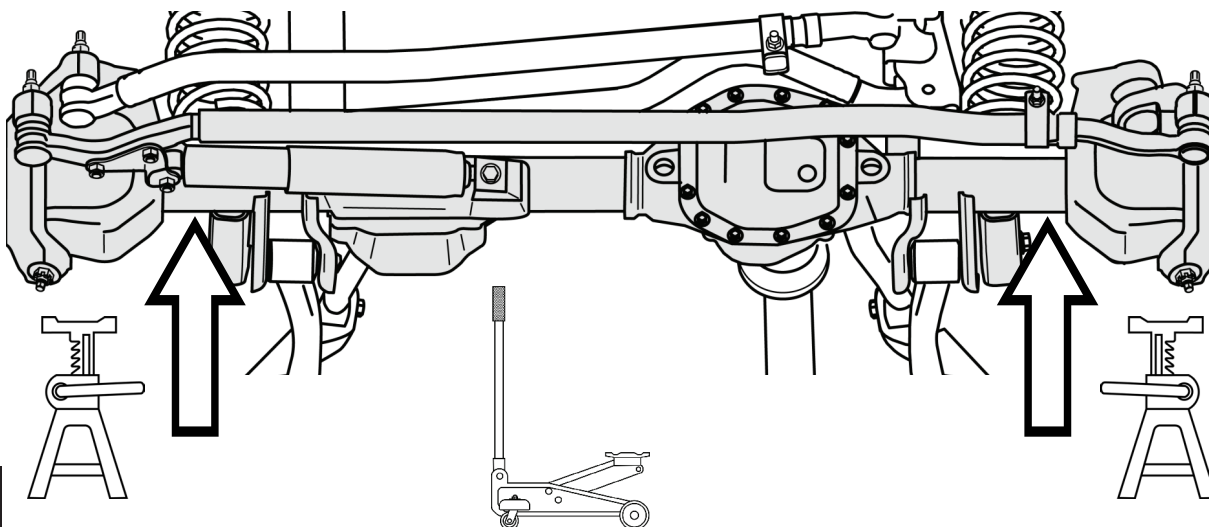

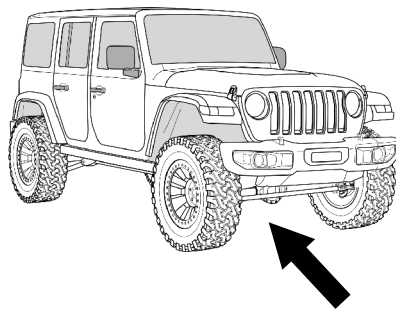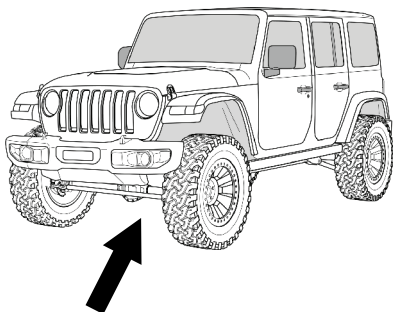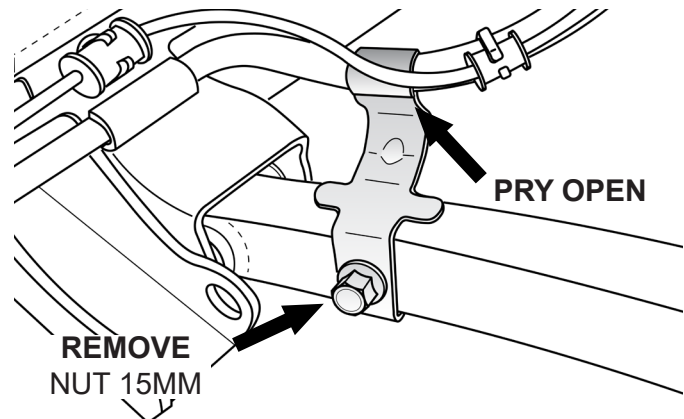
REMOVE SWAY BAR LINKS & REMOVE TRACK BAR BOLT AT AXLE**REMOVE &
DISCARD****BOLT
18mm****STUD 6mm
NUT 18mm****BOLT
21mm****4****REMOVE
NUT 18mm****STUD 6mm HEX KEY****REMOVE &
DISCARD****REMOVE
NUT 18mm****BOLT
18mm****5****REMOVE AND DISCARD BRAKE LINE BRACKETS FROM LOWER CONTROL ARMS
AND SPRING MOUNTS****PRY OPEN****REMOVE
NUT 10MM****2X****6**

DISCONNECT ACTUATORS AND VENT HOSE AT THE FRONT AXLE

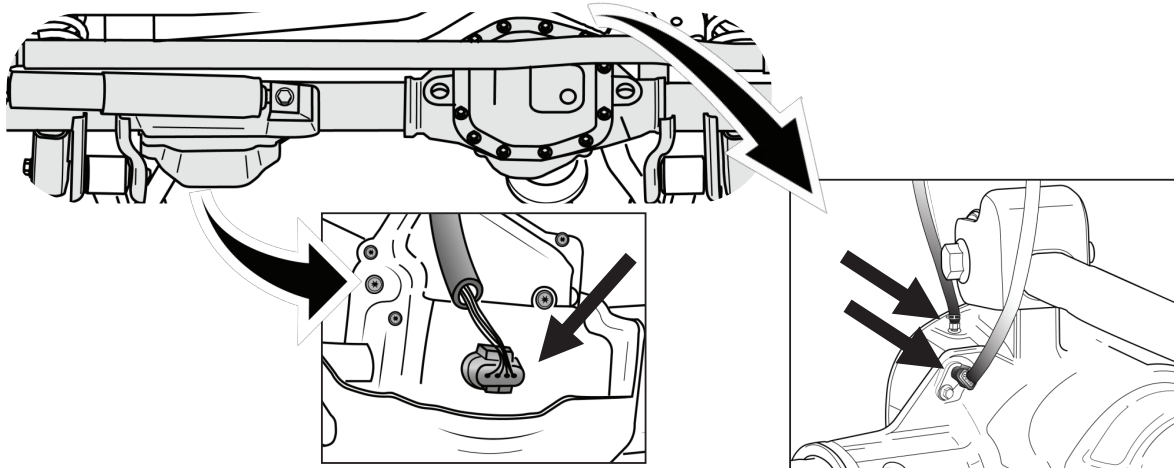


7


LOOSEN FRONT CONTROL ARM BOLTS DO NOT REMOVE THE CONTROL ARM BOLTS

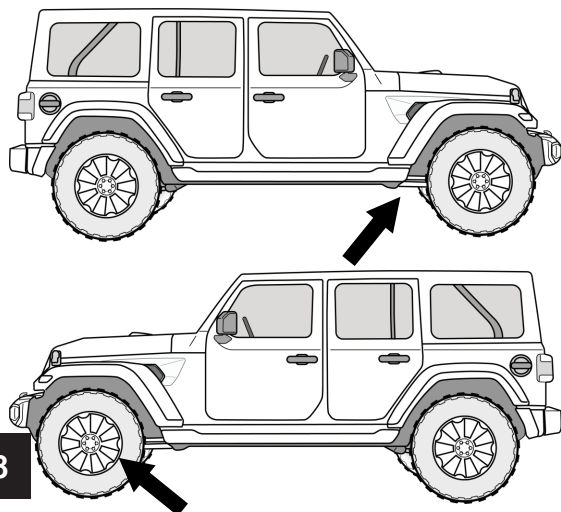

8

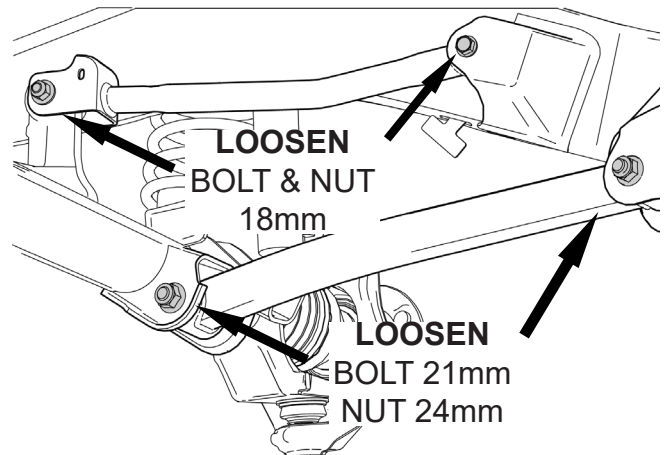



REMOVE FRONT SHOCKS

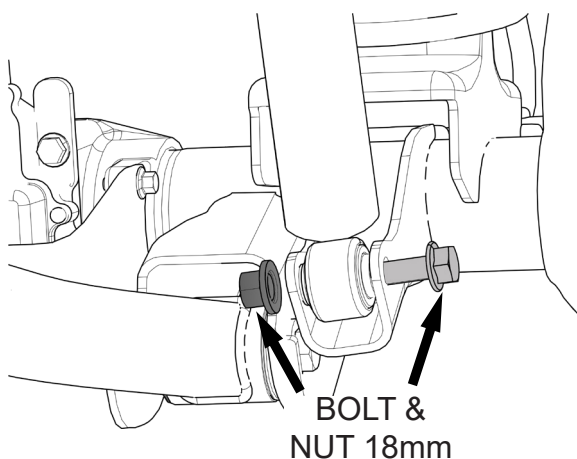


2X

9

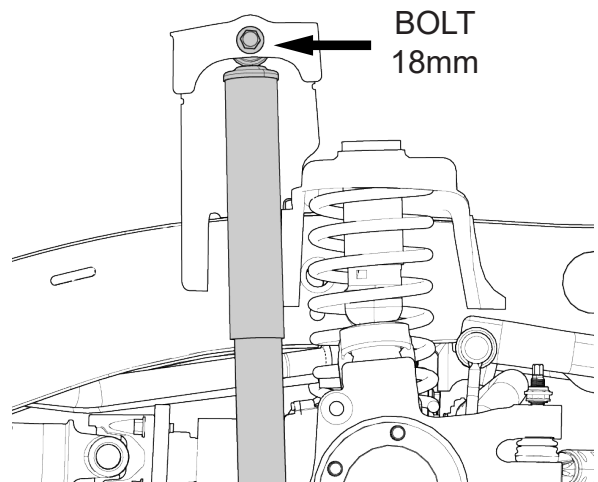


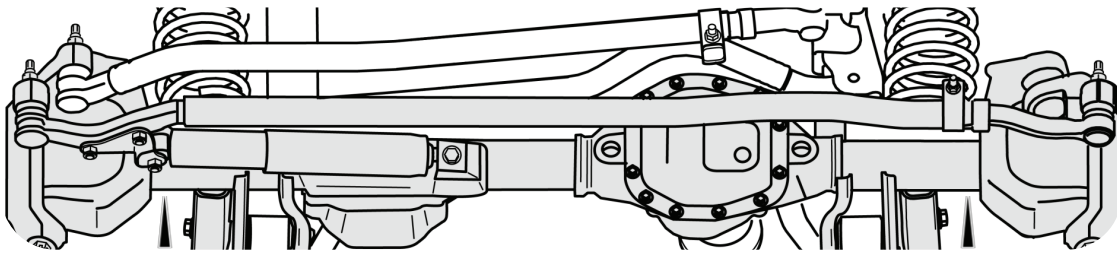LOWER AXLE AND REMOVE FRONT SPRINGS


**NOTE: REMOVE ANY
PLASTIC RETAINERS
FROM WIRING OR
HOSES AS NEEDED.**

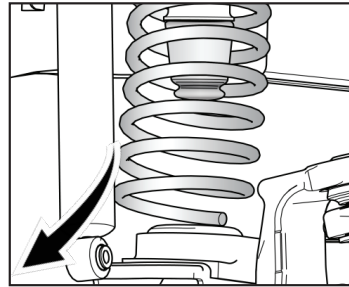**2X****10**


**Note: If installing Falcon Jounce
Bumpers refer to instruction
#999308 before installing springs.**

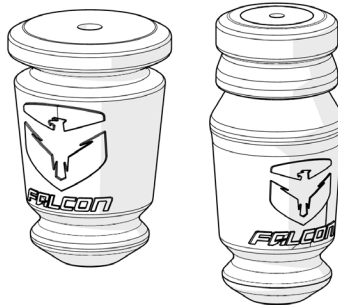**2X****11****INSTALL BUMPSTOP INTO NEW FRONT SPRING**

**TIP: ZIP TIE
BUMPSTOP
TO SPRING**

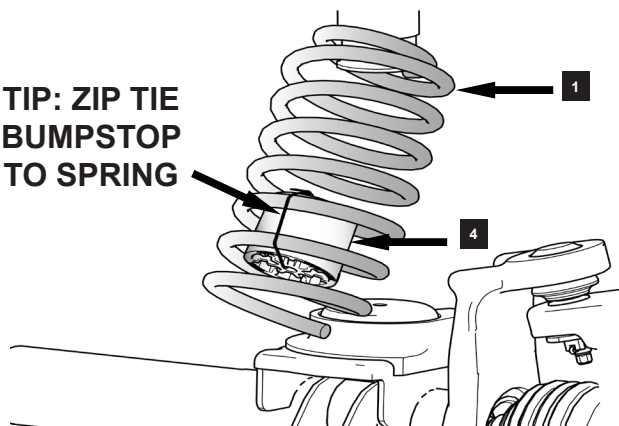**2X****12**


**NOTE: REFER TO PAGE 19
FOR BUMPSTOP SPACER
GUIDE**

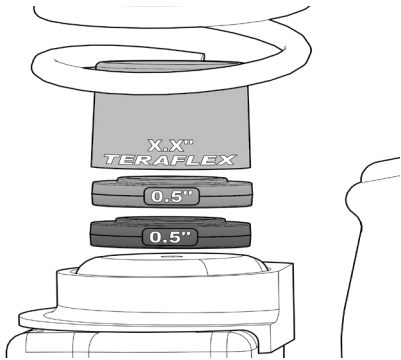


2X

13

**TORQUE
12 FT-LBS**

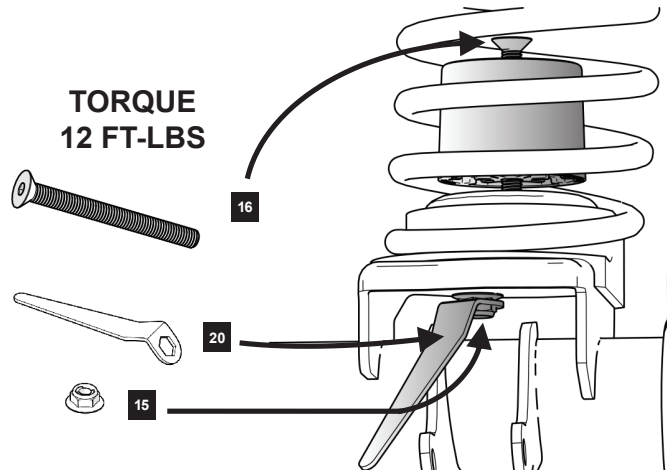


FULLY SEAT THE SPRINGS INTO THE LOWER SPRING ISOLATOR

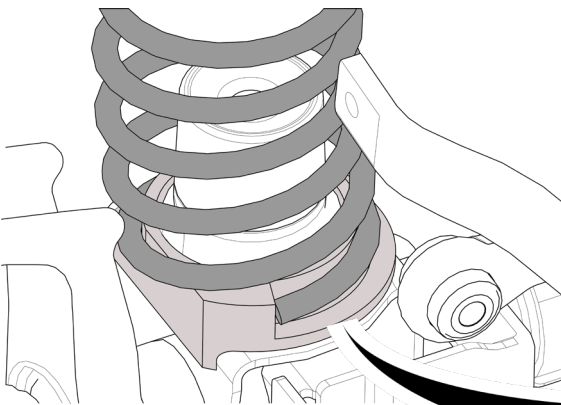


2X

14

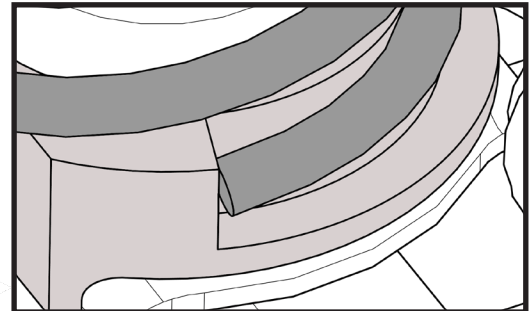


RAISE AXLE & INSTALL SHOCKS

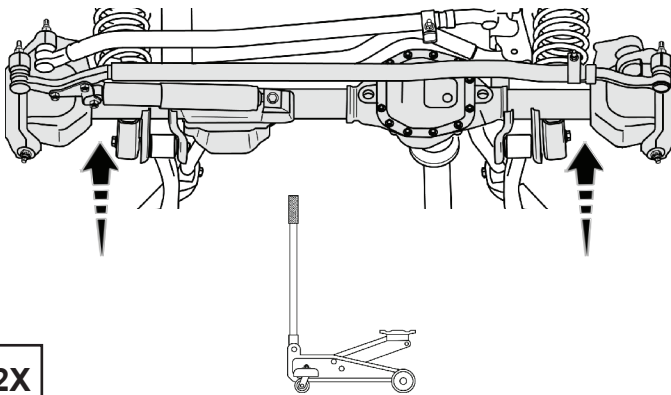


2X

15



**INSTALL FRONT FALCON SHOCKS AT
THIS TIME**

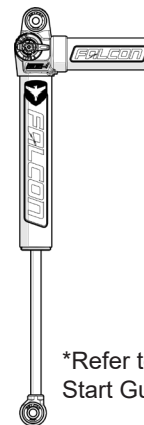

**Refer to the Quick
Start Guide.*

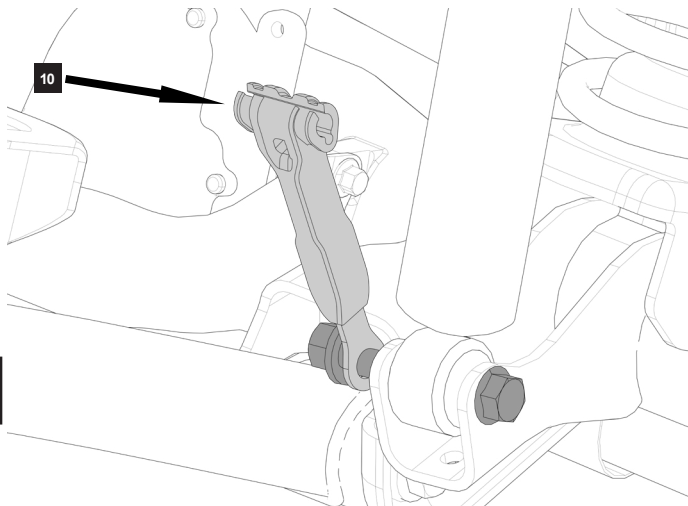INSTALL BRAKE LINE ANCHORS

REFER TO THE INSTRUCTIONS ON THE BACK OF THE BRAKE LINE ANCHOR KIT BOX FOR PROPER INSTALLATION.

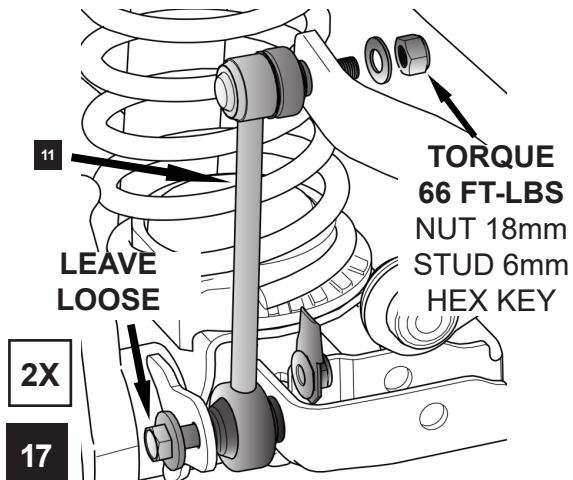
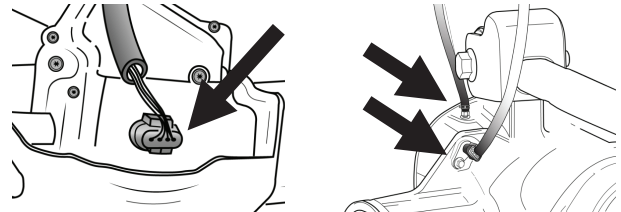
INSTALL NEW SWAY BAR LINKS**RECONNECT CONNECTIONS TO FRONT AXLE**

RECONNECT PLASTIC RETAINERS FROM WIRING OR HOSES AS NEEDED.




NOTE: DO NOT TIGHTEN THE CONTROL ARM BOLTS UNTIL THE JEEP IS ON THE GROUND

18 WAIT TO RE-INSTALL TRACK BAR UNTIL THE END OF THE LIFT KIT INSTALL.


NOTE: IF ONLY FRONT OF JEEP WAS LIFTED, REINSTALL TIRES AND LOWER JEEP BACK TO THE GROUND BEFORE LIFTING THE REAR





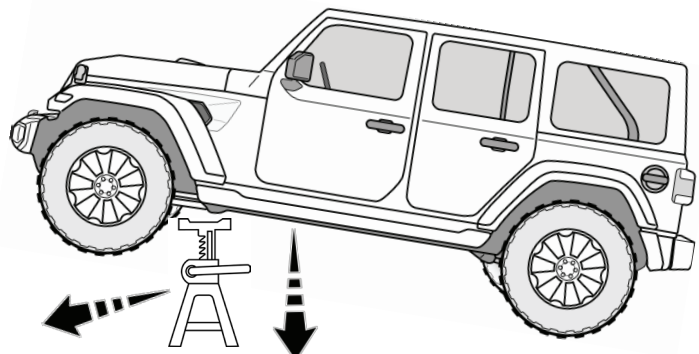
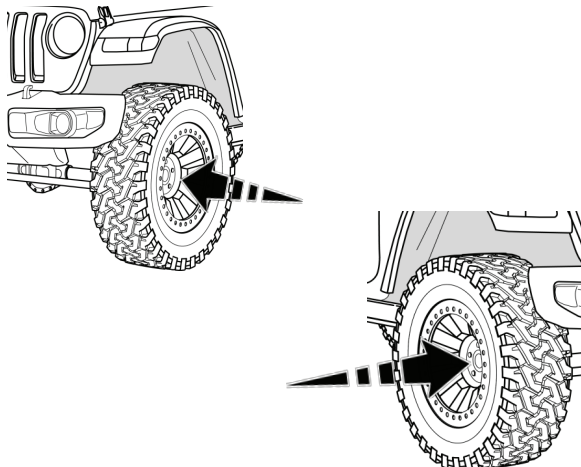


REAR INSTALL LIFT AND SUPPORT AT FRAME

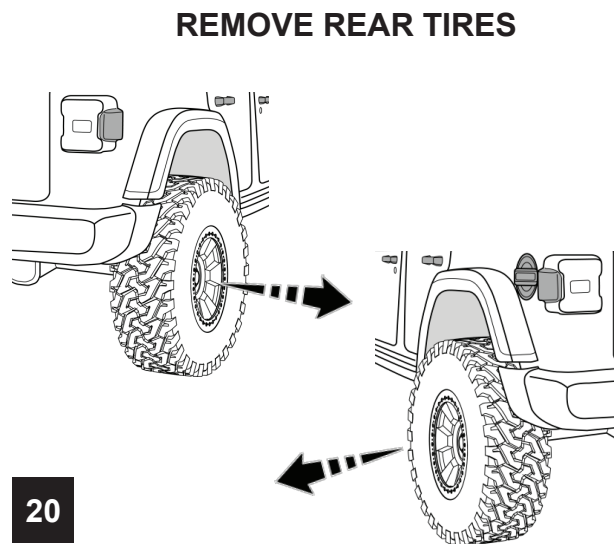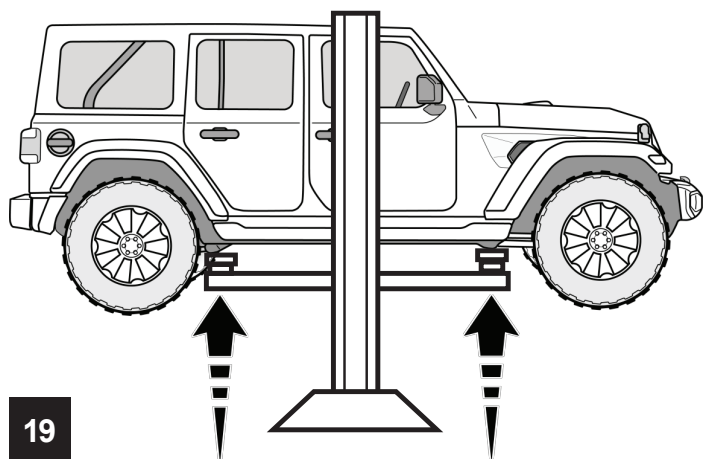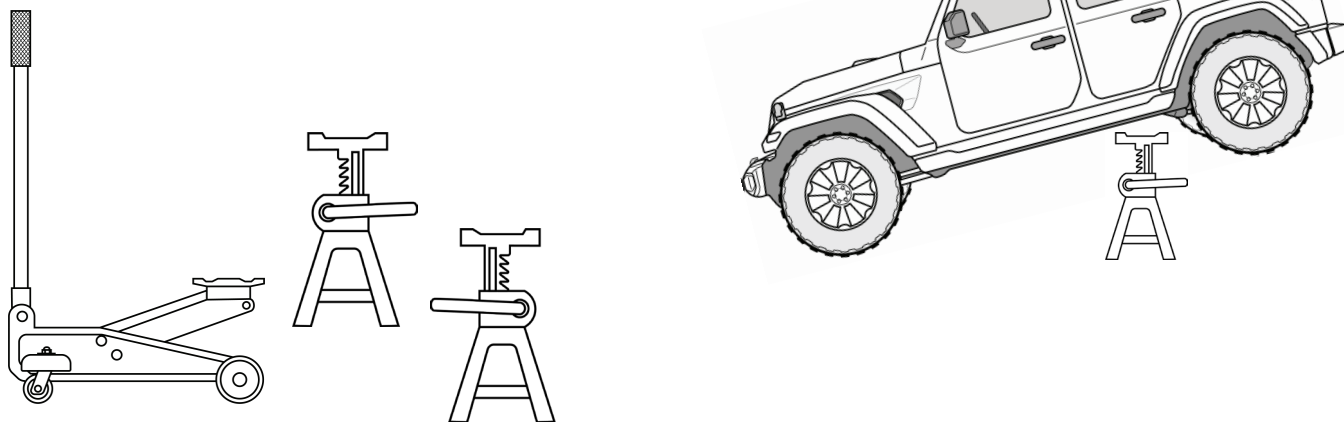


SUPPORT REAR AXLE

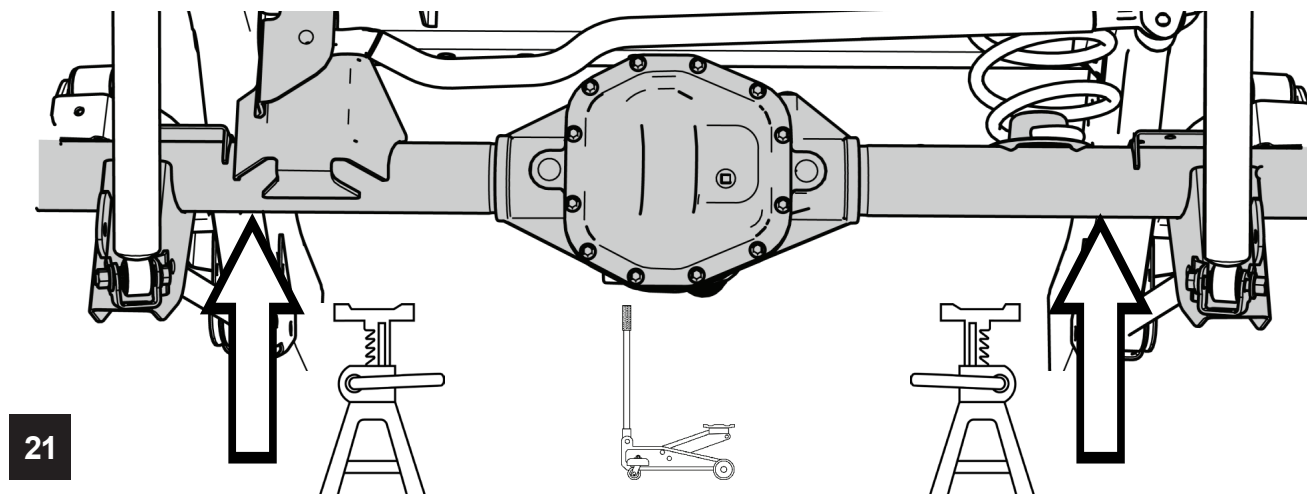


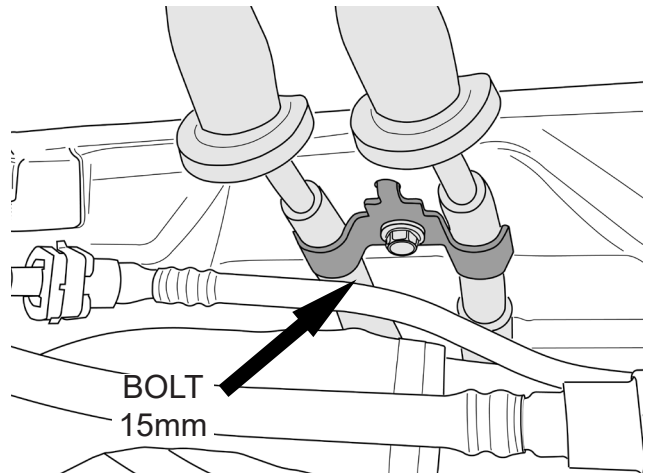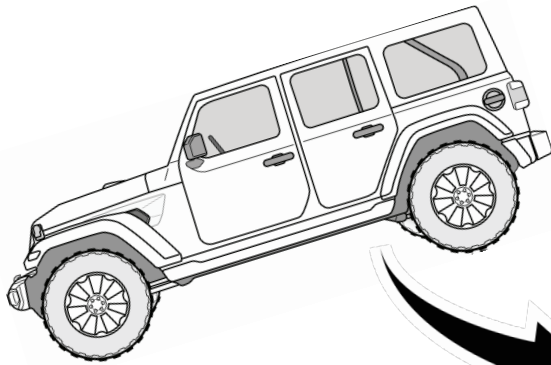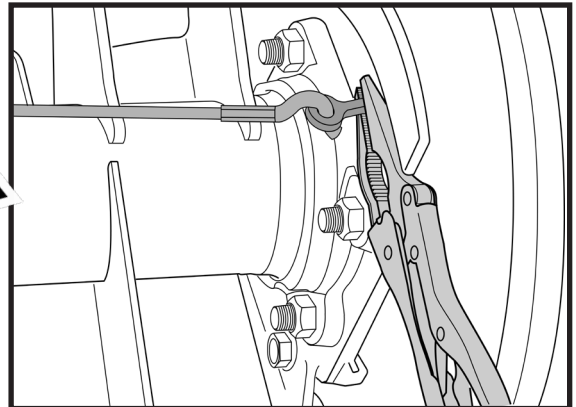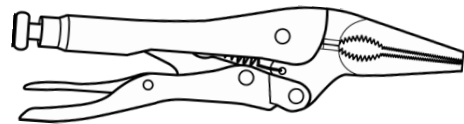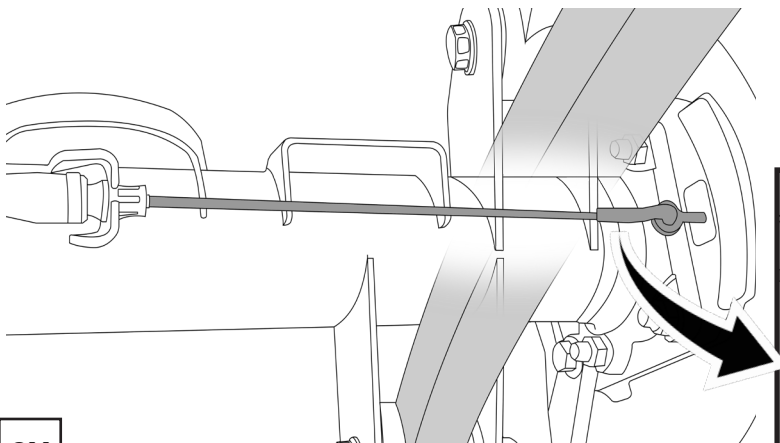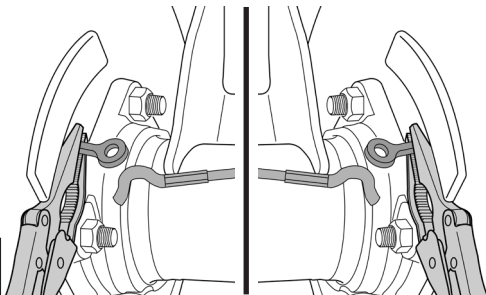REMOVE E-BRAKE CABLE BRACKET AND DISCARD**22****SET THE E-BRAKE AND CLAMP BOTH E-BRAKE EYELETS AGAINST BACKING PLATES WITH LOCKING PLIERS****2X****23****RELEASE E-BRAKE AND DISCONNECT CABLES FROM BOTH EYELETS AND AXLE BRACKETS****2X****24**

NOTE: DO NOT REMOVE LOCKING PLIERS FROM E-BRAKE EYELETS

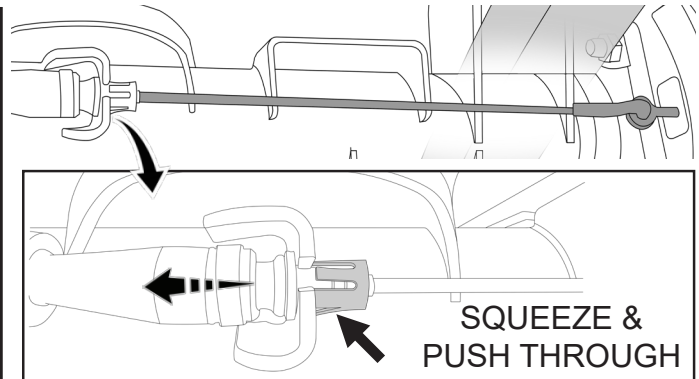


ROUTE E-BRAKE CABLES UNDER CROSS MEMBER AND FUEL LINES.

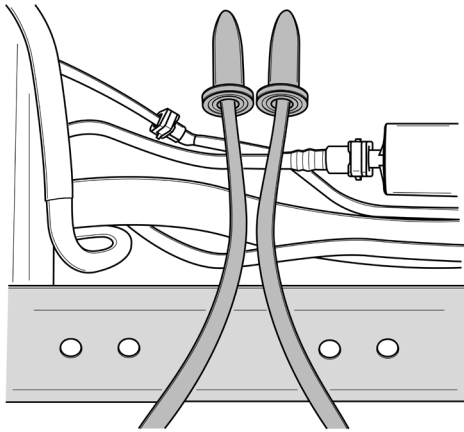

25

RECONNECT E-BRAKE CABLES TO THE AXLE BRACKETS AND THEN THE E-BRAKE EYELETS.

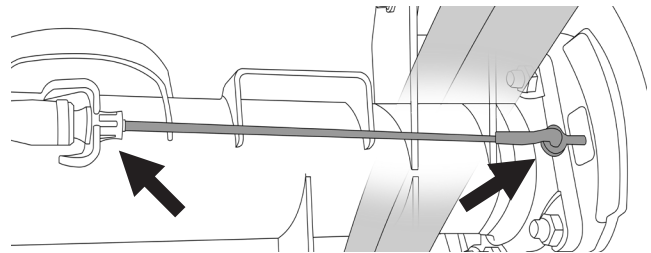


2X

REMOVE PLIERS FROM E-BRAKE EYELETS

26


LOOSEN REAR CONTROL ARM BOLTS

DO NOT REMOVE THE CONTROL ARM BOLTS

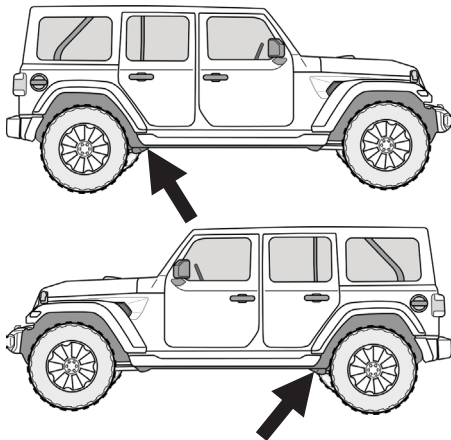


2X

27

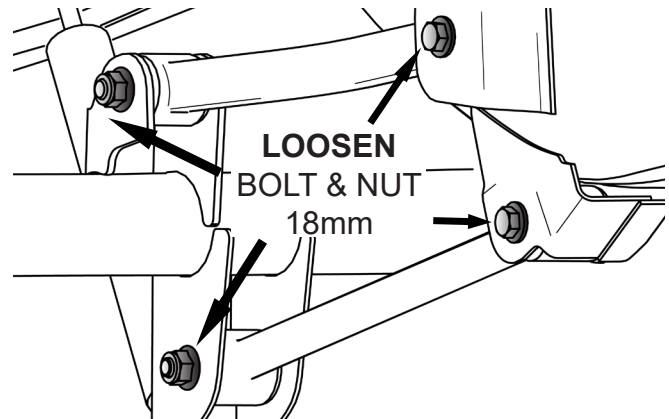

**LOOSEN
BOLT & NUT
18mm**

REMOVE AND DISCARD SWAY BAR LINKS



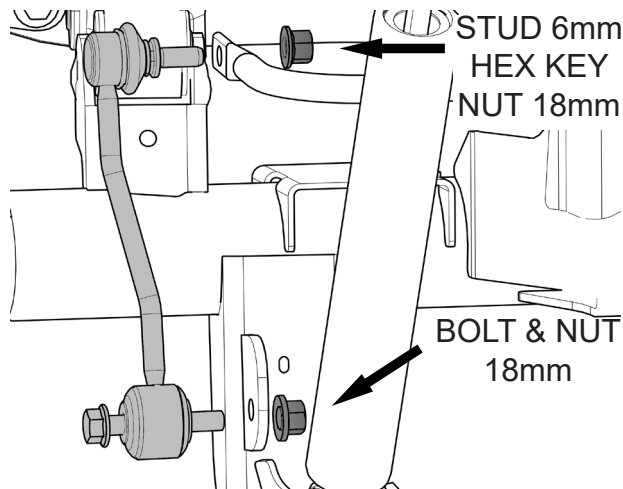



**STUD 6mm
HEX KEY
NUT 18mm**

**BOLT & NUT
18mm**


2X

28

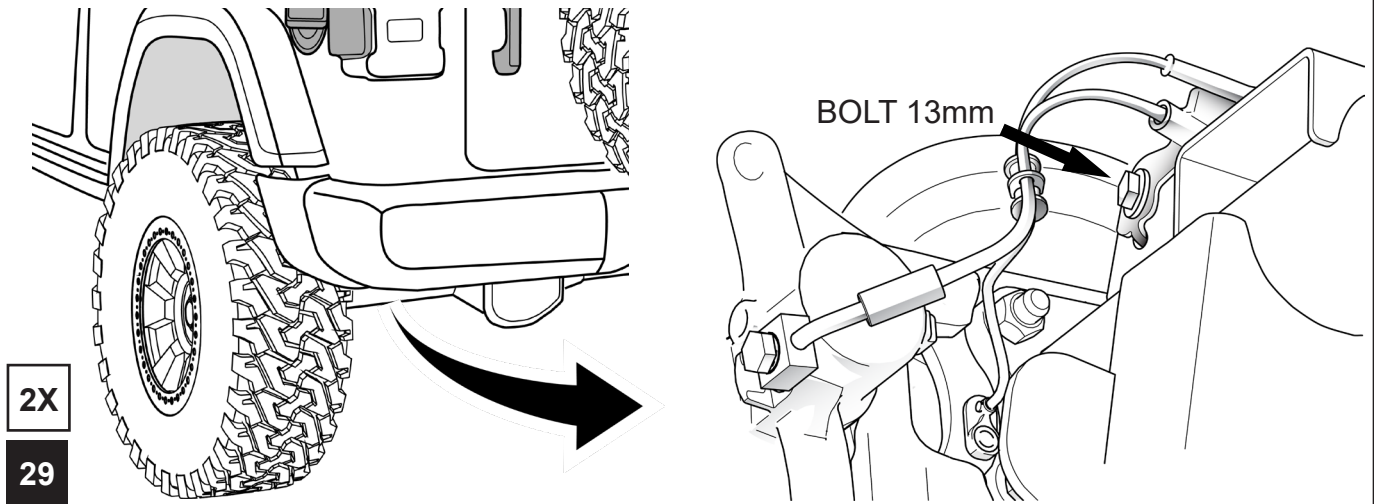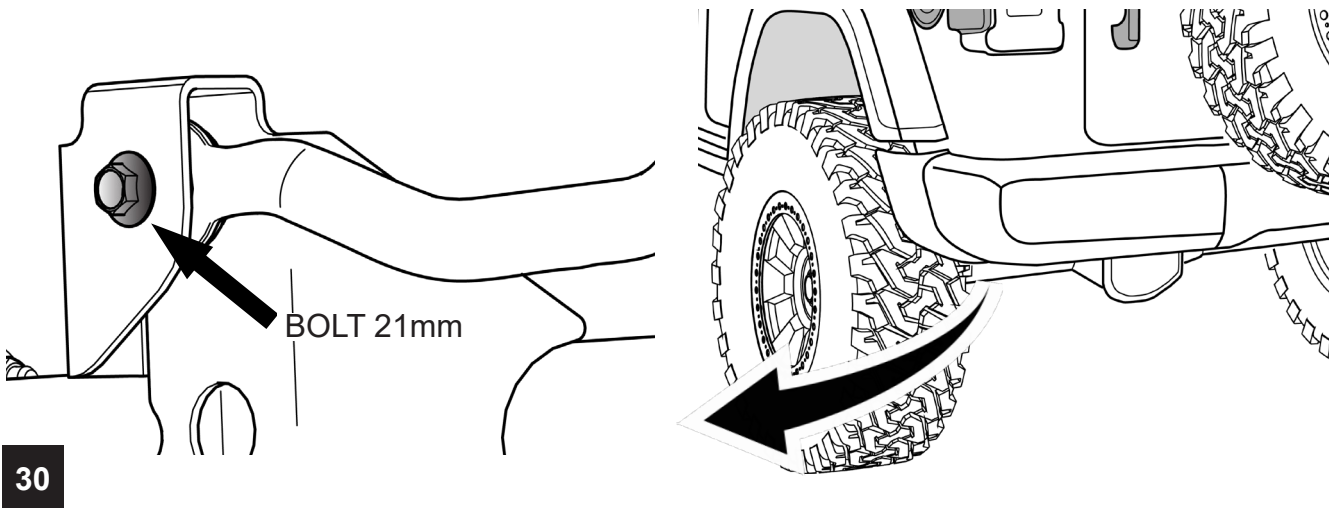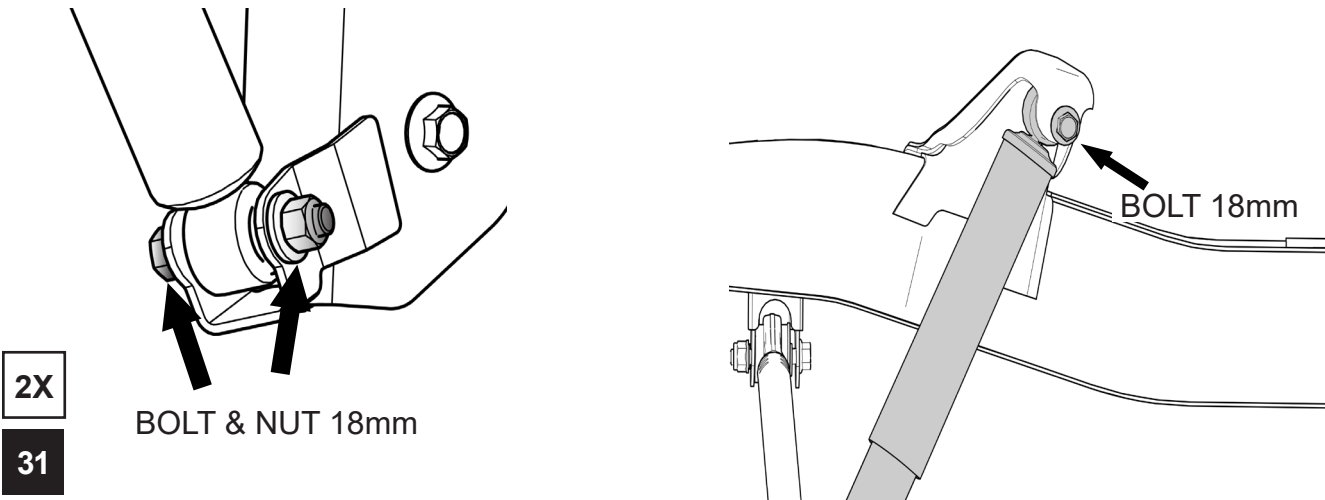REMOVE BRAKE LINE BRACKETS FROM BOTH SIDES OF THE AXLE**REMOVE THE TRACK BAR FROM THE AXLE****REMOVE THE REAR SHOCKS**

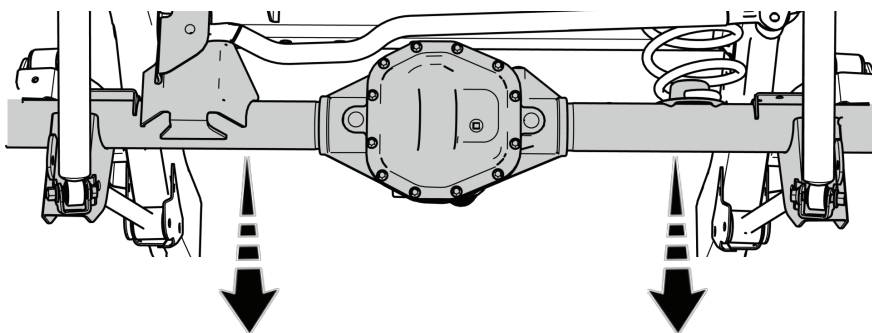LOWER AXLE TO REMOVE & DISCARD REAR SPRINGS**2X****32**

NOTE: REMOVE ANY PLASTIC RETAINERS FROM WIRING OR HOSES AS NEEDED.

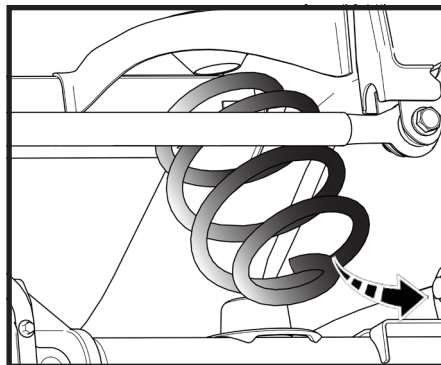**INSTALL NEW REAR SPRINGS**


INSTALL THE DRIVERS SIDE SPRING FIRST

LEFT REAR SPRINGS

4 DOOR: 02-22-411-250-1

2 DOOR: 02-22-211-250-1

NOTE: PAY SPECIAL ATTENTION TO INSTALL THE CORRECT SPRING ON THE CORRECT SIDE OF THE JEEP. THE REAR SPRINGS ARE SIDE SPECIFIC.

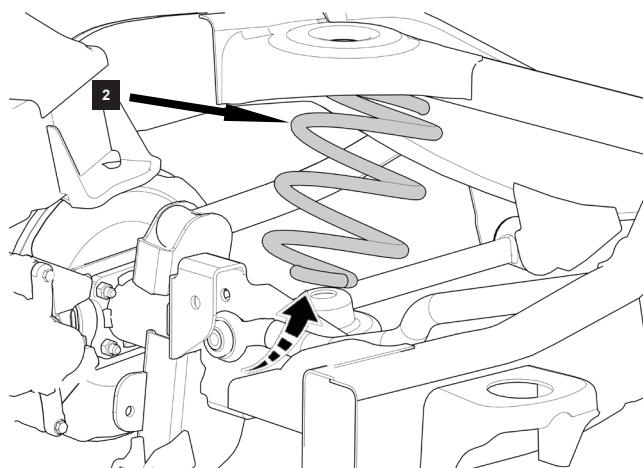
33

INSTALL THE PASSENGERS SIDE SPRING


RIGHT REAR SPRINGS

4 DOOR: 02-22-421-250-1

2 DOOR: 02-22-221-250-1

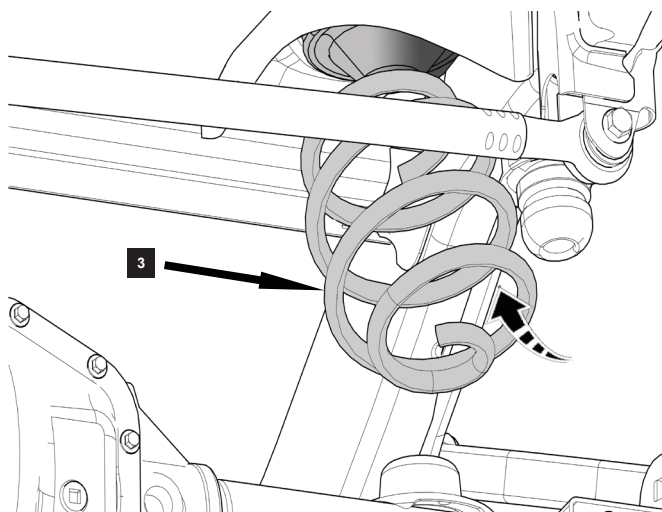2X**34**


RAISE THE REAR AXLE AND INSTALL SHOCKS

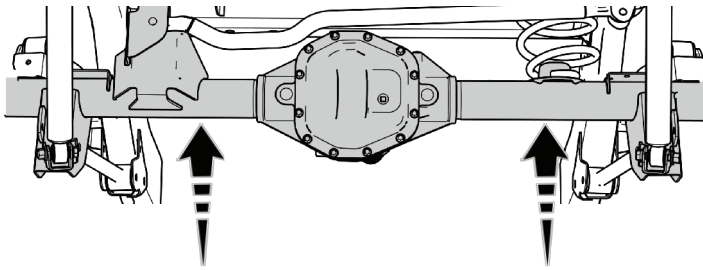



MAKE SURE TO FULLY SEAT THE SPRINGS INTO THE UPPER SPRING ISOLATOR

35

INSTALL REAR FALCON SHOCKS AT THIS TIME









*Refer to the Quick Start Guide.

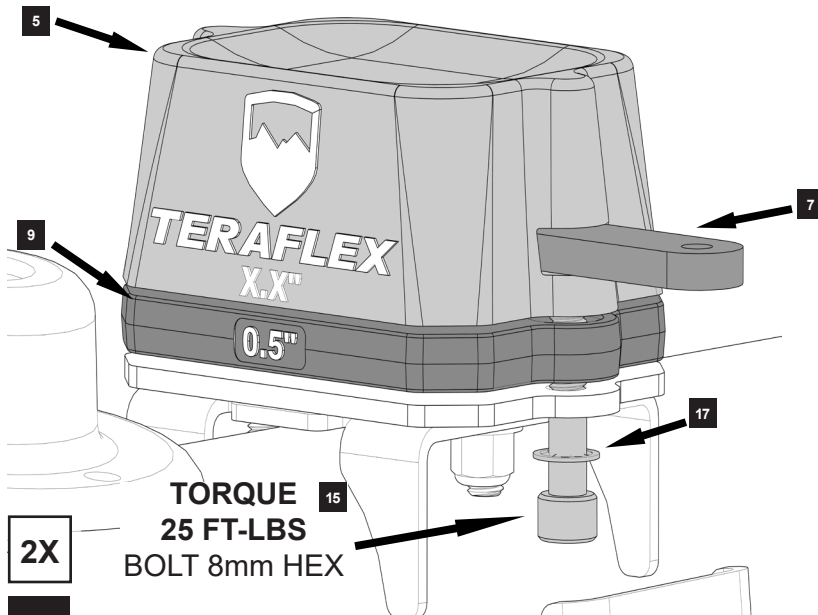
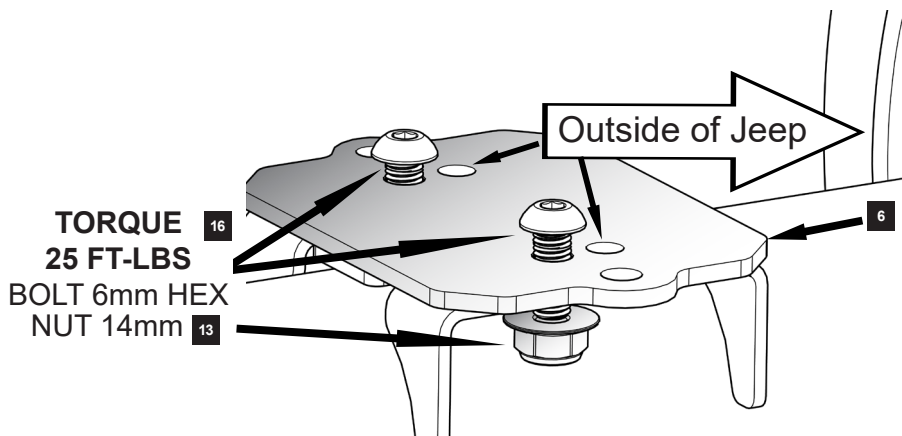


36



NOTE: REFER TO PAGE 19 FOR BUMPSTOP SPACER GUIDE

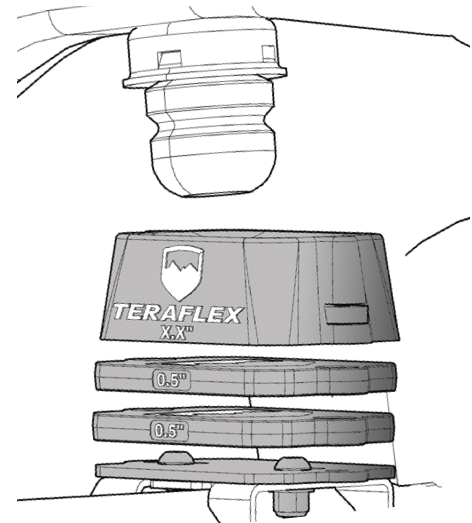

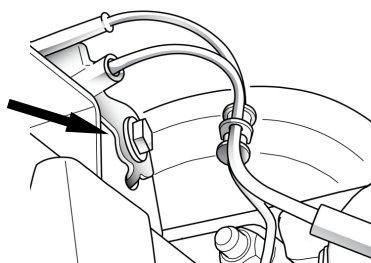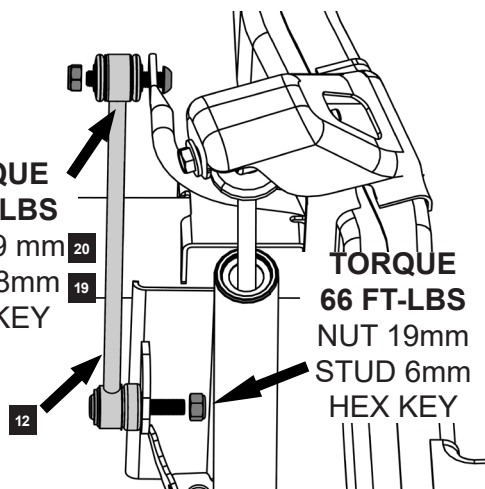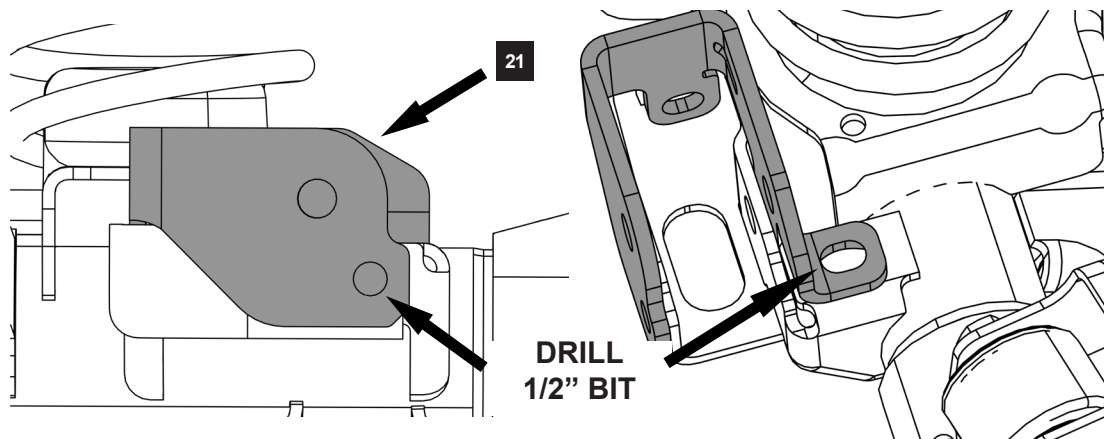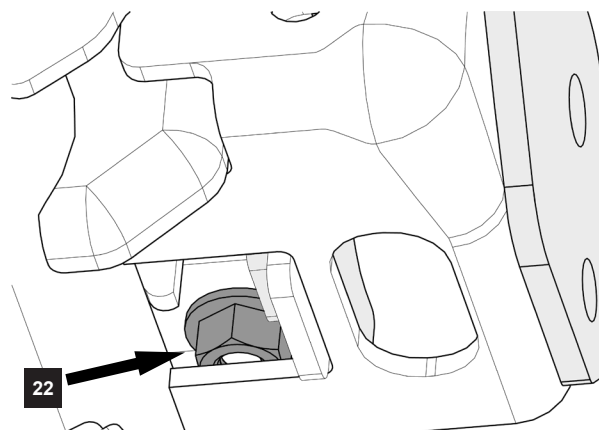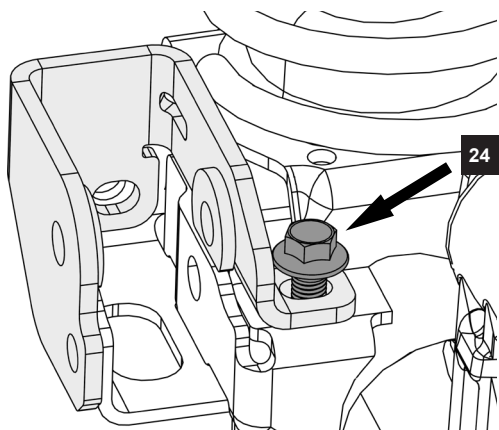REINSTALL BRAKE LINE BRACKETS**RECONNECT PLASTIC RETAINERS FROM WIRING OR HOSES AS NEEDED**REINSTALL
BOLT 13mm**2X****NOTE: DO NOT TIGHTEN THE
CONTROL ARM BOLTS UNTIL
THE JEEP IS ON THE GROUND****37****INSTALL NEW SWAY BAR LINKS****TORQUE
45 FT-LBS
NUT 19 mm
BOLT 8mm
HEX KEY****2X****38****TORQUE
66 FT-LBS
NUT 19mm
STUD 6mm
HEX KEY****SLIDE THE FRONT TRACK BAR BRACKET INTO PLACE AND MARK THE FRONT AND
REAR HOLES THAT NEED TO BE DRILLED. ONCE MARKED REMOVE THE BRACKET
AND DRILL THE HOLES.****39****DRILL
1/2" BIT****INSTALL ONE OF THE M12 BOLTS AND THE PROVIDED SERRATED NUT THROUGH
THE BOTTOM. THREAD THE NUT ONTO THE BOLT FINGER TIGHT.****40**

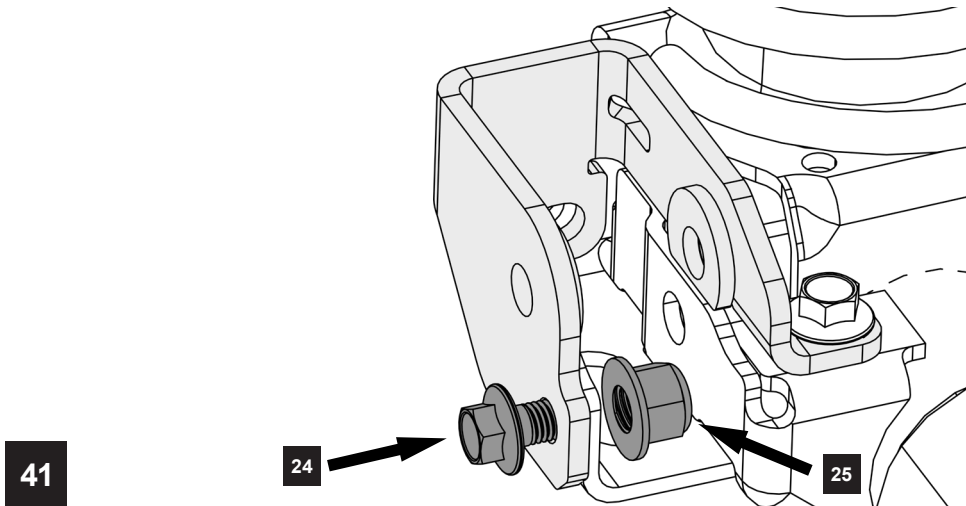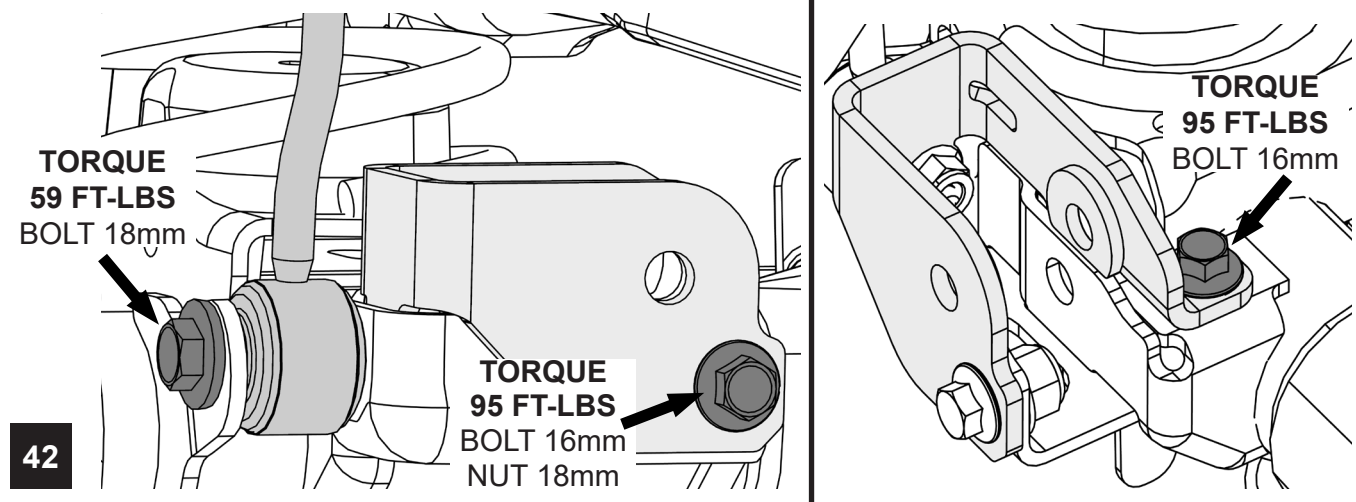INSTALL THE OTHER M12 BOLT AND NUT. LEAVE LOOSE**REINSTALL THE SWAYBAR LINK USING THE FACTORY HARDWARE AND TIGHTEN FIRST THEN TIGHTEN THE OTHER BOLTS AND TORQUE.**


**REFER TO INSTRUCTIONS
#999311 FOR PROPER INSTAL-
LATION OF THE REAR TRACK
BAR BRACKET**

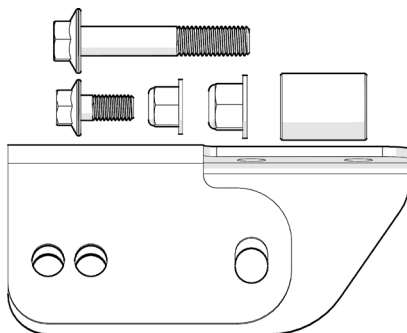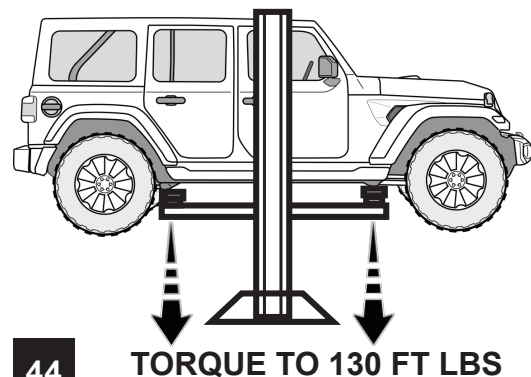**REINSTALL TIRES AND LOWER TO THE GROUND**

REINSTALL THE REAR TRACK BAR INTO THE NEW BRACKET AND TORQUE TO THE FOLLOWING SPECS


TORQUE REAR

BOLT 21mm
74 Ft Lbs + 60°

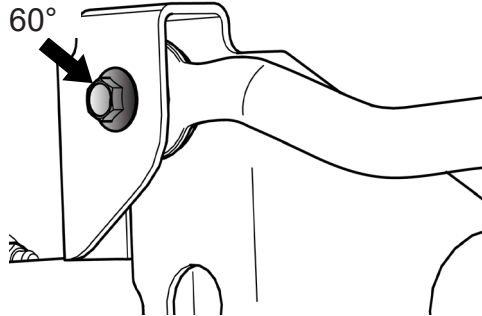


45

REINSTALL THE FRONT TRACK BAR USING THE SUPPLIED HARDWARE

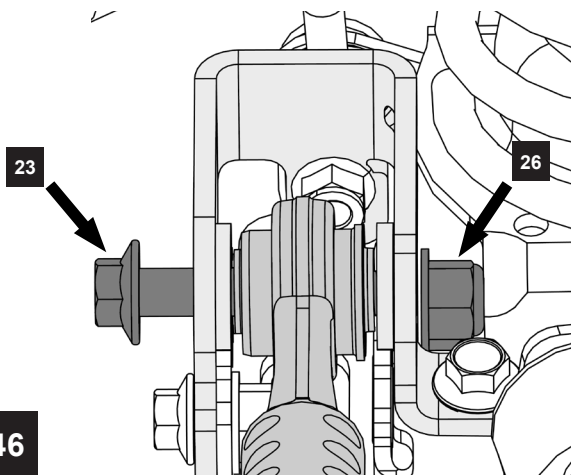

46

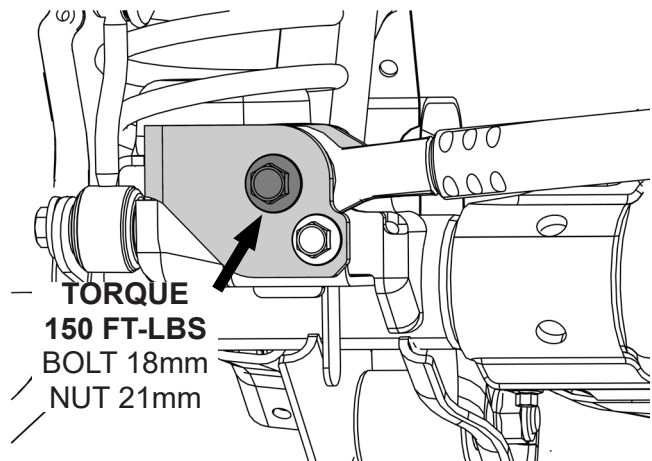

TORQUE
150 FT-LBS
BOLT 18mm
NUT 21mm

TORQUE CONTROL ARMS

REAR

TORQUE 21mm
74Ft Lbs + 65°

TORQUE 21mm
74Ft Lbs + 80°

TORQUE 21mm
74Ft Lbs + 50°

2X

47

FRONT

TORQUE 18mm
41Ft Lbs + 185°

TORQUE 18mm
37 Ft Lbs +135°

TORQUE
103 Ft Lbs +145°
BOLT 21mm
NUT 24mm

JL Tire Clearance Guide (FACTORY FENDERS)

By limiting suspension up travel, TeraFlex Bump Stops allow the use of larger tires while keeping the factory fenders.

JL Rubicon models feature high-clearance fenders that allow for more up travel, while the lower-clearance fenders on JL Sport and Sahara restricts tire size due to fender rubbing.

In order to address these fender differences, TeraFlex designed a proprietary modular bump stop system, which can be added to fit several different lift height and tire size configurations.

In addition to the main 2" bump stop spacers, this system includes multiple 0.5" interlocking spacers that can be added to fine tune bump stop height to limit suspension up travel.


JL Rubicon with Factory Fenders:

See Notes: Not all Tires Measure the Same

- 33" - No Bump Stops
- 35" - 2" Front & 2" Rear Bump Stops




- 37" - 2.5" Front & 3" Rear Bump Stops

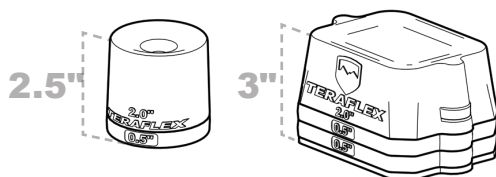




JL Sport/Sahara with Factory Fenders:

See Notes: Not all Tires Measure the Same

- 33" - No Bump Stops
- 35" - 3" Front & 2.5" Rear Bump Stops

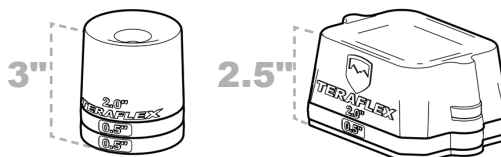

- 37" - 3.5" Front & 4" Rear Bump Stops

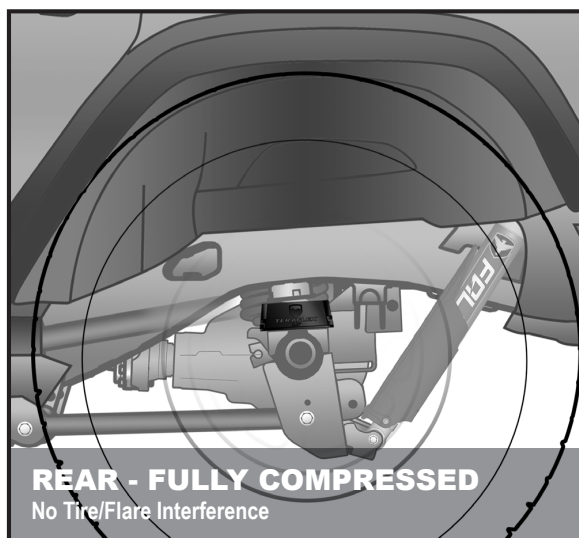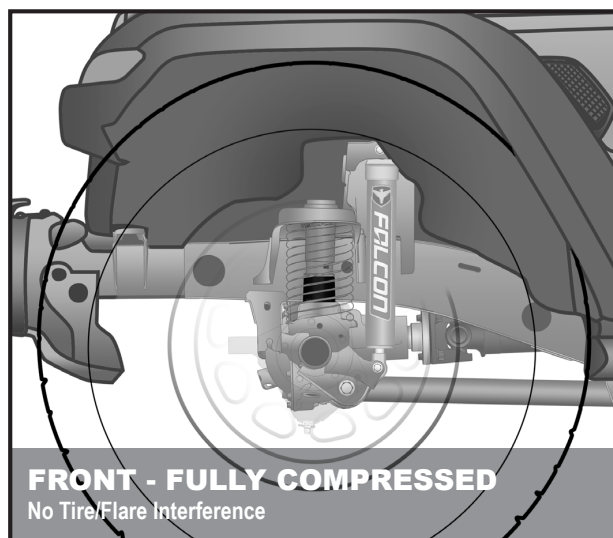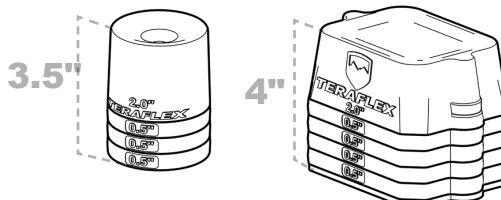


JL/JLU Strike Pad Shim (Front & Rear) 1959300 \$59.99

2-4 Inch Shock Options

JL Falcon Adjustable PiggyBack Shocks

- 4 Door Series 3.3, 11-01-33-400-200-3
- 2 Door Series 3.3, 10-01-33-400-200-3


- *Fast Adjust Knob
- *High Flow Oil Channel
- *Offset Sleeve Design
- *PiggyBack Reservoir

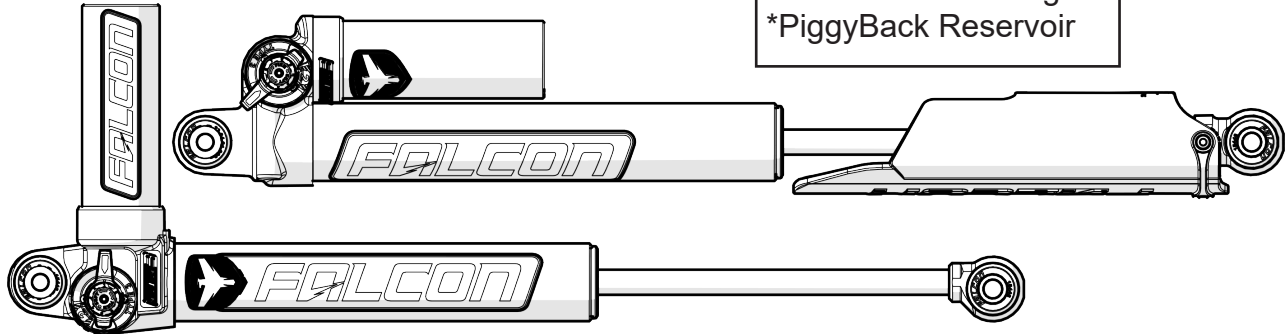

JL Falcon PiggyBack Shocks

- 4 Door Series 3.1, 11-01-31-400-200-3
- 2 Door Series 3.1, 10-01-31-400-200-3


- *Series 3.3 Upgradable
- *High Flow Oil Channel
- *Offset Sleeve Design
- *PiggyBack Reservoir

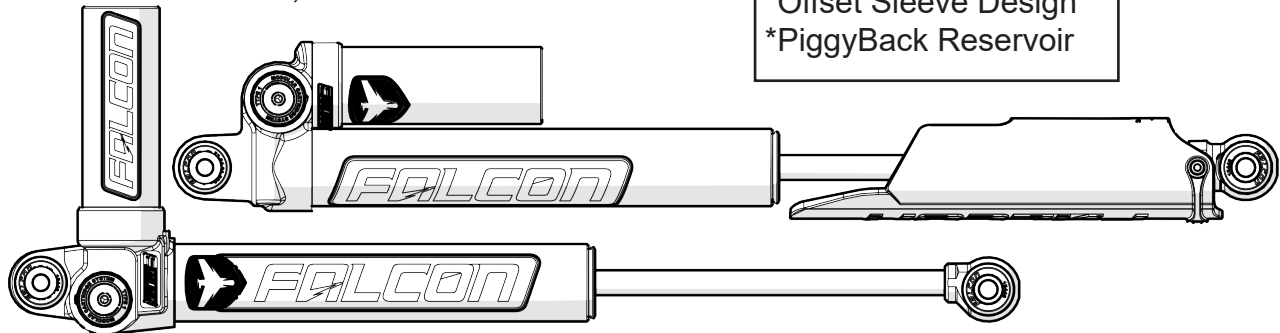

JL Falcon Monotube Shocks

- 4 Door Series 2.1, 11-01-21-400-200-3
- 2 Door Series 2.1, 10-01-21-400-200-3

- *Oil Gas Separator
- *3/4" Chrome Shaft
- *Offset Sleeve Design
- *JL Specific Shock

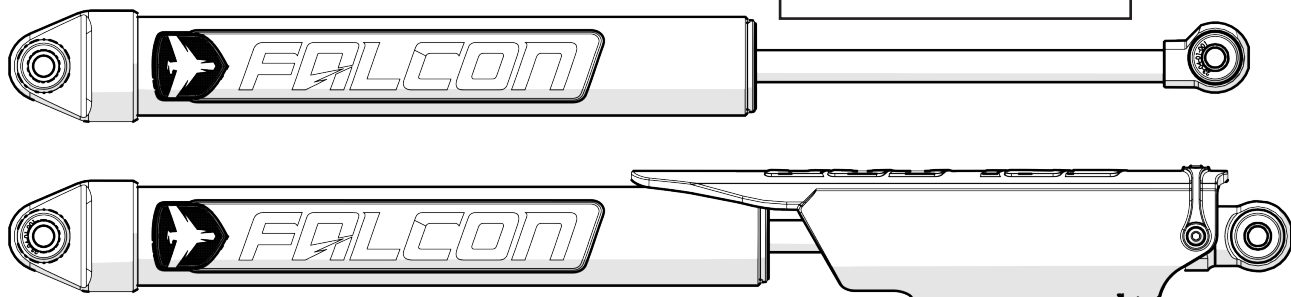

TERAFLEX

PRODUCT INFORMATION

MAINTENANCE INFORMATION:

It is the buyer's responsibility to have all suspension, drivetrain, steering, and other components checked for proper tightness and torque after the first 100 miles and every 3000 miles after that.

NOTICE TO INSTALLER:

The enclosed "Warning to Driver" sticker must be installed in the vehicle in driver's view. This sticker is to act as a constant safety reminder when operating the vehicle. It is your responsibility as the equipment installer to install the provided sticker and to forward the product instructions to the vehicle's owner for review. If a "Warning to Driver" sticker or product installation guide were not included in the kit, FREE replacement stickers and instructions are available by request. It is the installer's duty to ensure a safe and controllable vehicle after the modifications have been performed.

WARNING:

Neither the seller nor the manufacturer will be liable for any loss, damage, or injury directly or indirectly arising from the use of or inability to determine the use of these products. Before using, the user shall determine the suitability of the products for its intended use, and the user shall assume all responsibility and risk in connection therewith.

WARNING TO DRIVER:

This vehicle has been modified to enhance off road performance and has unique handling characteristics. Use in harsh environments can cause extreme stress on the components. Vehicle should be inspected after being off road to make sure that all the components are in working order and safe to travel on the highway. All fasteners should be checked so that they are at the correct torque specifications as the vibration and stresses from off roading may cause critical fasteners to work loose. Extra care should be taken to inspect the critical components, steering, and brake systems. During each oil change components such as arms, tie rod ends, etc should be greased and checked for excessive wear. Any worn components should be replaced. When returning to the pavement always set or restore tire air pressure to the factory recommendation and connect or engage any disabled sway bar mechanisms. Because of the higher center of gravity and larger tires, this vehicle handles and reacts differently than many passenger cars, both on and off road. You must drive it safely! Extreme care should be taken to prevent vehicle rollover or loss of control, which can result in serious injury or death. Avoid sudden sharp turns or abrupt maneuvers. Generally, braking performance and capabilities are decreased when significantly larger/heavier tires are used, especially when used in combination with transfer case low-range reduction kits. Take this into consideration while driving. Do not add, alter or fabricate any factory or aftermarket parts to increase vehicle height over the intended height of the TeraFlex product purchased. Mixing component brand is not recommended. TeraFlex Inc. will not be responsible for any altered product or any improper installation or use of our products. We will be happy to answer any questions concerning the design, function, and correct use of our products. It is ultimately the buyer's responsibility to have all bolts/nuts checked for tightness after the first 100 miles and then every 3000 miles. Wheel alignment, steering system, suspension and drive line systems must be inspected by a qualified professional mechanic at least every 3000 miles.

TERAFLEX PRODUCT WARRANTY:

TeraFlex Inc. warrants TeraFlex Suspension products to the original retail purchaser to be free of defects in material and workmanship for as long as the original purchaser owns the vehicle on which products were originally installed.

Failure to complete regular maintenance (grease every 3000 miles) on TeraFlex FlexArms will void this warranty. All other conditions of the standard TeraFlex product warranty apply.

All TeraLow products are covered by the TeraFlex two (2) year warranty to be free of defects in material and workmanship for two years from date purchased.

TeraFlex axles are covered by a 12-month warranty to be free of defects in materials and workmanship.

This warranty does not cover or include product finish, improperly installed or applied products, improperly maintained products, products or components used for racing or competition or damage due to abuse or neglect, products that fail due to the use of larger tire and wheel combinations.

All returns must be accompanied by an original invoice. It is the customer's responsibility to remove the product from the vehicle. Shipping charges are the responsibility of the customer. TeraFlex Inc. will pay the return freight if the product meets the terms of warranty.

This warranty is for the replacement or repair of defective TeraFlex products only and does not include freight charges, labor charges for removal of or installation of TeraFlex or related products or components, costs incurred due to down time of the vehicle, or lost profits due to vehicle down time.

A returned goods authorization number (RGA#) must accompany any returned products. For more information please contact a TeraFlex customer service representative.

COPYRIGHT

©Copyright 2014. All rights reserved, TeraFlex Inc. Reproduction of this catalog and/or any of its contents without written permission is strictly prohibited.

TeraFlex® is a registered trademark of TeraFlex Inc. All trade names and logos including but not limited to TeraFlex, FlexArms, RockGuard, Monster, and LCG are protected by law and duplication of trade names and/or logos are strictly prohibited.

TeraFlex Inc. reserves the right to update, discontinue, redesign, modify finish, part number or component build parts if deemed necessary without written notice. TeraFlex Inc., and any associated dealers are not responsible for misprints or typographical errors that may have inadvertently been made within this instruction sheet.

Jeep® and the Jeep® grill are registered trademarks of Fiat Chrysler Automobiles N.V., and have no affiliation with TeraFlex Inc.

TERAFLEX, Inc.

5680 West Dannon Way
West Jordan, UT. 84081

Phone/801.713.3314

Fax/801.713.2313

www.teraflex.com