

11484

**07-13 JEEP
WRANGLER**



11484

**07-13 JEEP
WRANGLER**

T1 SERIES ACCENTS **FRONT BUMPER GUARD PLATES**

Tools Required:


Screwdriver Set
Drill/Drill Bit Set
Marker

Hardware / Parts List:

2 Bumper Guard Plate Accents
8 #10X3/4" Polished Hex Head Screws
8 10/32" Nylon Lock Nuts
8 1" Fender Washers

Step 1

Read and understand all instructions before attempting the install of this grille. Be sure that the package of hardware matches the hardware list as listed above. Next, test fit the T-REX accent to the vehicles factory openings. You are now ready for the install:

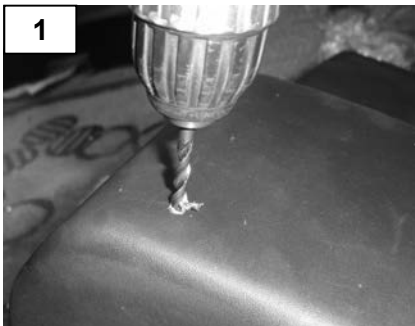

Step 2

Place the new plate on the bumper guard. Making sure that the plate is straight, Mark each hole using a bright colored marker. After the holes are marked, drill small pilot holes where you have previously marked (1). Remove the bottom bumper cover to get behind the Bumper. From behind the bumper Cut around the back part to get to the holes you drilled. Using the hardware; secure the plate to the bumper. Repeat this on the second plate.

Thank you for purchasing your T-Rex billet grille. 9/15/08

