

10-13 Chevy Camaro **T1 Series Billet Gas Door - Chrome**

TOOLS NEEDED

Flathead Screwdriver
Allen Wrench Set
1/4" Drill Bit and Drill

HARDWARE

(6) 1/4"X3/4" Buttonhead Screws
(1) Template
(1) Gas Door

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.

Step 1 Gas Door Removal

With a Flathead Screwdriver, Push upwards on the clip and slide out the gas door. (Fig. 1 & 2)

Step 2 Gas Door Installation

Align the template with the 2 latches so it doesnt stick outwards or be crooked. (Fig. 3)

With a 1/4 Drillbit, Drill where the hole on the template is. (Fig. 4)
Slide in the gas door and thread the Bottlehead Screw where the drilled hole is. (Fig. 5)

Installation Complete.

Template.

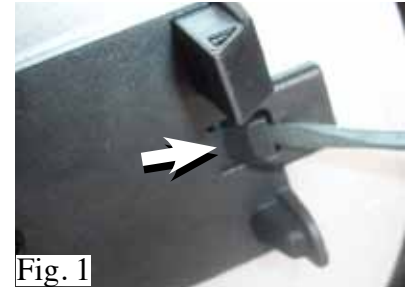
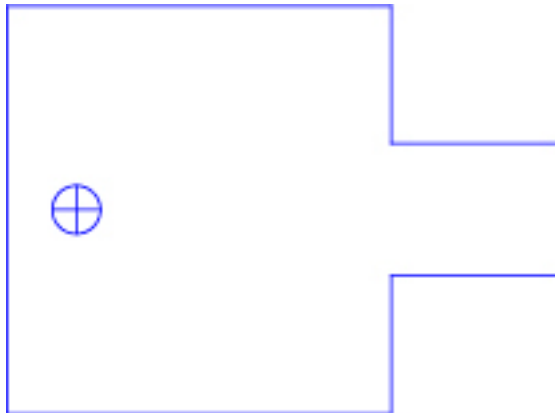


Fig. 1

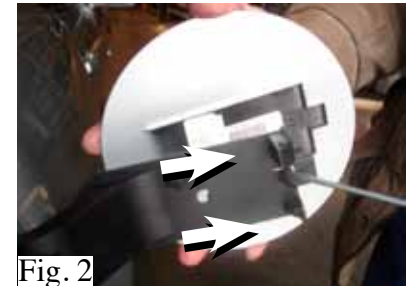


Fig. 2

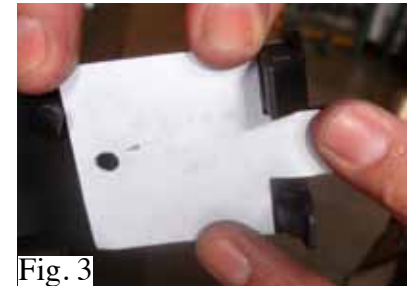


Fig. 3



Fig. 4



Fig. 5