

**20027
20027B
10-13 CHEVY
CAMARO**



**20027
20027B
10-13 CHEVY
CAMARO**

2010-13 CHEVY CAMARO

Phantom Billet Grille

TOOLS REQUIRED: PARTS LIST

- | | |
|----------------------|------------------------------------|
| Phillips Screwdriver | (2) 3 3/4" Sq. Rt. Brackets |
| Flat Screwdriver | (2) 3" Sq. Rt. Brackets |
| | (4) U-Bolts |
| | (4) #8 6 Head 1 1/4" Screws |
| | (1) Phantom Billet Grille |
| | (2) 1/2" Flat Washers |
| | (2) 1' 1/4 Clips w/ threaded studs |
| | (2) 6/32" Nylon Lock Nuts |
| | (2) Rectangle Spacers |

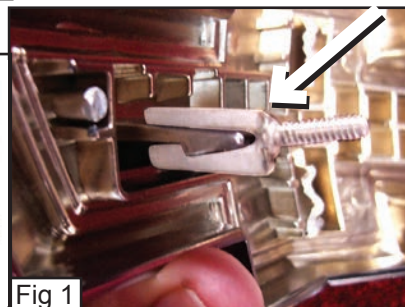
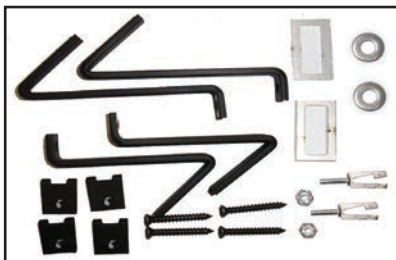


Fig 1

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at tech@trexbillet.com to verify fitment or assist with tech questions. All other inquiries can be directed to info@trexbillet.com. In the event you do not have internet access please call 1-800-287-5900.

Step 1 Install

Remove the factory logo from the factory grille. If you would like to install the logo onto the billet slide the 2 clips with the threaded studs onto the tabs on the bowtie. (Fig 1) Place the bowtie onto the billet grille with the tabs protruding through the billet bars. Take the 2 rectangle spacers and place them over the tabs on the backside of the billet and place the 1/2" washers over the threaded studs and put a 6/32" nylon lock nut on and tighten.

First, take the 4 U-Bolt clips and install them onto the 4 sq rt brackets with the small thorn on the side shown in (Fig 2)

Next take the sq rt brackets and put them into the factory grille with the hooked end toward the rear of the vehicle and wrapping down around the horizontal plastic bar in the factory grille. They go into the second opening inside of the turn signal, center them in the opening. The longer sq rt bracket goes on the bottom and the shorter one goes on the top. They will just sit there until the grill is installed so be careful not to bump or move them. Do the same to the other side of the vehicle and the 2 remaining sq rt brackets. (Fig 3)

Now take the Phantom grille and insert it into the factory grille opening being very careful not to knock the sq rt brackets off. (Fig 4)

With the Phantom inserted into the factory grille take a small flat screwdriver and reach through the opening between the billet bars and hold the sq rt bracket steady while you take the 1 1/4" screw and insert it between the billets and through the small bracket with a hole in it that is welded to the backside of the billet grille. Use a phillips screwdriver to tighten the screw while holding the sq rt bracket steady with a flat screwdriver. (Fig 5) Do this to all 4 of the brackets. Installation complete.

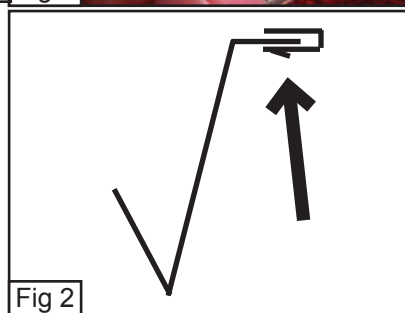


Fig 2

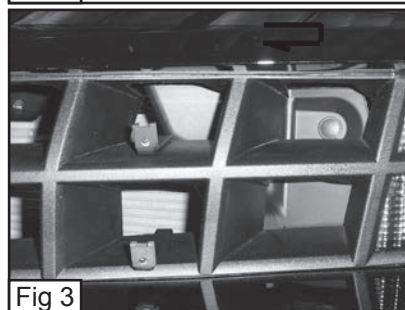


Fig 3



Fig 4

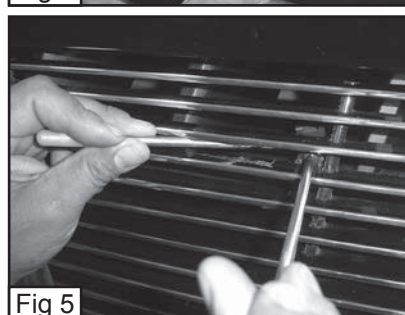


Fig 5