

20165

04-06 PONTIAC

GTO



20165

04-06 PONTIAC

GTO

2004-2006 PONTIAC GTO

2 PC BILLET INSERT


Tools Required:

Phillip Screw Driver
Slotted Screwdriver
Needle Nose Pliers

Hardware / Parts List:


2 Billet Insert (14 bars each)
4 6-32 x 2" Machine Screws
4 #8 U-Nuts
4 2.5" J Hooks

Read and understand instructions before attempting installation

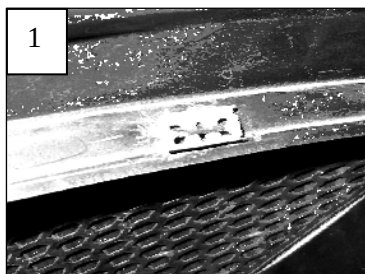

Step 1

Open the hood and remove the screws along the top of the bumper cover. Remove the plastic fasteners along the top. Pull the bumper cover forward and remove the metal clips retaining the honeycomb inserts on top (1). Pull the inserts forward (2) and remove the clip on the bottom.

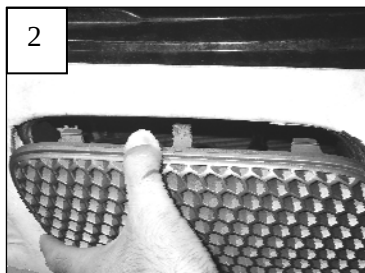

Step 2

If installing a bumper insert, install at this time and then proceed to step 3.

Step 3

Slide the U-nuts onto the J hooks. Center each of the inserts and fasten using the J hook assembly (3). Re-install the fasteners securing the bumper cover to the vehicle. ***Thank you for purchasing your T-Rex billet grille.***
T-Rex Truck Products Inc. 5/3/06

