

20427

07-09 DODGE
DURANGO



20427

07-09 DODGE
DURANGO

2007-2009 DODGE DURANGO **4 PC OVERLAY**

Tools Required:

Phillips / Slotted Screwdrivers
12mm Socket
5/16" Socket


Hardware:

4	Billet Inserts	8	#10 Washers
8	6-32 x 1.5 Machine Screws	8	2" Flange Bracket (Offset Hole)
8	6-32 Nylon Lock Nuts		

Read and understand instructions before attempting installation

Step1

Test fit the grilles over the factory grille to identify the mounting locations. Open the hood and remove the factory plastic radiator cover. Use your hand or slotted screwdriver to pry or pull the plastic fasteners up. Remove the four 12mm bolts on top of the core support. Pull the grille forward; reach behind the grille to depress the clips along the bottom. Now remove the factory grille from the vehicle.

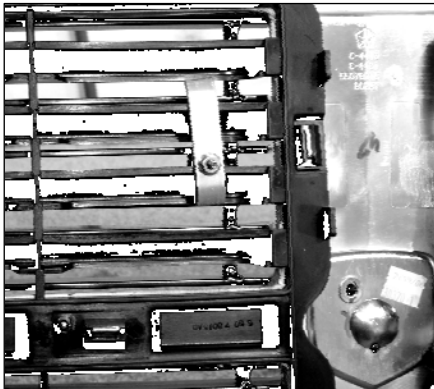

Step2

Place one of the billets in front of the black plastic bars. Insert a screw into each mounting tab. Secure a flange bracket, washer and nut on each screw. Tighten the hardware with the mounting hole on the bottom. Repeat this process on the remaining billet inserts.

Step3

Re-install the grille shell and radiator cover back onto the vehicle.

Thank you for purchasing a T-Rex billet grille. 6/15/07

