

T-REX TRUCK PRODUCTS INC.

20710

00-02 LINCOLN
LS (ALL)
BILLET INSERT

20710

00-02 LINCOLN
LS (ALL)
BILLET INSERT

Tools Required:

Phillip Screw Driver
Drill
1/8" Drill Bit
Matt Black Spray Paint (optional)

Hardware / Parts Included:

1 - Main Billet Insert (11 Bars)
5 - #8 x 3/8 Phillip Screws
1 - #8 Flat Washer


Read and understand instructions before attempting installation

Step 1

Remove the factory grille shell assembly from the hood of the vehicle. Separate the black plastic from the chrome part of the shell.

Step 2

Center the billet insert below the face bar on the chrome shell. Make sure the billet is centered. Use a #8 screw and flat washer to attach the mounting hole behind the emblem to the billet grille. Center the assembly onto the hood. Mark each mounting hole on the billet grille to the hood. Remove the assembly; Drill a 1/8" hole into the hood at each mark.

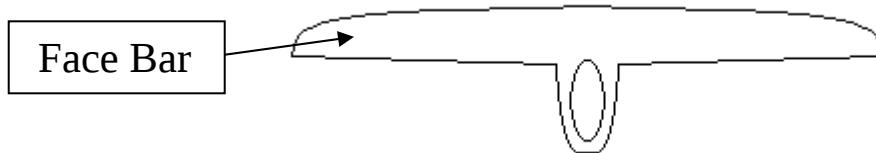

Step 3

For better appearance on lighter color vehicles, apply a coat of matt black spray paint to the area on the hood that can be seen behind the billet grille. Re-install the complete grille shell assembly back onto the vehicle. Use the remaining #8 screws to fasten the billet grille to the hood. The installation is now complete. *Thank you for purchasing a T-Rex billet grille.*