



20736

06-07 HONDA
2 DR. CIVIC
BILLET INSERT

20736

06-07 HONDA
2 DR. CIVIC
BILLET INSERT

2006-07 HONDA CIVIC (2 DOOR COUPE)
BILLET INSERT

Tools Required:

Phillip Screwdriver (std. & short length)
Slotted Screwdriver
Drill & ¼" Drill Bit
10mm Socket

Hardware / Parts Included:

1 Billet Insert (10 Bars)
4 #8 x 1 Screw (#6 Head)
4 #8 U-Nuts
4 Plastic Fasteners
2 1.5" J Hooks
2 Extension brackets


Read and understand instructions before attempting installation

Step 1

Remove the fasteners holding the radiator cover in place; remove the cover. Remove the bolts securing the bumper cover to the core support (located near the radiator mounts). Pull the bumper cover forward; remove the nine small Phillips screws securing the grille. Now unfasten the molded clips and separate the grille. If a bumper billet is going to be installed; install at this time and then proceed to Step 2.

Step 2

Test fit the billet insert into the opening. If the paint from the bumper cover stands out; a coat of flat black paint will help the polished bars stand out on lighter color vehicles.

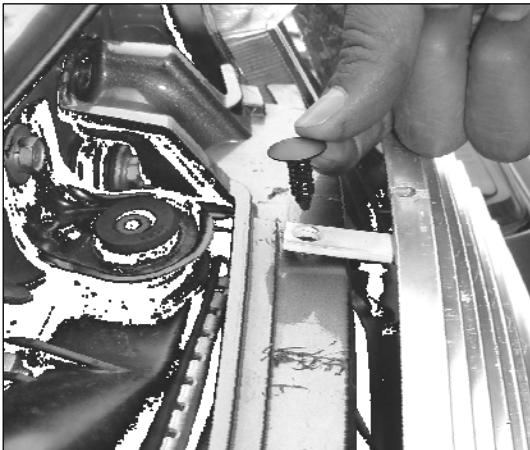

Step 3

Slide the u-nuts onto the J hooks and extension brackets. Use the screws to attach the J hooks (center tabs) and the extensions (outer tabs). Center the grille and wrap the J hooks around the plastic in the bumper cover plastic. The extension brackets align to the bumper cover. Drill a ¼" hole into the plastic. Secure the other end using the plastic fasteners (picture). Re-install the radiator cover. ***Thank you for purchasing a T-Rex Billet Grille. 8131106***