

20757

**07-08 NISSAN
MAXIMA**



20757

**07-08 NISSAN
MAXIMA**

2007-08 NISSAN MAXIMA ***BILLET INSERT***

Tools Required:

Slotted Screwdriver
Drill & ¼" Drill Bit


Hardware / Parts Included:

1	Billet Insert (15 Bars)	2	#8 U-Nuts
2	#8 x 1" Screws (#6 Head)	2	Extension Brackets

Read and understand instructions before attempting installation

Step 1

Open the hood and remove the factory plastic radiator cover and grille assembly. Now remove the factory grille shell; use a small screwdriver to pull the center from each fastener. Do not discard the fasteners. Release the four molded clips along the bottom of the grille. If installing a bumper insert; install at this time; then proceed to Step 2.

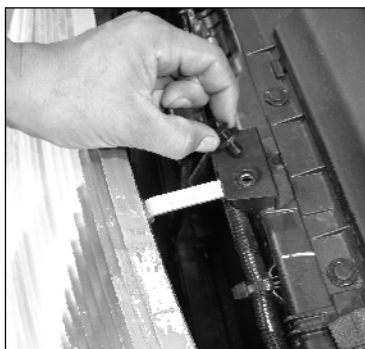


Step 2

Note: the grille has (4) mounting tabs along the bottom. The (2) center tabs slide into the factory mounting holes. The (2) outer tabs are stops **(these do not align to the factory mounting holes)**; these are used as stops to properly position the grille in the bumper opening.

Slide the two u-nuts onto the bent end of extension brackets. These attach to the tabs along the top of the grille. Use the Phillips screws to secure them. Center the grille into the opening; slide the center tabs into the factory mounting holes. The upper extension brackets align to the factory mounts. Use the factory fasteners to secure the brackets on top and bottom. The lower fasteners install into the brackets only and are used to retain them in place.

Drill a hole aligned with the factory mounting holes.

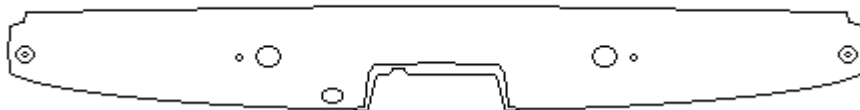

Carefully check the hood clearance to the grille. Loosen the fasteners and adjust the bracket and (or) billet if needed. The radiator cover can be re-installed; two ¼" holes must be drilled into the cover. Align these holes with the factory mounting holes. Secure the radiator cover with two of the factory fasteners.

Thank you for purchasing a T-Rex Billet Grille. 9/20/07