

T-REX

Billet Grilles

20769

2008 NISSAN
ALTIMA COUPE

20769

2008 NISSAN
ALTIMA COUPE

2008 NISSAN ALTIMA

BILLET GRILLE INSERT W/ FRAME


Tools Required:

8mm or 5/16 Socket
Slotted / Philips Screwdrivers

Hardware / Parts Included:

1 Billet Insert w/ Frame
8 6-32 Nylon Nuts
8 2" Flange Brackets



Read and understand instructions before attempting installation

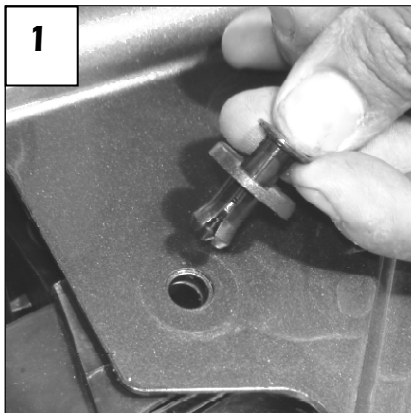

Step 1

Use a slotted screwdriver to remove eight plastic fasteners on top of the bumper cover (above the grille); pull the center from each fastener (1).


The upper corners of the bumper cover and grille are secured to the core support with a retaining clip. Pull the bumper cover forward on one end; from behind the grille, use a slotted screwdriver to depress the clip (2 & 3). Repeat on other side.

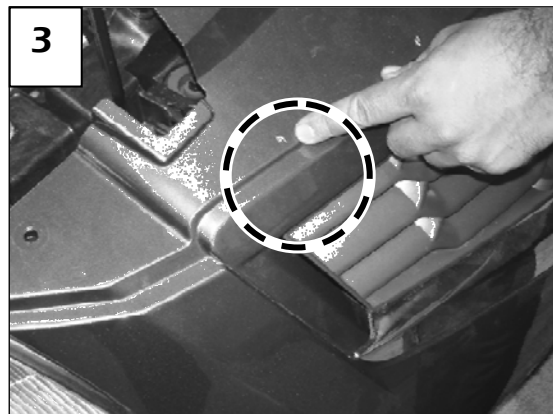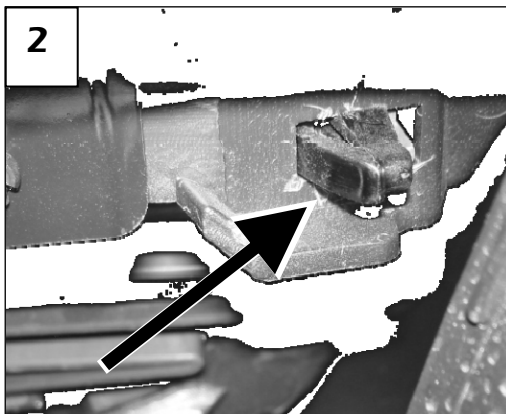

20769 (Continued)

Step 2

Remove the air intake shield in front of the intake (4). Do not remove the intake behind the core support. Two plastic fasteners secure the shield. Remove the shield (5).

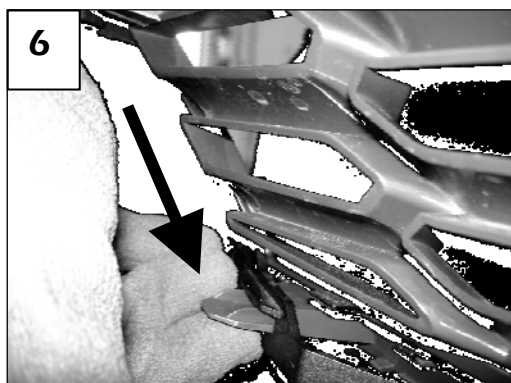

Step 3

Pull the top of the grille assembly forward. Use a finger or screwdriver to depress the remaining molded clips along the top and bottom of the grille (6). Removal of a lower clip is shown in diagram (6).

There are four clips on top and four on the bottom.

Now remove the factory grille from the front of the bumper.



Step 4

Center the billet into the bumper opening (7). The mounting studs align to the factory grille slots. From behind the grille; install a flange bracket and a nylon lock nut.

Make sure the grille and frame is centered; tighten the hardware until the grille is held firmly in place. Loosen the hardware and adjust if needed.

Re-install the air intake shield.

Install the retaining fasteners on top of the bumper cover.

Thank you for purchasing a T-Rex Billet Grille. 1/9/07