20775
2012 NISSAN
VERSA

2012 NISSAN VERSA

Upper Class Billet Grille

Install time: 35 Mins.

TOOLS REQUIRED:
Socket Wrench
Plastic Prybar

PARTS LIST:
(1) Billet Grille
(4) 2" Screws
(4) 1" Screws
(8) U-Nuts
(8) Fender Flatwashers

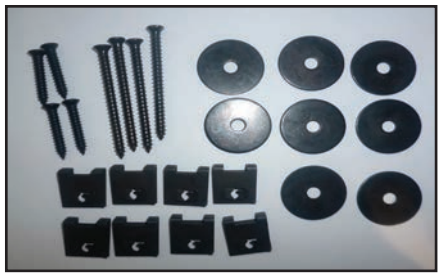

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.

- Remove 5 Clips along the top of the Grille Shell. (Fig.1)

Unclip 8 Clips along the Bottom of the Factory Grille to Remove.

- Remove 3 Clips to remove Plastic Cover that is on the right side of vehicle. (Fig. 2)
- Remove 5 Bolts from behind the Grille. (Fig. 3)
- Unclip the Grille along the bottom and remove. (Fig. 4)
- Place the U-Nuts on the Fender Flatwashers. (Fig. 5)
- Insert the Billet Grille Through the Factory Opening. (Fig. 6)
- Place the 2" Screws along the bottom of the Brackets on the Billet Grille, From behind the Grille, Place the Fender Flatwasher on the Screws to Thread. (Fig. 7)
- Place the 1" Screws along the top of the Brackets on the Billet Grille, From behind the Grille, Place the Fender Flatwasher on the Screws to Thread.

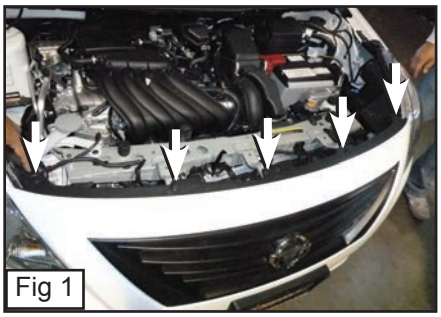
Fig 1

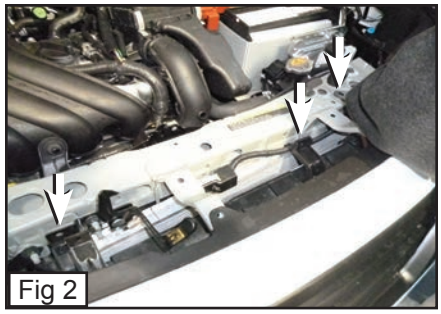
Fig 2

Installation Complete

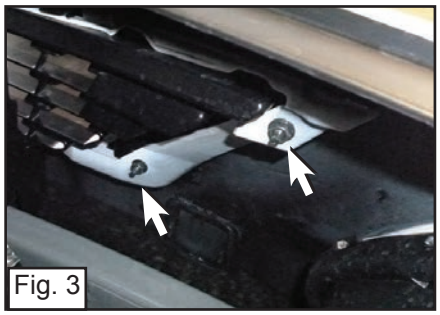
Fig. 3

Fig 4

Fig 5

Fig 6

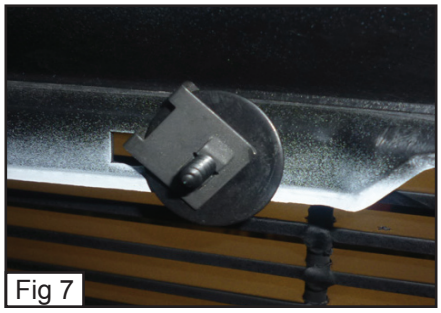
Fig 7