

T-REX

Billet Grilles

20791

04-08 INFINITI

QX 56 SUV

20791

04-08 INFINITI

QX 56 SUV

BILLET INSERT

Tools Required:

Phillip Screw
10mm Wrench / Socket Driver

Hardware / Parts List:


1 Billet Insert (27 bars)
4 ¼-20 x ¾ Bolt
4 ¼-20 Nuts
4 ¼ Washers

Read and understand instructions before attempting installation



Step 1

Open the hood to remove the factory grille. There are four 10mm nuts along the top and eight 10mm bolts on the bottom and sides. Use a 10mm wrench to remove these fasteners, push the grille from behind to remove.

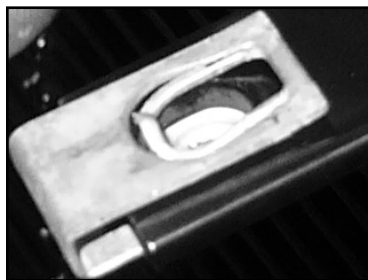

Step 2

Remove four of the U-Clip mounting fasteners from the factory grille. Install these onto the billet insert as they would mount onto the factory grille along the bottom. Test fit the billet insert into the opening; the contour of the grille should match the hood. If not, remove the grille and slightly bend the grille by hand. Repeat if necessary.



Step 3

The grille mounting tabs align to the mounting holes in the hood. Do not tighten the hardware until all the mounting hardware has been hand threaded. The upper mounting tabs are to be replaced by the bolts, nuts and washers supplied in the hardware pack. Use the factory fasteners to secure the lower mounting tabs.

Thank you for purchasing your T-Rex billet grille.

T-Rex Truck Products Inc. 6/30/06