

20798

**03-04 INFINITI
G-35 SEDAN**



20798

**03-04 INFINITI
G-35 SEDAN**

BILLET INSERT

Tools Required:

Small Slotted Screwdriver
7/16" Wrench


Part List:

1 Billet Insert (11 bars)
2 ¼-20 x ¾ Bolts
2 ¼-20 Nuts
2 ¼ Washers

Read and understand instructions before attempting installation

Step 1.

Remove the factory grille shell; use a small screwdriver to pull the center from each fastener. Two of the fasteners will be re-used; do not discard the fasteners. Next, lightly pull the top of the grille assembly forward. Use your fingers to depress the molded clips along the bottom of the grille. The grille can now be removed.

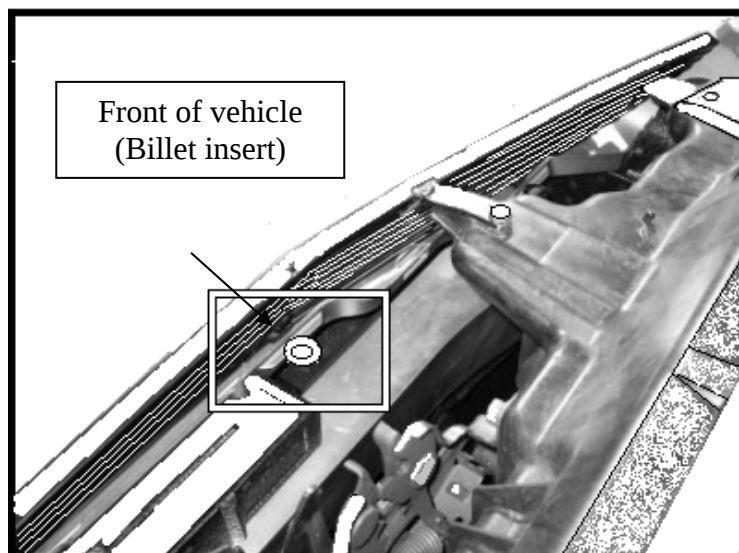

Step 2.

Center the billet insert into the opening. The lower mounting tabs align into the factory holes. Slide the brackets into the bumper cover; Use the factory fasteners to secure the lower tabs (Note caption in diagram). Use a ¼" bolt, nut and washer to attach the upper mounting brackets. These brackets align to the factory holes also. It may be necessary to slightly bend the upper brackets so they align correctly.

Step 3.

Close the hood and check the alignment of the billet insert. If necessary, remove the insert and adjust the brackets. Installation is now complete. ***Thank you for purchasing a T-Rex Billet Grille.***

9/15/05