

20973

08-10 SCION
SCION XB



20973

08-10 SCION
SCION XB

08-10 SCION XB **BILLET GRILLE INSERT**

Tools Required:

Phillips / Slotted Screwdrivers
10mm Socket or Nut Driver



Part List:

- 1 Billet Grille Insert
- 2 Plastic Push Clips

Read and understand instructions before attempting installation

Step1.

Open the hood and remove the plastic radiator cover. Remove two 10mm screws & pop out three plastic clips to remove. Use a screwdriver to pry the hood bumpers (plastic push in fastener) out. Release the lower clips on bottom of the grille and remove from the vehicle.

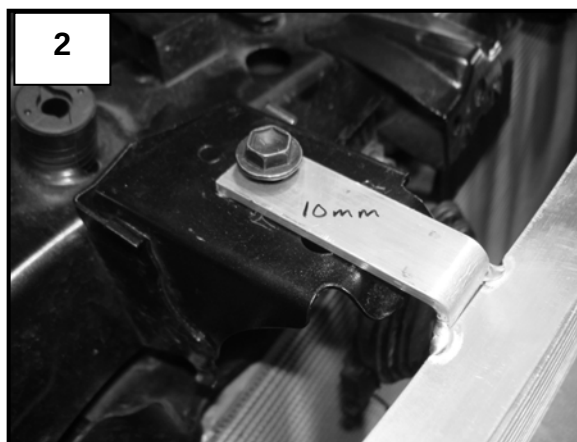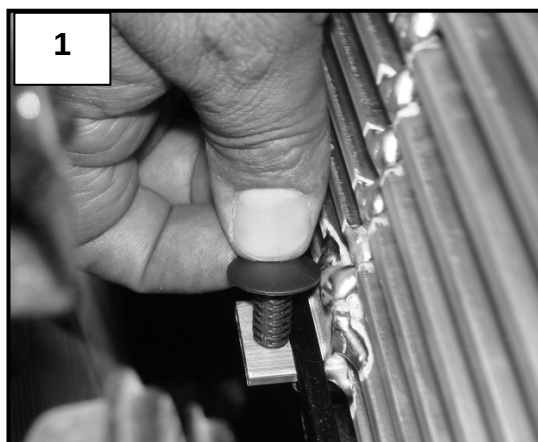

Step2.

Center the insert into grille. Slide the lower mounts into the factory slots. Place the plastic push clips into mounts **(1)**. Align the top brackets onto the factory locations and place the 10mm screws into the factory holes **(2)**.

Thank you for purchasing a T-Rex Billet Grille. 8/15/07