

21085

02-06 CHEVY
AVALANCHE
OVERLAY



21085

02-06 CHEVY
AVALANCHE
OVERLAY

02-06 Avalanche w/ Headlights on Bottom (w/ Body Cladding)

Tools Required:

5/16" Nut Driver or just Pliers
Phillip Screw Driver


Parts list:

1 - Upper Billet Insert (8 bars)
1 - Lower Billet Insert (12 bars)
8 - 6-32 x 1 Machine Screws
8 - #6 Flat Washers & Nylock Nuts
8 - Flange Brackets (2000F)

Read and understand instructions before attempting installation

Step 1.

Note that the radiator cover and grille are one piece. Remove the three push-in tabs on the top cover, and then remove the one screw in back of the grille near the center. Now unfasten the six mounting clips on the rear of the grille shell as pictured in the diagram below. Remove the grille shell from the vehicle.

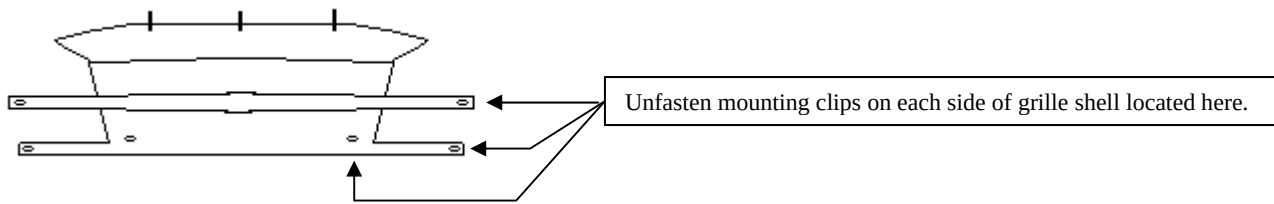

Step 2.

Identify the billet inserts from the parts list. Place the lower insert in the lower opening of the factory grille. Hold the billet in place and insert a machine screw in each of the mounting brackets welded to the rear of the insert. Starting in the center; install a flange bracket (with the bent edges facing forward), washer and nylock nut on each machine screw from behind the factory grille shell. Now snug the four machine screws and nylock nuts (DO NOT OVER TIGHTEN) so the billet is held firmly in place.

Step 3.

Repeat the installation of the upper insert as in Step 2. Re-install the grille assembly on the vehicle. Attach the top cover using the push-in fasteners. Installation complete.

Thank you for purchasing a T-Rex billet grille.