

21386
07-12 GMC
ACADIA



21386
07-12 GMC
ACADIA

BILLET SERIES INSERTS

Tools Required:

Philips Screwdriver
Pliers


Hardware / Parts List:

1 Billet Insert
4 U Nuts
4 #8-1¼" 6 Head Screws

Read and understand instructions before attempting installation

Step 1

Remove 6 plastic fasteners holding plastic shroud cover; then remove six factory screws on grill shell top. (1) Also remove the 2 plastic fasteners on grill shell. The grill shell should now be loose from core support. Using two objects, wedge the between the core support and grill shell to obtain access to grill backing.

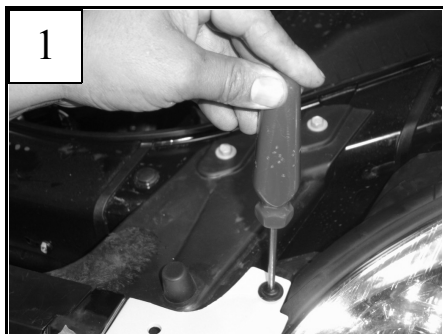

Step 2

Locate your billet grill insert and test fit. Holding the grill shell to vehicle; put a provided machine screw through front grille mount (2) and a steel retainer clip; mount the clip from the backside of grille on upper corner studs. (3) Do not tighten. Install screws and clips to the remaining grille mounts. Make sure grille is straight. Reinstall all factory parts described in step 1.

Thank you for purchasing your T-Rex billet grille. 8/30/07

