

T-REX

Billet Grilles

21474

05-08 DODGE
CHARGER (ALL)

21474

05-08 DODGE
CHARGER (ALL)

4 PC BILLET OVERLAY - POLISHED


Tools Required:

Philips Screwdriver

Hardware:

- 4 Billet Insert (19 bars)
- 8 6-32 x 2" Machine Screws
- 8 #8 U-Nuts Nuts
- 8 2" Flange Brackets

Read and understand instructions before attempting installation

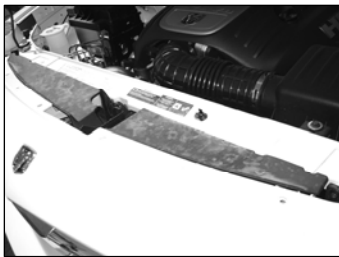

Step 1

Open the hood. Remove the two-piece plastic radiator covers in front of the core support. Each cover has metal press-in clips securing them in place. Pull up on the covers to remove them. This will allow access to the rear of the grille.



Step 2

Test fit the billets into grille. Insert a screw into the mounting tabs on the billets; slide the U-nuts onto the flange brackets. Start to thread the flange brackets onto the screws. Center one of the lower billets on the grille. Pull the flange brackets through the plastic bars on the factory grille. Use a screwdriver to tighten the hardware.



Step 3

Make sure the billets are centered. Loosen the hardware and adjust the billets if needed. Re-fasten the plastic radiator covers onto the vehicle.

Thank you for purchasing your T-Rex billet grille.

T-Rex Truck Products Inc. 7/29/05

