



21732

03-05 HONDA
PILOT SUV

21732

03-05 HONDA
PILOT SUV

BILLET OVERLAY

Tools Required:

Phillips Screwdriver
Pliers

Hardware / Parts Included:

- 1 Billet Insert (21 Bars Each)
- 4 1" 'J' Hooks
- 4 6-32 x 2" Machine Screws
- 4 6-32 Nylon Lock Nuts
- 4 #8 U-Nuts


Read and understand instructions before attempting installation

Step 1

Remove the radiator cover from the vehicle. Un-clip the fasteners holding the shell in place and remove the grille shell. Remove the factory emblem from the OE grille.

Step 2

Center the billet over the grille shell. Note the tabs welded to the rear of the insert. Remove the insert. Slide the U-nuts over the end of the 'J' hooks. From the front, insert a screw into each top tab on the billet insert. Start to thread both screws into the 'J' hooks (the top two only) as show below. Now place the billet insert over the opening. Wrap the ends of the 'J' hooks over the factory cross bar.

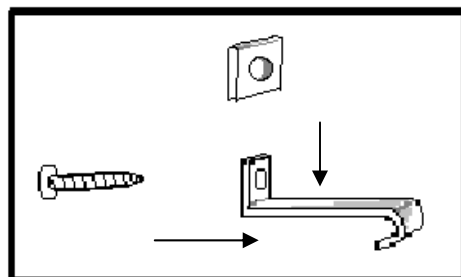

Step 3

Now insert a screw into the lower tabs on the insert. Carefully wrap each 'J' hook under the bottom factory cross bar and thread onto each screw. Tighten the hardware by hand. Make sure the insert is centered. Loosen the hardware and adjust if needed. Re-install the radiator cover and grille shell assembly onto the vehicle. Use a high quality double-sided tape if re-installing the emblem onto the vehicle. **T-Rex Billet Grilles 4/25/06**