

21734

09-10 HONDA RIDGELINE



21734

09-10 HONDA RIDGELINE

09-10 HONDA RIDGELINE


Billet Grille Overlay

TOOLS REQUIRED:

Phillips & Flat Screwdrivers
Socket and Ratchet Set

PARTS LIST

- (4) 6/32" Nylon Lock Nuts
- (4) 1 1/2" Screws
- (4) 2" Flange Brackets
- (2) #4 - 1" Screws
- (2) 1"x1" Extension Brackets
- (1) Billet Grille

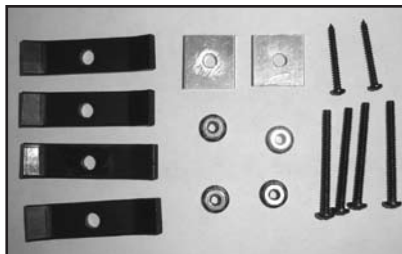

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at tech@trexbillet.com to verify fitment or assist with tech questions. All other inquiries can be directed to info@trexbillet.com. In the event you do not have internet access please call 1-800-287-5900.

Step 1 Factory Grill Removal

Remove the factory top radiator cover by removing the 13 plastic pop clips securing the top of the cover (note: 3 of the plastic pop clips are on the air intake) with a flat screwdriver. (Fig 1) Now you need to remove 6 plastic pop clips along the inside bottom of the factory grill. Reach through the slots below the grille (Fig 3) and remove the pop clips with a small flat screwdriver. Now the factory grill can be removed from the vehicle. (Fig 4)

Step 2 Billet Grille Installation

Remove the Honda logo from the factory grill. If you would like to reinstall the logo onto the billet grille do so now by placing the logo in the center of the billet grille, use the 1"x1" extension brackets (1"x1" square with a hole in the center) and the #4 - 1" screws on the backside of the billet to hold the logo in place. Now take the billet grille and center it into the factory grill shell. With the billet centered take the four 1 1/2" screws and insert them through the billets and the small brackets with holes in them that are welded onto the backside of the billet. On the backside of the billet install the four 2" flange brackets over the screws and put a 6/32" nylon lock nut on top and tighten. (Fig 5) Do this to all four screws. Reinstall the factory grill with the billet installed into the vehicle. Make sure to reinstall all 19 of the plastic pop clips, the intake, and the top radiator cover. Installation complete.



Fig 1



Fig 2



Fig 3



Fig 4

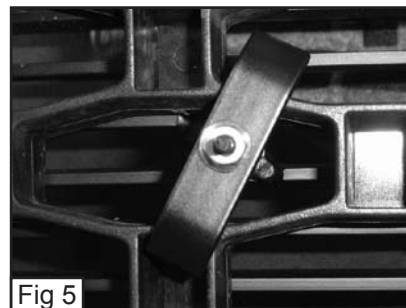


Fig 5