



21760

**05-08 NISSAN
PATHFINDER
& FRONTIER**

21760

**05-08 NISSAN
PATHFINDER
& FRONTIER**

**3 PC BILLET INSERT
05-08 NISSAN FRONTIER
05-07 NISSAN PATHFINDER**

Recommended Tools:

Phillips & Slotted Screwdrivers
5/16 Wrench or Nut-Driver


Parts List / Hardware:

3	Billet Insert (18, 17, 17 Bars)
10	6-32 x 1.5 Machine Screws
10	6-32 Nylon Lock Nuts
10	#6 Flat Washers
10	2" Flange Brackets

Read and understand instructions before attempting installation

NOTE: 2005 FRONTIER & PATHFINDER USE SAME GRILLE

Step 1

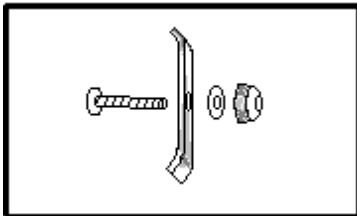

Remove the six fasteners holding the top of the grille in place. Pull the grille forward to access the mounting clips on each end; use a slotted screwdriver to unclip the two fasteners on each side. Now remove the grille by depressing the six clips holding the grille to the bumper cover. Use a heat gun or hair dryer to remove the OE logo from the factory grille.

Step 2

Take the center billet and install a machine screw into each mounting hole. Center it into the opening. From the back of the grille mesh, slide a flange bracket and washer onto each machine screw (see diagram). Thread the Nylon Lock nuts onto the screws by hand. Use a screwdriver and wrench to tighten the hardware. Do not over-tighten the hardware. Make sure the flanges wrap around the grille mesh.

Step 2

Test fit the side billets into each opening. Be sure not to scratch the chrome in the opening with the billet grilles. Repeat the process in Step 2. ***If you have purchased a bumper insert; install the bumper billet before the grille assembly is re-installed onto the vehicle.*** Re-install the factory grille assembly onto the vehicle. Use a high quality double sided tape if reinstalling the factory Nissan logo.

Thank you for purchasing your T-Rex billet grille. T-Rex Truck Products Inc. 7/5/05