

21761

08-12 NISSAN PATHFINDER



21761

08-12 NISSAN PATHFINDER

3 PC BILLET OVERLAY UPPER GRILLE


Recommended Tools:

Phillips / Slotted Screwdrivers
8mm Socket & Ratchet

Parts List / Hardware:

3 Billet Insert
8 6/32 Nylon Lock Nuts
8 2" Flange Bracket
8 1 ½" Machine Screws

Read and understand instructions before attempting installation

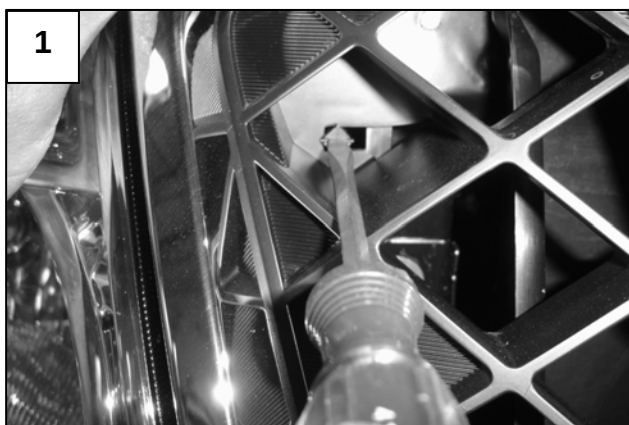

Step 1

Remove six plastic fasteners from the top plastic cover to allow access behind grille. Release four plastic clips from the bottom of the grill assembly. Release the clips that hold the outer grille shell. There are two on each side that use a flathead screw driver **(1)**. Remove the complete grille as one unit.



Step 2

Position your new center grille from the front the grille shell. With the grille on its side, place a machine screw through the face of the billet. Place a 2" flange brackets & 6-32 nylon lock nuts on the machine screw. Repeat on the three remaining. Do not tighten yet **(2)**. Check position of your new insert then tighten the hardware. Find a side billet grille insert and set it in from the front side. Carefully turn the grille shell on its side. From the front side of grille, place a machine screw through the face of the billet. Place a 2" flange brackets and a 6-32 nylon lock nuts on each screw. Center and tighten the grille **(2)**. Repeat on other side.

If you purchased a lower grille install now!

Step 3

Re-install your factory grille shell and enjoy.

Thank you for purchasing your T-Rex billet grille.10/08/07