

21782

08-12 NISSAN ARMADA BILLET OVERLAY



21782

08-12 NISSAN ARMADA BILLET OVERLAY

2008-12 NISSAN ARMADA 3 PC Billet Overlay


Tools Required:

Phillips / Slotted Screwdrivers
5/16" Wrench or Nut Driver

Hardware / Parts Included:

- | | |
|---------------------------------|-------------------|
| 1 Billet Insert (Center) | 8 #10 Washers |
| 2 Billet Inserts (Right & Left) | 8 1/2" L Brackets |
| 8 6-32 x 2 Machine Screws | |
| 8 6-32 Nylon Lock Nuts | |

Read and understand instructions before attempting installation

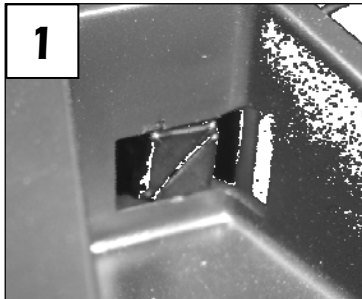

Step 1

Test fit the grilles in place. On top of the grille; use a small slotted screwdriver to release (1/4 turn) four plastic fasteners (1). Slightly pull the grille forward. Now release three clips along the bottom of the grille. Remove the grille. The side openings have plastic air shrouds held in place by molded clips. Remove the air shrouds. Use a heat gun or hair dryer to remove the OE logo from the factory grille.



Step 2

Install a machine screw into mounting holes welded to grilles. Place the center insert over the factory grille. Install an L bracket, washer and nut onto each screw. Wrap the brackets around the mesh (2). Tighten the hardware. Repeat this process on the side inserts.

Step 3

Re-install the logo with double-sided tape if desired. Re-install the air shrouds and grill assembly back onto the vehicle. ***Thank you for purchasing a T-Rex Billet Grille. 7/5/07***

