

25090

**06-11 CHEVY
HHR (ALL)
BUMPER iNSERT**



25090

**06-11 CHEVY
HHR (ALL)
BUMPER iNSERT**

2006-11 CHEVY HHR – BUMPER INSERT

Tools Required:

Phillip Screw Driver


Parts list:

- 1 Billet Insert (7 bars)
- 2 6-32 x 2" Machine Screws
- 2 #6 U-Nuts
- 2 5.5" Flange Bracket w/ ½" Offset Hole

Read and understand instructions before attempting installation

Step 1.

Open the hood; and test fit the bumper grille into the opening from the front.

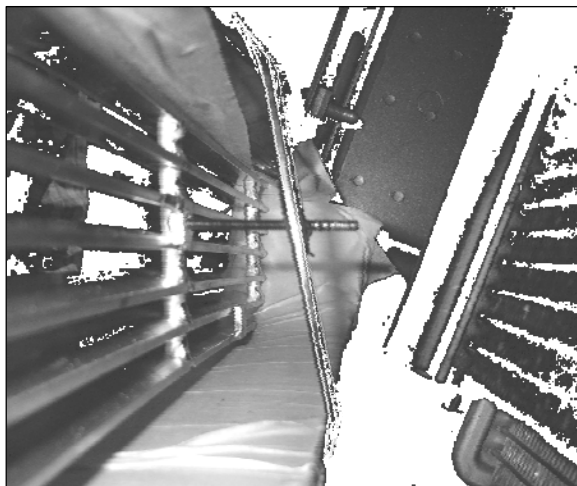

Step 2.

Test fit the grille in place. Slide a u-nut onto both C brackets. Insert a machine screw into the tabs on the grille. Center the grille in place; secure by tightening the flange brackets behind the bumper. Do not over-tighten the screws. *Thank you for purchasing a T-Rex billet grille. 1/16/06*