

25728
08-10 HONDA
ACCORD
BILLET INSERT



25728
08-10 HONDA
ACCORD
BILLET INSERT

08-10 HONDA ACCORD SEDAN
BILLET BUMPER INSERT – 1 PC

Tools Required:

Philips/Flathead Screw driver
5/16 Socket or Wrench


Hardware / Parts Included:

- 1 Billet Bumper Insert
- 2 6-32 x 1 1/2" Machine Screws
- 2 1/2" x 1/2" L Brackets
- 2 6-32 Nylon Lock Nuts

Read and understand instructions before attempting installation

Step 1

Remove the plastic fasteners holding the motor cover in place. Remove the Plastic grille insert from the bumper by releasing the clip on the perimeter of the grille.

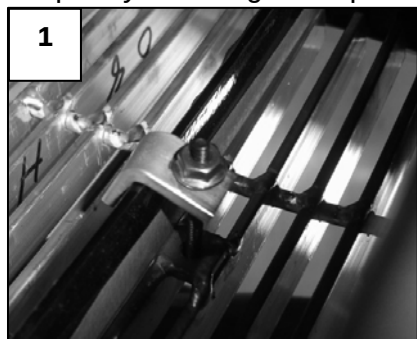

Install the bumper grille into bumper opening. Place a machine screw into the billet bracket. From the backside of the grille, place an L bracket and nylon lock nut onto each stud. Make sure that the L brackets wrap onto the bumper plastic (1). Making sure that the grille is centered, tighten the screws and securing the grille to the vehicle.

Step 2

Replace the grille. Replace the upper motor cover using the factory clips. Enjoy your new grille.

Thank you for purchasing a T-Rex Billet Grille. 04/07/08