

25731

03-05 HONDA

ACCORD
BUMPER INSERT



25731

03-05 HONDA

ACCORD
BUMPER INSERT

03-05 HONDA ACCORD 4 DOOR **BUMPER INSERT**

Tools Required:

Phillip Screw Driver
5/16" Wrench or Pliers


Hardware / Parts Included:

- 1 Billet Insert (10 Bars)
- 2 6-32 x 2 Machine Screws
- 2 6-32 Nylon Lock Nuts
- 2 #6 Flat Washers
- 2 1" "J" Hooks

Read and understand instructions before attempting installation

Step 1

Place a machine screw in each mount on the billet insert. Install a "J" hook from the back with a nylon lock nut and washer. Place the billet insert in the bumper opening.

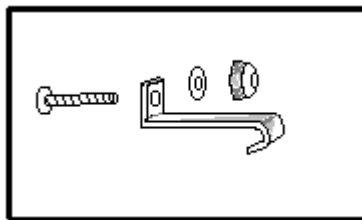

Step 2

Tighten the nuts down with the "J" hooks catching the rear edge of the bumper cover. Do not over tighten. *Thank you for purchasing a T-Rex Billet Grille. 1/28/04*