

25757
07-08 NISSAN
MAXIMA
BUMPER INSERT



25757
07-08 NISSAN
MAXIMA
BUMPER INSERT

2007-08 NISSAN MAXIMA
BUMPER INSERT

Tools Required:

Phillips Screwdriver


Hardware / Parts Included:

- 1 Billet Insert (11 Bars)
- 4 #8 x 1.5" Screws (#6 Head)
- 4 #8 U-Nuts
- 4 1.5" J Hooks

Read and understand instructions before attempting installation

Step 1

Test fit the grille in place. Open the hood and remove the factory plastic radiator cover and grille assembly. Now remove the factory grille shell; use a small screwdriver to pull the center from each fastener. Release the four molded clips along the bottom of the grille.

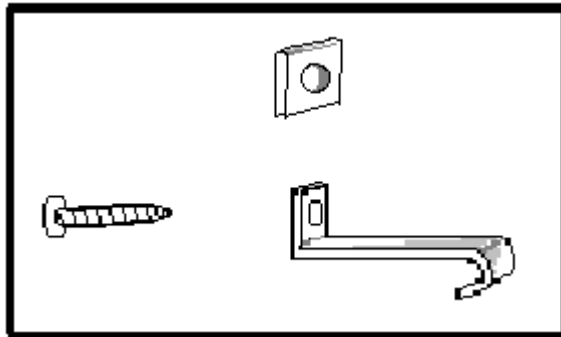

Step 2

Slide the u-nuts onto J hooks. Insert the screws into the tabs on the billet. Start to thread the J hooks onto the screws. Center the grille in place. Wrap the hooks around plastic bars in the openings. Use a Phillips screwdriver to tighten the hardware. Re-install the grille onto the vehicle.

Thank you for purchasing a T-Rex Billet Grille. 9/28/06