

25761

**08-12 NISSAN
PATHFINDER**



25761

**08-12 NISSAN
PATHFINDER**

1 PC BUMPER BILLET GRILLE


Recommended Tools:

Phillips / Slotted Screwdrivers
8mm Socket & Ratchet

Parts List / Hardware:


- 1 Billet Insert
- 2 6/32 Nylon Lock Nuts
- 2 1 ½" Machine Screw
- 2 ¾" J-Hooks

Read and understand instructions before attempting installation

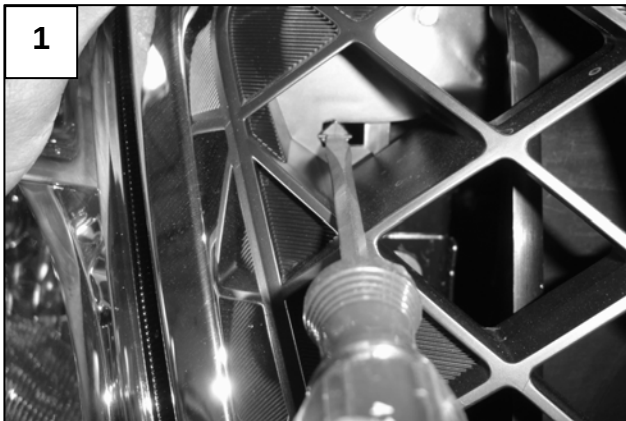

Step 1

Remove six plastic fasteners from the top plastic cover to allow access behind grille. Release four plastic clips from the bottom of the grill assembly. Release the clips that hold the outer grille shell. There are two on each side that use a flathead screw driver **(1)**. Remove the complete grille as one unit.

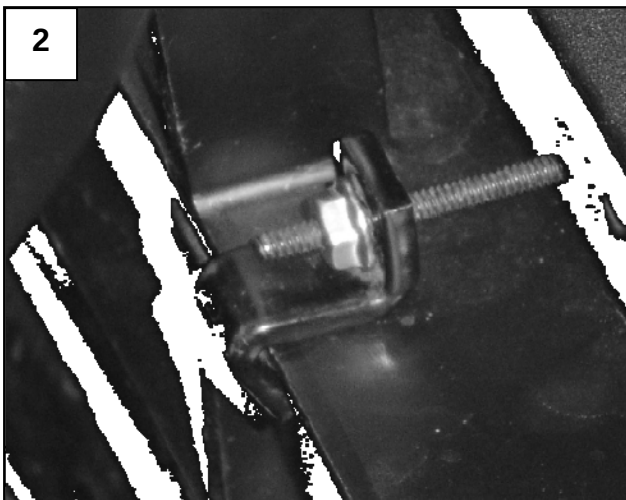

Step 2

Center the billet into the center of bumper. From the front side of the grille, place a machine screw into the bracket welded to the grille. From the backside of the grille, place a J-hook and a nylon lock nut on the machine screw. Holding the machine screw with a screw driver, tighten the nylon lock nuts securing the J-hooks to the factory grille **(2)**.

Step 3

Re-install your factory grille and enjoy.

Thank you for purchasing your T-Rex billet grille. 10/08/07