



25901

**05-07 TOYOTA
SEQUOIA**

25901

**05-07 TOYOTA
SEQUOIA**

BUMPER INSERT

Recommended Tools:

Phillips Screw Drivers
5/16 Wrench or Nut Driver


Parts List / Hardware:

1	Billet Insert (10 Bars)
2	#8 x 1 Screw (#6 Head)
2	#8 U-Nut
2	1.5" J Hooks

Read and understand instructions before attempting installation

Step 1

Insert a 1.5" machine screw into the tabs on the insert. Slide a J hook, washer and Nylock nut from the back of the insert (thread the nuts by hand). Center the billet over the bumper opening; wrap the J hooks around the plastic bars in the bumper opening. Use a screwdriver to snug the hardware down until the billet is held firmly in place.

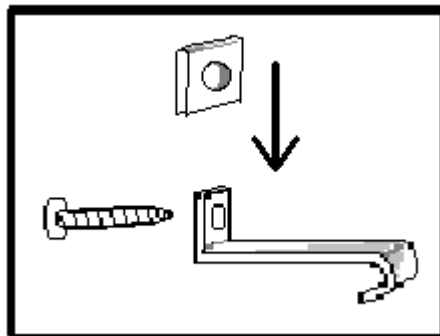

Thank you for purchasing your T-Rex billet grille. T-Rex Truck Products Inc. 1/4/05