

# T-REX TRUCK PRODUCTS INC.

## 30485

**06-08 JEEP**  
**COMMANDER**  
**BILLET INSERT**

## 30485

**06-08 JEEP**  
**COMMANDER**  
**BILLET INSERT**


### **Tools Required:**

Phillips and Slotted Screwdrivers  
Drill & 1/8" Drill Bit

### **Parts List:**

- 1 Billet Insert
- 8 #8 X 3/4" Screws
- 4 1/2" x 9 3/4" Flat Brackets

### **Read and understand instructions before attempting installation**

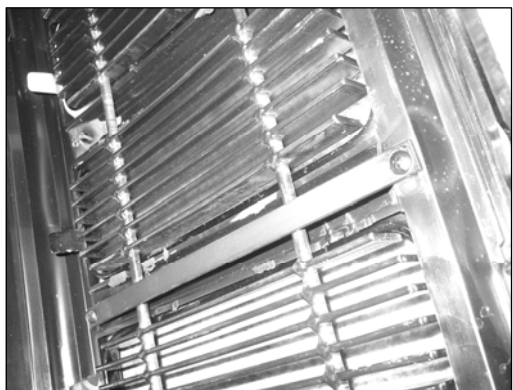

### **Step 1.**

Open the hood and remove the factory grille. Unclip the factory grille inserts from the grille. Test fit the billet insert into the grille. The picture shows how the brackets hold the billet in place.

### **Step 2.**

Center the grille and drill a 1/8" hole at each bracket. **Do not drill through the face of the grille.** Use the #8 screws to secure the billet in place. Do not over-tighten the hardware. Re-install the grille assembly back onto the vehicle.

***Thank you for purchasing a T-Rex Billet Grille. 11/18/05***

