



45927
2008 TOYOTA
PRIUS

45927
2008 TOYOTA
PRIUS

1 PC Sport Series

Recommended Tools:


Phillips Screw Drivers
8mm Socket/Wrench

Parts List / Hardware:

1	Sport Series Grille
10	Custom Threaded Hooks
10	½" x ½" L Brackets
10	6/32 Nylon Lock Nuts

Read and understand instructions before attempting installation

STEP 1: Read and understand all instructions before attempting the install of this grille. Be sure that the package of hardware matches the hardware list as listed above. Next, test fit the T-REX grille to the vehicles factory openings. You are now ready for the install:

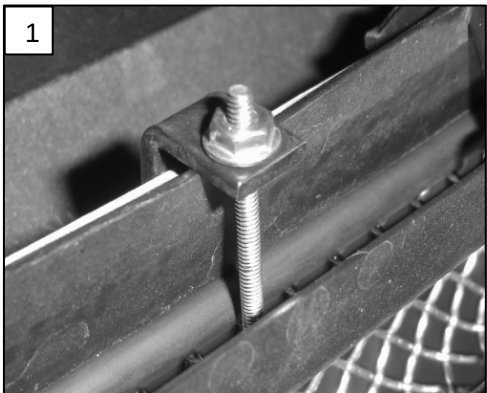

STEP 2: Open the hood of the vehicle. Remove the upper motor cover between the grille and core support. Remove the upper grille clips and hood stops. Insert the new grille into the factory bumper opening. From the backside of the grille; place the provided hook side to hold the mesh. While holding the hook around the mesh, place an L bracket and the nylon lock nut onto the threads. Make sure that the L bracket is wrapped around the edge of the factory grille. Tighten the hooks till snug (1). Place the rest of the hooks evenly around the grille and repeat the process. Making sure that the grille is centered, tighten all the hardware.

Thank you for purchasing your T-Rex billet grille. 09-02-08