

T-REX

Billet Grilles

51779
2008 NISSAN
TITAN

51779
2008 NISSAN
TITAN


Tools Required:

Small Slotted Screwdriver
8mm Socket or Nut Driver

Part List:


- 1 1pc Factory Replacement Grille
- 7 Plastic Screw Clips
- 7 #14X1" Hex Washer Head Screws
- 10 6/32 Nylon Lock Nuts
- 2 Grille Mounting Plates (Upper and Lower)

Read and understand instructions before attempting installation

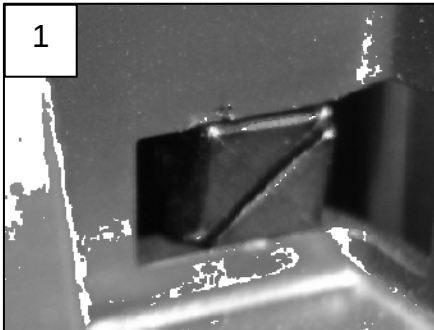


Step 1

Remove the factory grille from the truck. Use a small slotted screwdriver to un-clip the plastic clips. There are four along the top and three along the bottom [1]. Now remove the grille.
(If you purchased the lower grille; install now)

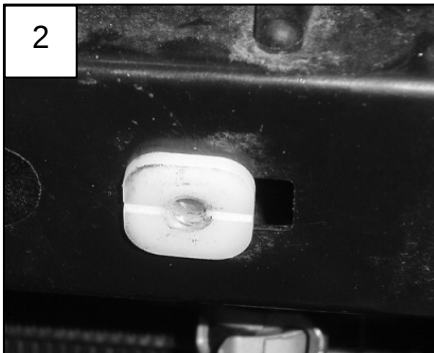

Step 2

Replace the factory clips with the provided screw clips as shown in picture [2]. These will line up with the upper and lower mounting plates.

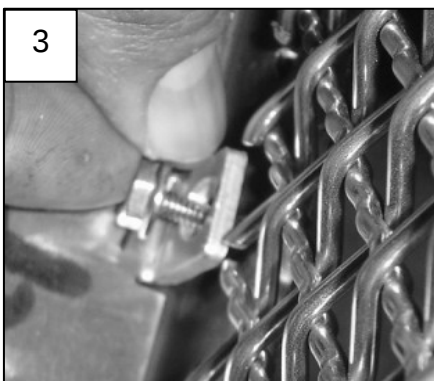

Step 3

Install the upper plate to new grille using the nylon lock nuts before continuing. Center the new lower plate into the grille opening. Using the provided screws; secure the plate to the vehicle. Center the rest of the grille into position. Align the studs to the lower edge of the grille with the holes in the lower plate. Place a nylon lock nut on each stud [3]. Center the grille and tighten. From the front; place the provided screws through the top plate and into the new clips. Making sure that the grille is centered, tighten the hardware.

Thank you for purchasing a T-REX Grille. 02/26/08

